Cummins Onan



Installation Manual

RV Generator Set

KY (Spec P-R)

California Proposition 65 Warning

The engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects, or other reproductive harm.

Table of Contents

1.	IMPORTANT SAFETY INSTRUCTIONS	1
	1.1 Overview	1 1
	1.3 General Safety Precautions	1
	1.4 Automatic Generator Start Control Hazards	3
	1.5 Electrical Shock and Arc Flash Can Cause Severe Personal Injury or Death	3
	1.6 Generator Voltage Is Deadly	3
	1.7 Engine Exhaust/Carbon Monoxide Is Deadly	4
	1.8 Fuel Is Flammable and Explosive	5
	1.9 Battery Gas Is Explosive	5
	1.10 Moving Parts Can Cause Severe Personal Injury or Death	5
	1.11 CARB	6
2.	INTRODUCTION	7
	2.1 About This Manual	7
	2.2 Related Literature	7
	2.3 Installation Codes and Standards for Safety	8
	2.4 Electromagnetic Compatibility Compliance	9
	2.5 Specifications	9
	2.5.1 Gasoline Model Specifications	9
	2.5.2 LPG Model Specifications	10
	2.6 List of Acronyms	11
3	LOCATION, MOUNTING, AND VENTILATION	15
٠.	3.1 Location	15
	3.1.1 Typical Generator Set Locations - Class A RV	16
	3.1.2 Typical Generator Set Locations - Class C RV	17
	3.1.3 Typical Generator Set Locations - Class B Van	17
	3.1.4 Typical Generator Set Locations - Pickup Truck Camper	18
	3.2 Mounting	18
	3.2.1 Below Floor Mounting	18
	3.2.2 Insulating Materials	18
	3.2.3 Fire and Exhaust Barriers	19
	3.3 Ventilation	19
	3.3.1 Air Recirculation	20
	3.3.2 Exhaust Cover	20
4.	EXHAUST CONNECTIONS	23
	4.1 Tailpipe Installation	23
	4.2 Vehicle Clearances - Class A RV	26
	4.3 Vehicle Clearances - Class B Van	27
	4.4 Vehicle Clearances - Pickup Truck Camper	27

5.	FUEL CONNECTIONS. 5.1 Gasoline Motorized. 5.1.1 Fuel Hoses. 5.1.2 Fuel Lines. 5.1.3 Routing Fuel Lines. 5.2 Gasoline Nonmotorized (EVAP) 5.2.1 Fuel Hoses. 5.2.2 Fuel Lines. 5.2.3 Routing Fuel Lines.	29 30 31 31 32 35 36
	5.2.4 Vapor and Fuel Return Line Requirements 5.2.5 Fuel Tank 5.2.6 Carbon Canister 5.2.7 Generator Set	36 36 38 38
6.	ELECTRICAL CONNECTIONS 6.1 AC Power Output Connections 6.1.1 Wiring Methods 6.1.2 Connecting to Shore Power 6.2 Remote Control Connections 6.3 Starting Battery Connections 6.3.1 Battery Compartment 6.3.2 Battery Cable Sizes 6.3.3 Battery Cables 6.3.4 Battery Cable Connections at the Generator Set 6.3.5 Generator Set (Equipment) Grounding Screw	43 43 44 45 46 47 47 47 49 50
7.	INSTALLATION REVIEW AND STARTUP 7.1 Installation Review 7.2 Startup 7.3 Hot Air Recirculation Test 7.3.1 Test Method 7.3.2 Test Results	51 51 52 52 53
ΑF	PPENDIX A. WIRING DIAGRAMSA.0 Wiring Diagram	55 57
AF	PPENDIX B. OUTLINE DRAWINGS B.0 Outline Drawing B.1 Outline Drawing - EVAP	59 61 62

1 Important Safety Instructions

1.1 Overview

Thoroughly read the Operator Manual before operating the generator set. It contains important instructions that should be followed during operation and maintenance. Safe operation and top performance can only be achieved when equipment is properly operated and maintained. The owners and operators of the generator set are solely responsible for its safe operation.

Generator set operation, maintenance, and installation must comply with all applicable local, state, and federal codes and regulations. Electricity, fuel, exhaust, moving parts, and batteries present hazards which can result in severe personal injury or death. Only trained and experienced personnel with knowledge of fuels, electricity, and machinery hazards should perform generator set installation or adjustment procedures; or remove, dismantle, or dispose of the generator set.

1.2 Warning, Caution, and Note Styles Used in This Manual

The following safety styles and symbols found throughout this manual indicate potentially hazardous conditions to the operator, service personnel, or equipment.

▲ DANGER

Indicates a hazardous situation that, if not avoided, will result in death or serious injury.

WARNING

Indicates a hazardous situation that, if not avoided, could result in death or serious injury.

⚠ CAUTION

Indicates a hazardous situation that, if not avoided, could result in minor or moderate injury.

NOTICE

Indicates information considered important, but not hazard-related (e.g., messages relating to property damage).

1.3 General Safety Precautions

⚠ WARNING

Operation of equipment is unsafe when mentally or physically fatigued. Do not operate equipment in this condition, or after consuming any alcohol or drug.

↑ WARNING

Maintaining or installing a generator set can cause severe personal injury. Wear personal protective equipment such as safety glasses, protective gloves, hard hats, steel-toed boots, and protective clothing when working on equipment.

⚠ WARNING

Running the generator set without the cover or service door can cause severe personal injury or equipment damage. Do not operate the generator set with the cover or service doors removed.

⚠ WARNING

Starting fluids, such as ether, can cause explosion and generator set engine damage. Do not use.

⚠ WARNING

Benzene, found in some fuels, has been identified by some state and federal agencies to cause cancer or reproductive toxicity. Do not ingest, breathe the fumes, or contact gasoline when checking, draining, or adding gasoline.

WARNING

Used engine oils have been identified by some state and federal agencies to cause cancer or reproductive toxicity. Do not ingest, breathe the fumes, or contact used oil when checking or changing engine oil.

⚠ CAUTION

To prevent accidental or remote starting while working on the generator set, disconnect the negative (-) battery cable at the battery using an insulated wrench.

⚠ CAUTION

Unsecured or loose fasteners can cause equipment damage. Make sure all fasteners are secure and properly torqued.

⚠ CAUTION

Oily rags and other material can cause fire and restrict cooling. Keep the generator set, drip pan, and compartment clean.

⚠ CAUTION

Accumulated grease and oil can cause overheating and engine damage presenting a potential fire hazard. Keep the generator set clean and repair any oil leaks promptly.

NOTICE

Keep multi-class ABC fire extinguishers handy. Class A fires involve ordinary combustible materials such as wood and cloth. Class B fires involve combustible and flammable liquid fuels and gaseous fuels. Class C fires involve live electrical equipment. (Refer to NFPA No. 10 in applicable region.)

1.4 Automatic Generator Start Control Hazards

⚠ WARNING

Accidental starting can cause severe personal injury or death. Turn off the AGS whenever performing maintenance or service, when the vehicle is stored between uses, is awaiting service, or is parked in a garage or other confined area.

Unexpected starting may occur if the generator set is equipped with an inverter-charger or other Automatic Generator Start (AGS) control. This may cause exposure to:

- Unexpected generator starting
- · Moving parts hazards
- · Electric shock
- Exhaust carbon monoxide (CO)

1.5 Electrical Shock and Arc Flash Can Cause Severe Personal Injury or Death

WARNING

Electrical shocks and arc flashes can cause severe personal injury or death. Adhere to the following guidelines:

- Only qualified service personnel certified and authorized to work on power circuits should work on exposed energized power circuits.
- All relevant service material must be available for any electrical work performed by certified service personnel.
- Exposure to energized power circuits with potentials of 50 VAC or 75 VDC or higher poses a significant risk of electrical shock and electrical arc flash.
- Refer to standard NFPA 70E, or equivalent safety standards in corresponding regions, for details of the dangers involved and for safety requirements.

1.6 Generator Voltage Is Deadly

⚠ WARNING

Improperly connected generator electrical output connections can cause equipment damage, severe personal injury, or death. Electrical connections must be made by a trained and experienced electrician in accordance with applicable codes.

⚠ WARNING

Improper installations can cause equipment damage, severe personal injury, or death. All installations must be conducted by trained and experienced personnel in accordance with the installation instructions and all applicable codes.

⚠ WARNING

Back feed to shore power can cause electrocution and damage to equipment. The generator set must not be connected to shore power or to any other source of electrical power. An approved switching device must be used to prevent interconnections.

⚠ WARNING

Live electrical equipment can cause electrocution. Use caution when working on live electrical equipment. Remove jewelry, make sure clothing and shoes are dry, stand on a dry wooden platform or rubber insulating mat, and use tools with insulated handles.

1.7 Engine Exhaust/Carbon Monoxide Is Deadly

WARNING

Substances in exhaust gases have been identified by some state and federal agencies to cause cancer or reproductive toxicity. Do not breathe in or come into contact with exhaust gases.

⚠ WARNING

Carbon monoxide is a poisonous gas. Inhalation of this gas can cause severe personal injury or death. Adhere to the following bullet points to make sure carbon monoxide is not being inhaled by occupants of the vehicle as well as others working on or around the generator set.

- Inspect for exhaust leaks, and test and confirm that all carbon monoxide detectors are working in accordance with the manufacturer's instructions or owner's manual, prior to every startup, and after every 8 hours of running.
- Never occupy the vehicle while the generator set is running unless the vehicle is equipped with a working carbon monoxide detector.
- Never operate the generator set when the vehicle is in a confined space, such as a garage, basement, or building of any kind.
- Make sure the exhaust system is installed in accordance with the generator set installation manual.
- · Never use engine cooling air for heating a working or living space compartment.

Carbon Monoxide (CO) is odorless, colorless, tasteless, and non-irritating. It cannot be seen or smelled. Exposure, even to low levels of CO for a prolonged period can lead to asphyxiation (lack of oxygen).

Mild effects of CO poisoning include:

- headache
- dizziness
- drowsiness
- · fatigue
- · chest pain
- · confusion

More extreme symptoms include:

- vomiting
- seizure

· loss of consciousness

1.8 Fuel Is Flammable and Explosive

⚠ WARNING

Fuel and fuel vapor is highly explosive. Adhere to the following bullets to avoid igniting fuel and fuel vapors.

- Do not smoke or turn electrical switches on or off where fuel fumes are present or in areas sharing ventilation with fuel tanks or equipment.
- Keep flame, sparks, pilot lights, arc-producing equipment and all other sources of ignition well away from fuel lines and sources.
- · Fuel lines must be secured, free of leaks, and separated or shielded from electrical wiring.

Leaks can lead to explosive accumulations of gas.

 LPG sinks when released and can accumulate inside housings and basements and other belowgrade spaces.

NOTICE

Natural gas is identifiable by a rotten egg smell.

1.9 Battery Gas Is Explosive

WARNING

Battery gas is highly explosive and may cause personal injury or death if ignited. Take the proper precautions to avoid personal injury.

- For personal safety, wear appropriate PPE when working on or around the generator set.
- To make sure battery gas is not ignited, do not smoke around the generator set.
- To reduce arcing when disconnecting or reconnecting battery cables, always disconnect the negative (–) battery cable first and reconnect it last.

1.10 Moving Parts Can Cause Severe Personal Injury or Death

⚠ WARNING

Moving parts can cause severe personal injury or death, and hot exhaust parts can cause severe burns. Make sure all protective guards are properly in place before starting the generator set.

⚠ WARNING

Hot moving, and electrically live parts can cause severe personal injury or death. Keep children away from the generator set.

⚠ WARNING

Hot, moving, and electrically live parts can cause severe personal injury or death. Only trained and experienced personnel should make adjustments while the generator set is running.

⚠ WARNING

Moving parts can catch on loose items such as clothing or jewelry. Do not wear loose clothing or jewelry near moving parts such as PTO (power take-off) shafts, fans, belts, and pulleys.

⚠ WARNING

Moving parts can entangle appendages such as fingers. Keep the protective guards in place over fans, belts, pulleys, and other moving parts and keep hands away from all moving parts.

1.11 CARB

A CAUTION

Unauthorized modifications or replacement of fuel, exhaust, air intake, or speed control system components that affect engine emissions are prohibited by law in the state of California.

The California Air Resources Board (CARB) has requirements regarding modification & repair of fuel system & exhaust components including, but not limited to, adherence to evaporative emissions requirements in mobile installations. Evaporative generator sets must be used in trailers, fifth wheel trailers, and other non-motorized vehicles where on-board gasoline fuel storage is self-contained in the trailer equipment. Completing the installation of the generator set fuel evaporative system provides compliance with the California code of regulations for small off-road equipment effective January 1, 2008 and Federal Small SI regulation effective January 1, 2011. Any questions regarding the installation or evaporative emission certification should be directed to Cummins Power Generation for clarification.

2 Introduction

2.1 About This Manual

This manual is a guide for the installation of the generator sets listed on the front cover. Proper installation is essential for top performance. Read through this manual before starting the installation. Leave this manual in the vehicle.

The installer must be qualified to perform installation of electrical and mechanical equipment.

This manual addresses the following aspects of the installation:

- · Location, Mounting, and Ventilation
- · Exhaust Connections
- · Fuel Connections
- · Electrical Connections
- Startup

See the Operator Manual for operation and maintenance and the Service Manual for service.

The information contained within the manual is based on information available at the time of printing. In line with Cummins Power Generation policy of continuous development and improvement, information may change at any time without notice. The users should therefore make sure that before commencing any work, they have the latest information available. The latest version of this manual is available on QuickServe Online (https://quickserve.cummins.com).

2.2 Related Literature

Before any attempt is made to operate the generator set, the operator should take time to read all of the manuals supplied with the generator set, and to familiarize themselves with the warnings and operating procedures.

⚠ CAUTION

A generator set must be operated and maintained properly if you are to expect safe and reliable operation. The Operator manual includes a maintenance schedule and a troubleshooting guide. The Health and Safety manual must be read in conjunction with this manual for the safe operation of the generator set:

• Health and Safety Manual (0908-0110)

The relevant manuals appropriate to your generator set are also available, the documents below are in English:

- Operator Manual for RV Generator Set KY (Spec P-R) (A041D131)
- Installation Manual for RV Generator Set KY (Spec P-R) (A041D129)
- Generator Set Service Manual for RV Generator Set KY (Spec P-R) (A041D133)
- Recommended Spares List (RSL) for RV Generator Set KY (Spec P-R) (A043Y023)
- Parts Manual for RV Generator Set KY (Spec P-R) (0981-0246)
- Standard Repair Times AF Family (0900-0606)

2. Introduction 3-2017

- Service Tool Manual (A043D529)
- Failure Code Manual (F1115C)
- Warranty Manual (A040W374)
- Global Commercial Warranty Statement (A028U870)

2.3 Installation Codes and Standards for Safety

⚠ CAUTION

The Commercial Generator Set Warranty applies only when the generator set is installed in a commercial or recreational vehicle. The RV Generator Set Warranty applies only when the generator set is installed in a recreational vehicle.

The installer bears sole responsibility for the selection of the appropriate generator set, for its proper installation, and for obtaining approvals from the authorities (if any) having jurisdiction over the installation. The generator sets meet the basic requirements of the Standard for Safety for Engine Generator Sets for Recreational Vehicles, ANSI/RVIA EGS-1 and are suitable for installation in accordance with:

- ANSI A1192 (NFPA No. 501C)—Recreational Vehicles
- NFPA No. 70, Article 551—Recreational Vehicles and RV Parks
- CSA Electrical Bulletin 946—Requirements for Internal Combustion Engine-Driven Electric Generators for Use in Recreational Vehicles

Federal, state, and local codes, such as the California Administrative Code—Title 25 (RV installation), might also be applicable. Installation codes and recommendations can change from time-to-time and are different in different countries, states, and municipalities. Obtain the standards listed in the table below for reference.

TABLE 1. REFERENCE CODES AND STANDARDS

Code of Federal Regulations, Title 49: Chapter III and Chapter V	Superintendent of Documents P. O. Box 371954 Pittsburgh, PA 15250-7954	
NFPA 58, 70, 1192	National Fire Protection Association 470 Atlantic Avenue Boston, MA 02210	
ANSI/RVIA-EGS-1	Recreational Vehicle Industry Association 14650 Lee Road Chantily, VA 22021	
California Administrative Code—Title 25, Chapter 3	State of California Documents Section P.O. Box 1015 North Highlands, CA 95660	
CAN/CSA-Z240 Recreational Vehicles Bulletin 946	Canadian Standards Association Housing and Construction Materials Section 178 Rexdale Blvd. Rexdale, Ontario, Canada M9W 1R3	

3-2017 2. Introduction

SAE J1231, J1508, J2044, J2599	SAE World Headquarters 400 Commonwealth Drive Warrendale, PA 15096
-----------------------------------	--

2.4 Electromagnetic Compatibility Compliance

Generator sets emit and receive electromagnetic (radio frequency) energy. If the generator set affects operation of nearby devices, or nearby devices affect generator set operation, increase the distance between them.

When used in countries where compliance to the EMC directive is required: This generator set has been evaluated for use in the residential, commercial, and light industrial environments.

2.5 Specifications

2.5.1 Gasoline Model Specifications

TABLE 2. GASOLINE MODEL SPECIFICATIONS

	4.0 KY	3.6 KY		
GENERATOR: 2-Pole Revolving Field, Self-Excited, 1-Phase, Microprocessor Regulated				
Power	4000 Watts	3600 Watts		
Frequency ¹	60 Hz	50 Hz		
Voltage	120 Volts	230 Volts		
Current	33.3 Amps	15.7 Amps		
Speed	3600 RPM	3000 RPM		
FUEL CONSUMPTION:				
No Load	1.1 l/h (0.29 gph)	0.79 l/h (0.21 gph)		
Half Load	1.8 l/h (0.48 gph)	1.4 l/h (0.37 gph)		
Fuel Load	2.7 l/h (0.71 gph)	2.2 l/h (0.58 gph)		
ENGINE: 1-Cylinder, 4-Cyle, Spark Ignite	ed, OHV, Air-Cooled, Mechanically Govern	ned		
Bore	79 mm	79 mm (3.11 in)		
Stroke	62 mm	62 mm (2.44 in)		
Displacement 304 cm³ (18.5 in³)		(18.5 in³)		
Compression Ratio 8.5 : 1		5:1		
Oil Capacity 1.5 liters (1.6 qt)		s (1.6 qt)		
Intake Valve Lash (Cold) 0.05 mm (0.002 in)		(0.002 in)		
Exhaust Valve Lash (Cold)	0.05 mm (0.002 in)			
Spark Plug Gap	0.64 mm	0.64 mm (0.025 in)		
Spark Plug Torque	17 Nm (13 ft-lbs)			

2. Introduction 3-2017

	4.0 KY	3.6 KY
Ignition Timing	25° BTDC, non-adjustable	
Magneto Air Gap	0.23–0.38 mm ((0.009–0.015 in)
Compression	3.9 kgf/cm² (55.47	lbf/in²) @ 500 RPM
DC SYSTEM:		
Battery Voltage	12 \	/olts
Minimum Battery Rating	450 CCA @	–18 °C (0 °F)
INSTALLATION:		
Exhaust O. D.	28.7 mm (1.13 in)	
Fuel Connection	1/4 inch barb fitting	g for gasoline hose
Minimum Free Air Inlet Area 258 cm² (40 in²)		
Muffler Outlet Collar O.D.	1.13 in	
Weight (with engine oil)	81 kg (178 lbs) 84 kg (184 lbs)	
Minimum Compartment Size (H x D x W) ²	ent Size (H x D x W) ² 366 x 508 x 775 mm (14.4 x 20 x 30.5 in)	

2.5.2 LPG Model Specifications

TABLE 3. LPG MODEL SPECIFICATIONS

	3.6 KY	3.3 KY	
GENERATOR: 2-Pole Revolving Field, Self-Excited, 1-Phase, Microprocessor Regulated			
Power	3600 Watts	3300 Watts	
Frequency ¹	60 Hz	50 Hz	
Voltage	120 Volts	230 Volts	
Current	30 Amps	14.3 Amps	
Speed	3600 RPM	3000 RPM	
FUEL CONSUMPTION:			
No Load	0.7 kg/h (1.5 lbs/h)	0.5 kg/h (1.1 lbs/h)	
Half Load	1.0 kg/h (2.2 lbs/h)	0.9 kg/h (2.0 lbs/h)	
Full Load	1.5 kg/h (3.3 lbs/h)	1.3 kg/h (2.9 lbs/h)	
ENGINE: 1-Cylinder, 4-Cycle, Spark Ignited, O	HV, Air-Cooled, Mechanically Gover	rned	
Bore	79 mm (3.11 in)		
Stroke	62 mm (2.44 in)		
Displacement	304 cm³ (18.5 in³)		
Compression Ratio	8.5 : 1		

3-2017 2. Introduction

	3.6 KY	3.3 KY
Oil Capacity	1.5 liters (1.6 qt)	
Intake Valve Lash (Cold)	0.05 mm	(0.002 in)
Exhaust Valve Lash (Cold)	0.05 mm	(0.002 in)
Spark Plug Gap	0.51 mm	(0.020 in)
Spark Plug Torque	17 Nm (13 ft-lbs)
Ignition Timing	25° BTDC, n	on-adjustable
Magneto Air Gap	0.23–0.38 mm	(0.009–0.015 in)
Compression	3.9 kgf/cm ² (55.47	lbf/in²) @ 500 RPM
DC SYSTEM:		
Battery Voltage	12 Volts	
Minimum Battery Rating	450 CCA @ -18 °C (0 °F)	
INSTALLATION:		
Exhaust O. D.	28.7 mm	ı (1.13 in)
Fuel Connection 5/8-18 UNC, SAE 45° Flare Fitting		E 45° Flare Fitting
Minimum Free Air Inlet Area	258 cm	² (40 in²)
Muffler Outlet Collar O.D.	1.1	3 in
LPG Vapor Supply Pressure	Pressure 228–330 mm (9–13 in) WC	
LPG Liquid Connection Pressure	1/4-18 NPTF Tank Pressure	
Weight	81 kg (178 lbs)	84 kg (184 lbs
Minimum Compartment Size (H x D x W) ²	366 x 508 x 775 mm (14.4 x 20 x 30.5 in)	

^{2.} See the Installation Manual for additional considerations when sizing the generator set compartment.

2.6 List of Acronyms

TABLE 4. ACRONYM DEFINITIONS

Acronym	Definition	
AC	Alternating Current	
AGS	Automatic Generator Start	
AISI	American Iron and Steel Institute	
ANSI	American National Standards Institute	
API	American Petroleum Institute	
ASTM	American Society for Testing and Materials (now known as ASTM International)	
BS	Build Standard	

2. Introduction 3-2017

Acronym	Definition
BTDC	Before Top Dead Center
CARB	California Air Resources Board
CCA	Cold Cranking Amp
CFR	Code of Federal Regulations
СО	Carbon Monoxide
CPG	Cummins Power Generation
CSA	Canadian Standards Association
DC	Direct Current
EEPROM	Electronically Erasable Programmable Read Only Memory
EMC	Electromagnetic Compatibility
EPA	Environmental Protection Agency
GFCI	Grounded Fault Circuit Interrupters
hp	High Pressure
I.D.	Inside Diameter
ISO	International Organization for Standardization
LED	Light-emitting Diode
LPG	Liquid Petroleum Gas
NFPA	National Fire Protection Agency
NPTF	National Pipe Taper Fuel
O.D.	Outside Diameter
OEM	Original Equipment Manufacturer
PPE	Personal Protective Equipment
PTO	Power Take-Off
RAM	Random Access Memory
ROM	Read Only Memory
RV	Recreational Vehicle
RVIA	RV Industry Association
SAE	Society of Automotive Engineers
UNC	Unified National Coarse
US, U.S.	United States
WC	Water Column

3-2017 2. Introduction

TABLE 5. ACRONYMS FOR UNITS OF MEASUREMENT

Acronym	Definition
Amp	Ampere
С	Celsius
cm	centimeter
D	Depth
F	Fahrenheit
ft	Feet, foot
ft-lbs	Foot-pounds
g	gram
gph	Gallons per hour
Н	Height
Hz	Hertz
in	Inch
kg	kilogram
kg/h	kilograms per hour
kgf/cm ²	kilogram-force per square centimeter
kW	kilowatt
l/h	Liters per hour
lb	Pound
lbf/in² OR psi	Pound per square inch
lbs/h	Pounds per hour
m	Meter
mm	millimeter
Nm	Newton meter
psi OR lbf/in²	Pounds per square inch
qt	Quart
RPM	Revolutions per Minute
VAC	Volts Alternating Current
VDC	Volts Direct Current
W	Watts, Width

2. Introduction 3-2017

This page is intentionally blank.

3 Location, Mounting, and Ventilation

The location, mounting, and ventilation of a generator set must be such that mounting is secure, engine exhaust and fuel vapors are prevented from entering the vehicle, rain and road debris are prevented from entering the generator set, and ready access is afforded for operating the generator set and performing periodic maintenance.

3.1 Location

Typical locations for generator set installation are shown below.

- The location must provide:
 - Ready access for starting and stopping the generator set and performing all periodic maintenance.
 - Separation from sources of flammable vapors, such as batteries and fuel tanks, which the generator set could ignite.
 - Access for connecting and disconnecting fuel lines, battery cables, remote control wiring, and AC wiring.
 - Access to single fuel pump screw after removal of control board through service door.
 - Access from below for draining engine oil.
 - Unobstructed space below the generator set for proper cooling air flow.
- The generator set must not share a compartment or ventilation with batteries or fuel tanks. An operating generator set can ignite flammable vapors. Make sure that in the first 305 mm (12 in) of ground clearance there is at least 152.4 mm (6 in) of unobstructed space below the generator set and open on at least three sides, which is required for proper cooling air flow.
- Locate or shield the generator set cooling air openings from direct rain, road splash and debris thrown up by the road wheels.

NOTICE

Mudflaps, air ducts, and deflectors must be used to prevent road debris and tire spray from going into the generator set.

- The generator set housing is not rain proof. If the generator set is installed where snow and rain will hit the top of the generator set, a sheet metal or plastic cover should be used to prevent large amounts of water from running in the seams of the generator set housing.
- Space to mount the generator set with at least 25.4 mm (1 in) clearance on the left side, 25.4 mm (1 in) clearance at the top, 38.1 mm (1.5 in) clearance in front, and 6.35 mm (1/4 in) clearance on the remaining sides of the generator set. Minimum clearances apply to any thermal or acoustic insulation with which a compartment may be lined.

NOTICE

For rooftop or other high acceleration locations:

Certain locations for generator set installations can result in 30+ g forces affecting the generator set. These high road input forces can cause generator set performance issues, from rough running or stalling to many different types of broken generator set components. It is highly recommended that the generator set not be located more than 1.524 m (5 ft) above the floor and aft of the rear axle(s) on a trailer or motorized application.

Damage due to high road input forces (as follows) will not be covered under warranty:

- · Broken generator mounts
- · Broken exhaust components
- · Damaged housings or shrouds from excessive internal generator set component movement
- · Torn out wiring harnesses
- · Stalling or rough running while the vehicle is in motion

Locating the generator set in these limited access areas also affects proper maintenance. Major engine damage due to lack of maintenance will not be covered under warranty.

3.1.1 Typical Generator Set Locations - Class A RV

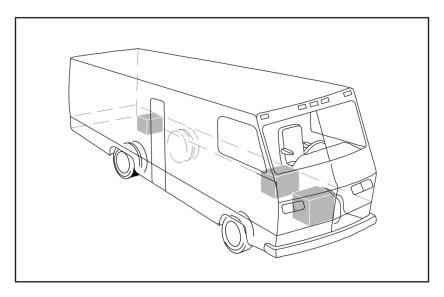


FIGURE 1. TYPICAL GENERATOR SET LOCATIONS - CLASS A RV

3.1.2 Typical Generator Set Locations - Class C RV

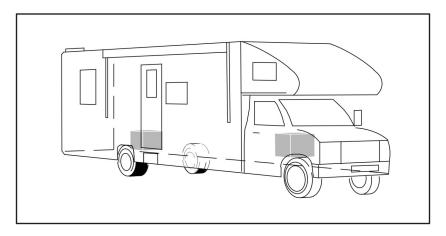


FIGURE 2. TYPICAL GENERATOR SET LOCATIONS - CLASS C RV

3.1.3 Typical Generator Set Locations - Class B Van

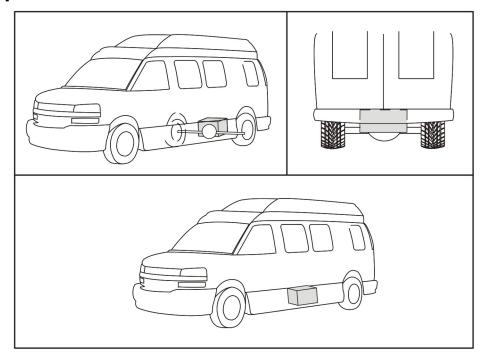


FIGURE 3. TYPICAL GENERATOR SET LOCATIONS - CLASS B VAN

3.1.4 Typical Generator Set Locations - Pickup Truck Camper

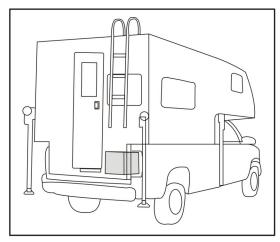


FIGURE 4. TYPICAL GENERATOR SET LOCATIONS - PICKUP TRUCK CAMPER

3.2 Mounting

⚠ WARNING

The generator set support structure must be designed and installed to support and restrain the dynamic weight of the generator set. Failure to do so can result in the generator set dropping onto the roadway causing property damage, severe personal injury, or death.

Support the generator set on a structure able to resist the dynamic weight of the generator set: ± 3 g-force vertical and ± 1 g-force horizontal. See Section 2.5 on page 9 for the weight of the generator set. See the outline drawings in Appendix B on page 59 for mounting bolt hole locations.

TABLE 6. MOUNTING SCREWS

Quantity	Туре	Torque
6	5/16-18 NC bolts	26 Nm (20 ft-lbs)

3.2.1 Below Floor Mounting

Mounting kits are available for below floor mounting. Follow the instructions in the kit.

Do not mount the generator set within the approach or departure angles of the vehicle or below the axle line. Refer to Exhaust Connections (Vehicle Clearances - Class A RV).

3.2.2 Insulating Materials

Acoustic/thermal insulation and adhesive must be classified as "Self-Extinguishing" at not less than 90 °C (200 °F). Do not line the bottom of a compartment with insulation since it absorbs fuel and oil.

3.2.3 Fire and Exhaust Barriers

⚠ WARNING

Exhaust gas and fire are deadly! Install a vapor-tight and fire-resistant barrier of approved materials between the generator set and the vehicle interior. Do not duct generator set cooling air into the vehicle for heating.

- Barriers to provide vapor and fire resistance must be installed between the generator set and the interior of the vehicle if the generator set is mounted below the floor.
- If the generator set is mounted in a compartment on the floor of the vehicle, the entire compartment must be lined with vapor and fire resistive materials.
- Use approved materials (26 gauge galvanized steel or equivalent). See NFPA 1192 for details. Refer to local codes and standards for additional information.
- All seams and openings in the barriers for wiring, mounting screws, etc. must be sealed.

3.3 Ventilation

Generator set cooling air must not be obstructed.

- A free-air inlet size of at least 258 cm² (40 in²) is required. Grilles, louvers, and other kinds of decorative treatments for air openings are restrictive. Contact the manufacturer of the decorative assembly or material to find out how large of an opening is required to obtain the minimum free-air inlet size.
- Unless the compartment air inlet lines up directly with the generator set air inlet, a clearance of at least 50.8 mm (2 in) is required at the front of the generator set for air to get to the generator set inlet. Staggering a compartment side opening or pulling the air up under the skirt of the vehicle will reduce line-of-sight noise but requires the extra clearance in front.

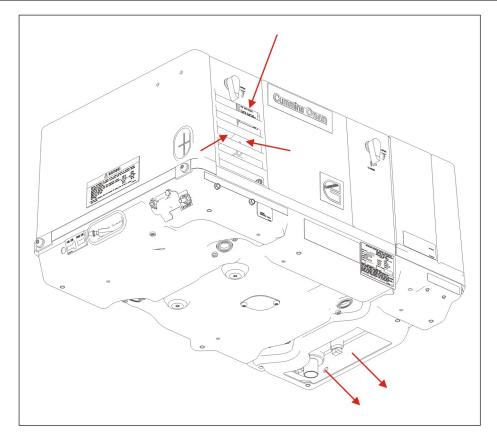


FIGURE 5. GENERATOR SET COOLING AIR INLET AND OUTLET

3.3.1 Air Recirculation

The generator set draws all of the cooling air in and out of the bottom. As such, the cool air intake and hot air discharge are very close to each other. Care must be taken with all installations to make certain that the hot air flowing out is not drawn into the cool air intake.

An air recirculation test is required for every unique installation.

3.3.2 Exhaust Cover

When the generator set is installed in a compartment, cover the exhaust cutout holes with sheet metal covers. There are 3 cutouts, one in the front, one on the side, and one in the rear. All of them should be covered to make certain hot air does not enter the compartment. The cover can be extended under the bottom of the generator set if needed. Self drilling screws can be used in the aluminum base.

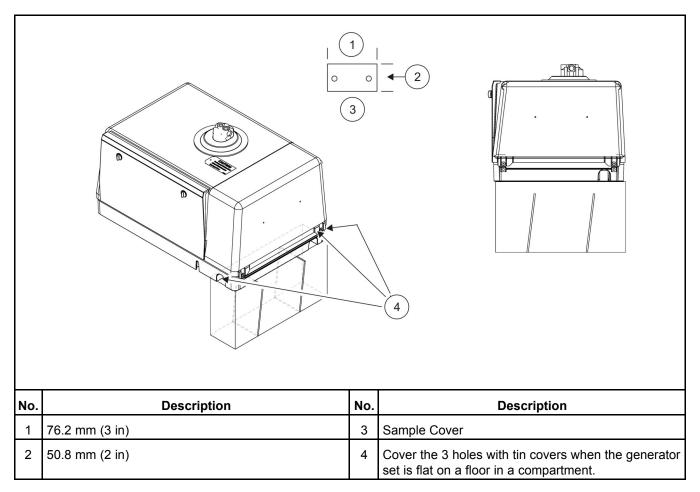


FIGURE 6. EXHAUST COVER

Four-inch riser legs and a sheet metal wrap around skirt are effective at isolating the hot and cool air openings. This configuration allows cool air to enter the side of the compartment and discharge out the bottom through a hole in the floor. The minimum clearance for air flow and to access the oil filter is 101.6 mm (4 in) with this installation method. The 101.6 mm (4 in) risers are used to provide this clearance and a wrap around skirt is used to allow air to enter the door and discharge out through the floor.

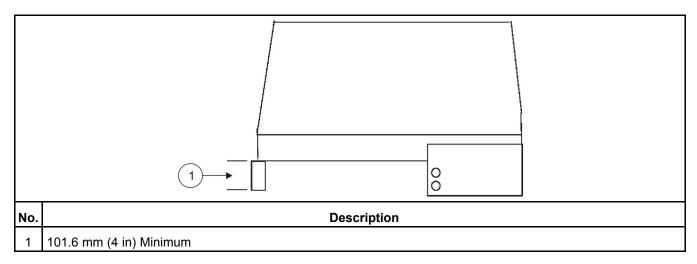


FIGURE 7. WRAP AROUND SKIRT

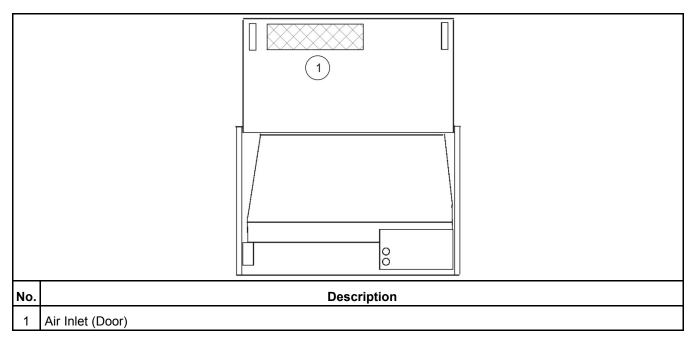


FIGURE 8. SIDE AIR INTAKE AND BOTTOM AIR DISCHARGE

4 Exhaust Connections

⚠ WARNING

This product incorporates a catalyst exhaust system which leads to higher exhaust gas temperatures. The installer must review and follow all guidelines for the installation. Care must be taken to make sure that all installation requirements in this entire manual are met.

The generator set is equipped with a U.S. Forest Service approved spark-arrest muffler. Failure to provide and maintain a spark arrester can be a violation of the law. Liability for damage, injury, and warranty expense due to the modification of the exhaust system or the use of unapproved parts is the responsibility of the person performing the modification or installing the unapproved exhaust system parts.

⚠ WARNING

EXHAUST GAS IS DEADLY! To keep exhaust gases from entering the vehicle do not terminate the exhaust tailpipe underneath the vehicle or closer than 153 mm (6 in) to openings into the vehicle or route it such that it is not protected. Use approved materials only.

The tailpipe of the generator set will be hot during operation and can cause severe burns. To reduce the risk of contact, concentration must be used where the tailpipe will be located and routed.

The generator set exhaust system must be gas tight and designed to prevent entry of exhaust gasses into the vehicle interior.

4.1 Tailpipe Installation

The muffler is mounted inside the generator set and has a flange to which the tailpipe adapter (available from Cummins Onan) is bolted or a collar to which the tailpipe is clamped or a short adapter bolted to its outlet flange.

⚠ WARNING

Flexible pipe is not gas tight or durable and can cause exhaust gas leaks. Do not use flexible pipe for tailpipe.

- 1. Use 18-gauge 1-3/8 inch I.D. aluminized steel tubing or material of equivalent heat and corrosion resistance for the tailpipe.
- 2. Support a tailpipe longer than 457 mm (1-1/2 ft) near its end and at intervals of 900 mm (3 ft) or less. Use automotive-type tailpipe hangers. Do not attach the hangers to combustible material such as wood.
- 3. Use U-bolt muffler clamps to connect sections of tailpipe. Overlapping pipe should be slotted.
- 4. Do not route the tailpipe within 114 mm (4.5 in) of any unshielded fuel distribution system components including the fuel line or tanks.
- 5. Do not route the tailpipe closer than 76 mm (3 in) to combustible material (wood, felt, cotton, organic fibers, etc.) unless it is insulated or shielded. The temperature rise (above ambient) on adjacent combustible material must not exceed 65 °C (117 °F).
- 6. Do not route the exhaust tailpipe underneath the oil drain.
- 7. Do not route the exhaust tailpipe such that it will restrict the air inlet/outlet.

4. Exhaust Connections 3-2017

8. To keep the tailpipe from being damaged, do not route it such that it protrudes into the approach or departure angles of the vehicle or below the axle clearance line.

- 9. Do not interconnect generator set and vehicle engine exhaust systems.
- 10. Do not terminate the tailpipe underneath the vehicle. Extend it a minimum of 25 mm (1 in) beyond the perimeter of the vehicle. Support the end of the tailpipe such that it cannot be pushed in and up under the skirt of the vehicle.
- 11. Do not terminate the tailpipe such that it is closer than 153 mm (6 in) to any opening, such as a door, window, vent, or unsealed compartment into the vehicle interior.

A CAUTION

Excessive back pressure can cause loss of performance and engine damage.

12. Make sure a tailpipe deflector will not cause excessive back pressure.

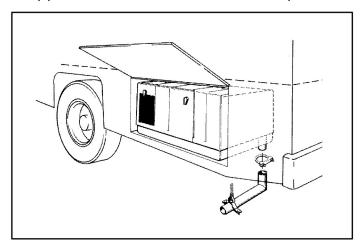


FIGURE 9. TYPICAL TAILPIPE INSTALLATION


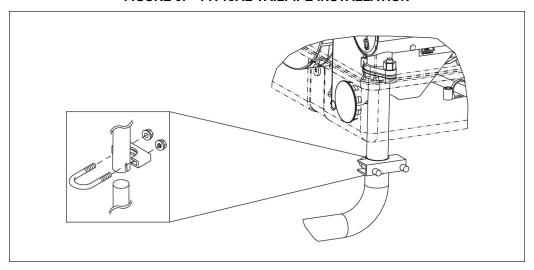


FIGURE 10. EXHAUST TAILPIPE CONNECTIONS

3-2017 4. Exhaust Connections

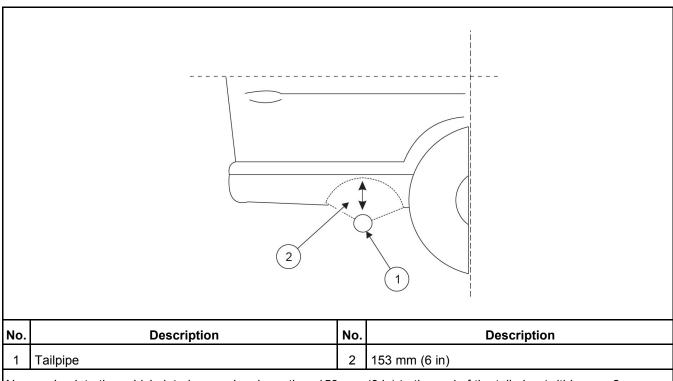

No opening into the vehicle interior may be closer than 153 mm (6 in) to the end of the tail pipe (within area 2, identified in this image).

FIGURE 11. MINIMUM DISTANCES TO OPENINGS

4. Exhaust Connections 3-2017

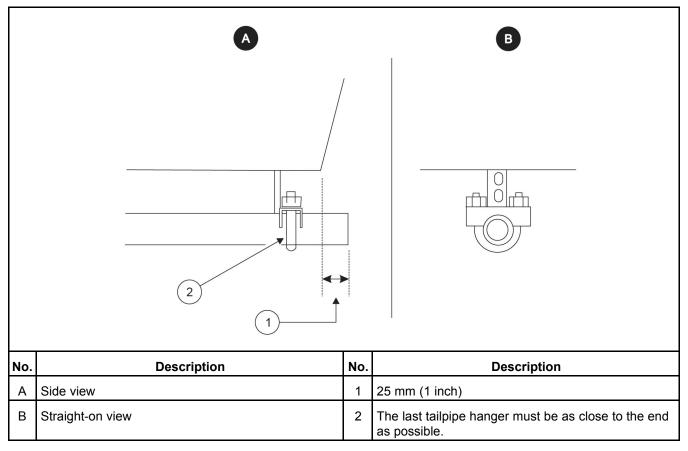


FIGURE 12. TERMINATING THE EXHAUST TAILPIPE

4.2 Vehicle Clearances - Class A RV

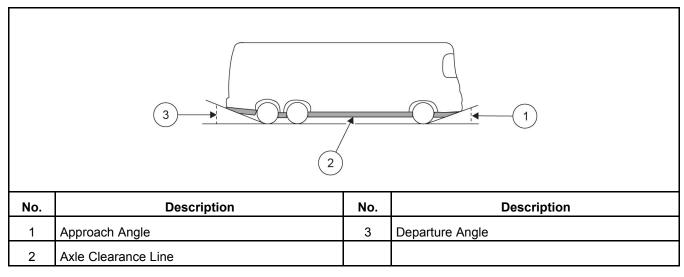


FIGURE 13. VEHICLE CLEARANCES - CLASS A RV

3-2017 4. Exhaust Connections

4.3 Vehicle Clearances - Class B Van

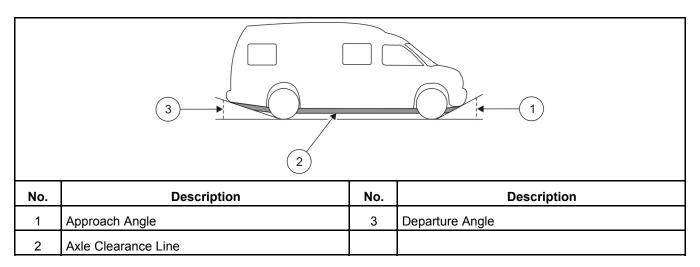


FIGURE 14. VEHICLE CLEARANCES - CLASS B VAN

4.4 Vehicle Clearances - Pickup Truck Camper

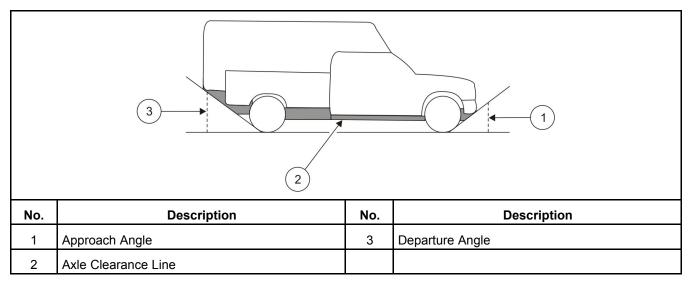


FIGURE 15. VEHICLE CLEARANCES - PICKUP TRUCK CAMPER

4. Exhaust Connections 3-2017

This page is intentionally blank.

5 Fuel Connections

See the Operator Manual for recommended fuels and Section 2.5 on page 9 for fuel consumption.

⚠ CAUTION

Unauthorized modifications or replacement of fuel, exhaust, air intake, or speed control system components that affect engine emissions are prohibited by law in California.

5.1 Gasoline Motorized

The maximum fuel pump lift is 914 mm (36 in).

The generator set and propulsion engine fuel supply and return lines must not be interconnected.

Connections meet the requirements of the following SAE standards, when applicable:

- J1231 (Formed Tube Ends for Hose Connections and Hose Fittings)
- J1508 (Hose Clamp Specifications)
- J2260 (Nonmetallic Fuel System Tubing with One or More Layers)
- J2044 (Quick Connector Specification for Liquid Fuel and Vapor/Emissions Systems)

Terminate the generator set fuel pickup above the vehicle engine pickup in the supply tank to keep the generator set from running the vehicle out of fuel.

Connect 1/4 inch fuel line from the vehicle fuel tank to the generator set.

5. Fuel Connections 3-2017

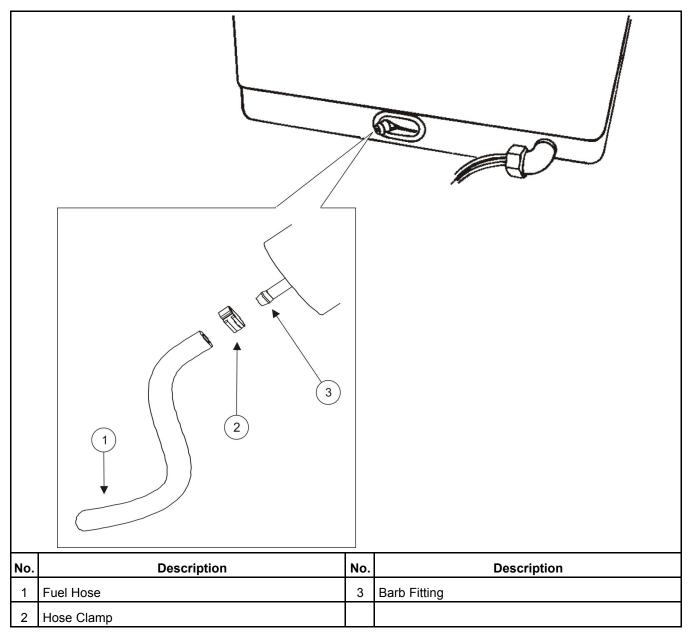


FIGURE 16. GASOLINE MOTORIZED FUEL CONNECTION

5.1.1 Fuel Hoses

The fuel hoses used inside the generator set are low permeation fuel hoses which meet Federal 50 state standards for gasoline evaporative emissions. Low permeation fuel hose is required to meet the requirements for gasoline generator sets sold in or used for commerce in all 50 states. The following hose materials are acceptable:

- Avon Automotive "Greenbar" (EO# G-05-018) SAE J30R7
- Avon Automotive "Greenbar 1200" (EO# C-U-05-009) SAE J30R12
- Gates 4219D (EO# C-U-06-002) SAE J30R9
- Gates Barricade (EO# Q-09-019)

3-2017 5. Fuel Connections

- Kubota (EO# C-U-05-003) SAE J30R7
- Mark IV Automotive "Gen2" (EO# C-U-05-002) SAE J30R7
- Mark IV Automotive "Fluoroperm" (EO# C-U-07-017) SAE J30R9
- Mark IV Automotive Dayperm" (EO# C-U-06-030) SAE J30R7
- Mark IV Automotive "Dayperm" (EO# G-05-016)
- Mold-Ex Division of SETi, Inc. "SETiFLEX II" (EO# G-05-17A) SAE J30R7
- Parker Hannifin Corp "Super Flex FL-7 series 389XX" (EO# Q-08-013)
- Veyance Technologies Inc. "Goodyear Flexshield" (EO# Q-09-022)

⚠ CAUTION

Lubricants used when connecting fuel hoses can leave residues that can clog fuel jets. Only use soap-free lubricants such as WD40 which runs through with the fuel without leaving residues that can clog fuel jets.

5.1.2 Fuel Lines

Tubing:

- Use 1/4 inch I.D. (± 0.003 inch) welded and drawn Type 304L stainless or AISI 1008-1010 low carbon steel tubing of 0.028 inch minimum wall thickness.
- Tubing must meet requirements for 150 psi operating pressure (Ref. ASTM A 539-99) and have corrosion resistance equal to or better than hot-dipped zinc galvanized.

Hose Beads:

- Use suitable tooling to form tubing ends into SAE J1231 Type 1 or Type 3 double-flare hose beads.
- · Recommended for all tubing and fittings.

Flexible Hose: Use 1/4 inch I.D. fuel hose that meets applicable standards for evaporative emissions.

5.1.3 Routing Fuel Lines

⚠ WARNING

Electric arcs can ignite gasoline leading to severe personal injury or death. Do not run wiring and fuel lines together.

1. Route the fuel line along bulkheads and frame members such that it is protected. The entire length of the fuel line must be visible for inspection and accessible for replacement.

It is preferred that fuel line routing be parallel to the motorized chassis fuel line.

5. Fuel Connections 3-2017

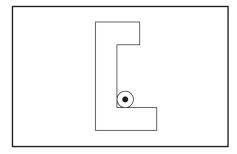


FIGURE 17. FUEL LINE PREFERRED ROUTING

NOTICE

The fuel line should be at or above the top of the fuel tank to reduce siphoning if a line breaks or a hose comes off.

2. Support and protect fuel lines to restrain movement and prevent chaffing or contact with sharp edges, electrical wiring, and hot exhaust parts.

5.2 Gasoline Nonmotorized (EVAP)

Evaporative generator sets are used in trailers, fifth wheel trailers, and other non-motorized vehicles where on-board gasoline fuel storage is self-contained in the trailer equipment.

Completing the installation of the generator set fuel evaporative system provides compliance with the California code of regulations for small off-road equipment effective January 1, 2008 and Federal Small SI regulation effective January 1, 2011.

- It is the responsibility of the towable equipment manufacturer OEM to complete the installation of the
 evaporative fuel system exactly as specified in the CARB EO & EPA certification for the Cummins
 Onan product being installed. Any deviation from the installation specifications causes forfeiture of
 the emissions certification on the fuel system and transfers engine evaporative emission certification
 responsibility to the trailer equipment manufacturer/OEM per CFR 40 Part 1060.
- If purchasing a complete or partial fuel system kit or components from a third party fuel system
 manufacturer, the requirements of the Installation Manual shall be met and the system must be
 verified by the OEM and fuel system supplier as meeting these requirements before completing the
 installation.
- Any construction deviations from these assembly requirements would invalidate the evaporative certification per CFR 40 Part 1060 and Article 1, Chapter 9, Division 3 Title 13 sections 2400 through 2773 and the towable equipment OEM would then be responsible for recertification of the fuel system with California Air Resources Board and US EPA.

Any questions regarding the installation or evaporative emission certification should be directed to Cummins Power Generation for clarification.

Third party companies provide the fuel tank, carbon canister, and all related components with Executive Order (EO) certificates. These products are allowed and the OEM is responsible to meet third party EO requirements.

- The maximum fuel pump lift is 914 mm (36 in).
- The generator set and propulsion engine fuel supply and return lines must not be interconnected.
- · Connections meet the requirements of the following SAE standards, when applicable:
 - J1231 (Formed Tube Ends for Hose Connections and Hose Fittings)

3-2017 5. Fuel Connections

- J1508 (Hose Clamp Specifications)
- J2260 (Nonmetallic Fuel System Tubing with One or More Layers)
- J2044 (Quick Connector Specification for Liquid Fuel and Vapor/Emissions Systems)
- J2599 (Fuel Filler Pipe Assembly Design Practice to Meet Low Evaporative Emission Requirements)
- Terminate the generator set fuel pickup above the vehicle engine pickup in the supply tank to keep the generator set from running the vehicle out of fuel.
- Connect 1/4 inch fuel line from the vehicle fuel tank to the generator set.

NOTICE

Evaporative (EVAP) requires an additional fuel vapor line from the carbon canister to the generator set.

5. Fuel Connections 3-2017

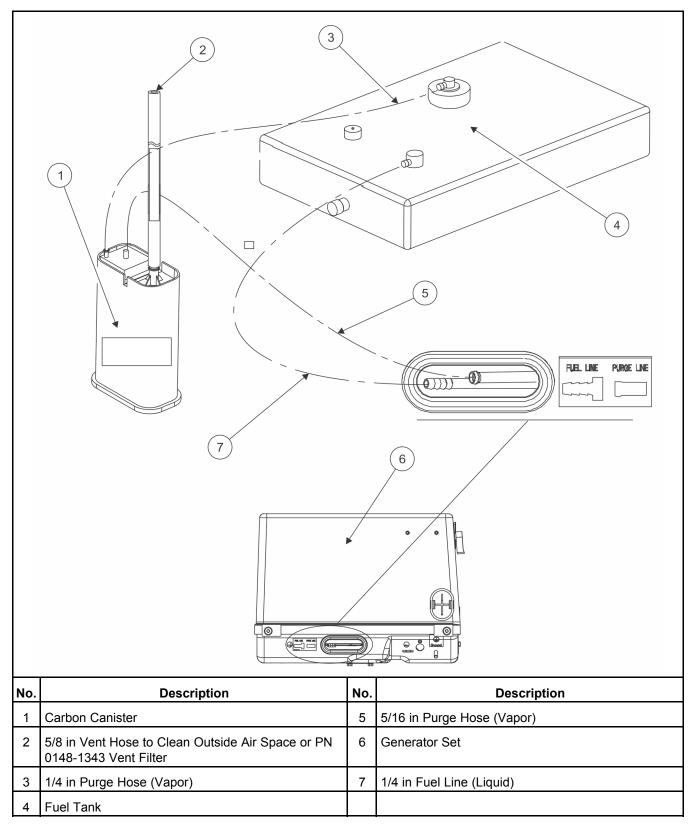


FIGURE 18. GASOLINE NONMOTORIZED (EVAP) CONNECTIONS

3-2017 5. Fuel Connections

5.2.1 Fuel Hoses

The fuel hoses used inside the generator set are low permeation fuel hoses which meet Federal 50 state standards for gasoline evaporative emissions.

The vapor and liquid hoses connecting the fuel tank to the generator set, the fuel tank to the carbon canister, and the carbon canister to the generator set must also be low permeation fuel hoses. Low permeation fuel hose is required to meet the requirements for gasoline generator sets sold in or used for commerce in all 50 states. The following hose materials are acceptable:

- Avon Automotive "Greenbar" (EO# G-05-018) SAE J30R7
- Avon Automotive "Greenbar 1200" (EO# C-U-05-009) SAE J30R12
- Gates 4219D (EO# C-U-06-002) SAE J30R9
- Gates Barricade (EO# Q-09-019)
- Kubota (EO# C-U-05-003) SAE J30R7
- Mark IV Automotive "Gen2" (EO# C-U-05-002) SAE J30R7
- Mark IV Automotive "Fluoroperm" (EO# C-U-07-017) SAE J30R9
- Mark IV Automotive Dayperm" (EO# C-U-06-030) SAE J30R7
- Mark IV Automotive "Dayperm" (EO# G-05-016)
- Mold-Ex Division of SETi, Inc. "SETiFLEX II" (EO# G-05-17A) SAE J30R7
- Parker Hannifin Corp "Super Flex FL-7 series 389XX" (EO# Q-08-013)
- Veyance Technologies Inc. "Goodyear Flexshield" (EO# Q-09-022)

⚠ CAUTION

Lubricants used when connecting fuel hoses can leave residues that can clog fuel jets. Only use soap-free lubricants such as WD40 which runs through with the fuel without leaving residues that can clog fuel jets.

5.2.2 Fuel Lines

Tubing:

- Use 1/4 inch supply and 5/16 inch purge O.D. (± 0.003 inch) welded and drawn Type 304L stainless or AISI 1008-1010 low carbon steel tubing of 0.028 inch minimum wall thickness.
- Tubing must meet requirements for 150 psi operating pressure (Ref. ASTM A 539-99) and have corrosion resistance equal to or better than hot-dipped zinc galvanized.

Hose Beads:

- Use suitable tooling to form tubing ends into SAE J1231 Type 1 or Type 3 double-flare hose beads.
- Required for all tubing and fittings.

CAUTION

When connecting fuel hoses, only use soap-free lubricants such as WD-40, which runs through fuel without leaving residues that can clog fuel jets.

Flexible Hose: Use 1/4 inch supply and 5/16 inch purge I.D. fuel hose that meets SAE J30R9 standards for working pressure and applicable standards for evaporative emissions.

5. Fuel Connections 3-2017

Hose Clamps: Use stainless steel ear clamps.

NOTICE

Onan part number 0503-1951-11 and Oetiker part number 16700011, or equivalent worm screw type clamps, are allowed.

5.2.3 Routing Fuel Lines

⚠ WARNING

Electric arcs can ignite gasoline leading to severe personal injury or death. Do not run wiring and fuel lines together.

1. Route the fuel lines side-by-side along bulkheads and frame members such that they are protected. The entire length of the fuel lines must be visible for inspection and accessible for replacement.

NOTICE

The fuel lines should be at or above the top of the fuel tank to reduce siphoning if a line breaks or a hose comes off.

2. Support and protect fuel lines to restrain movement and prevent chaffing or contact with sharp edges, electrical wiring, and hot exhaust parts.

5.2.4 Vapor and Fuel Return Line Requirements

Evaporative (EVAP) requires an additional fuel vapor line from the carbon canister to the generator set.

5.2.5 Fuel Tank

For compliance with evaporative emissions regulations, the fuel tank must:

- 1. Be metal.
- 2. Have a 13 to 35 gallon capacity.
- 3. Have a permanently tethered cap.
- 4. Have cap that provides a vapor seal and that audibly signals that the vapor seal has been established (click or snap).
- 5. Have a roll-over vent valve with connection for 5/16 inch I.D. hose. The hose connects to the carbon canister.
- 6. Have a fill-neck and an anti-spit-back valve if it is a non top-fill tank.
- 7. Be constructed to meet the requirements of Section 393.67 (joints, fittings and threads) of the Federal Motor Carrier Safety Administration Regulations.

Beginning January 1st of 2017, users will no longer be able to construct a compliance system as outlined above. Installers must purchase a complete fuel tank system with its own executive order, or have their own design approved by CARB.

5.2.6 Carbon Canister

Gasoline vapors in the fuel tank accumulate in the carbon canister when the generator set is not running. Vapors are drawn into the engine combustion chamber and burned while the generator set is operating.

3-2017 5. Fuel Connections

Use a Delphi carbon canister shown below. No other carbon canisters are acceptable.

Part Number	Description	Onan Part Number	
17208238	3.1 liters, 196 g working capacity	0159-1755	
17208262	3.3 liters, 233.8 g working capacity	0159-1754	

Mount the canister in one of three orientations shown in the figure below in accordance with its instructions.

NOTICE

Use 5/16 inch hose for purge (vapor) line from the carbon canister to the generator set. Use an SAE J2044 quick connect fuel fitting on the canister hose barb or use a soap-free lubricant such as WD40 to slip the hoses on the canister hose barbs. Secure the hoses with Oetiker® ear-type clamps or equivalent.

Connect the 1/4 inch hose from the vent of the fuel tank (identified as 1/4 inch Purge Hose (Vapor)), to the 1/4 barb Canister Connection. Connect the adjacent 5/16 inch hose barb on the canister to the generator set.

WARNING

Do not vent the canister (5/8 inch line) into the vehicle or other confined space where the vapors could accumulate to a flammable level.

A CAUTION

Blockage of the canister vent or vent hose could lead to collapse of system components due to vacuum.

To prevent dirt from entering the canister vent when it is mounted in a "dirty" location, connect the 5/8 inch hose barb to a hose terminated outside the living space of the vehicle at a location that is not exposed to road splash or dust. Alternatively, secure Onan Part Number 0148-1343 vent filter to the hose barb.

5. Fuel Connections 3-2017

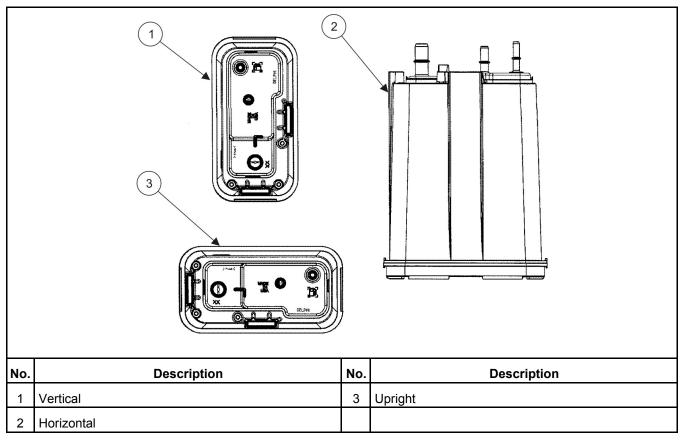


FIGURE 19. ACCEPTABLE CANISTER MOUNTING ORIENTATIONS

5.2.7 Generator Set

- 1. Connect the 5/16 inch generator set hose barb to the vapor purge hose from the carbon canister.
- 2. Connect the 1/4 inch hose barb to the fuel supply hose from the fuel tank.

5.3 LPG

⚠ WARNING

LPG is flammable and explosive and can cause asphyxiation. NFPA 58, Section 1.6 requires all persons handling LPG to be trained in proper handling and operating procedures.

⚠ WARNING

High LPG supply pressure can cause gas leaks which can lead to fire and severe personal injury or death. LPG supply pressure must be adjusted to Specifications by trained and experienced personnel.

⚠ WARNING

Sparks can ignite LPG, leading to severe personal injury or death. Do not run electrical wiring and fuel lines together. Separate them with conduit or tubing if run through the same opening. Do not tie them together.

3-2017 5. Fuel Connections

⚠ WARNING

LPG leaks from the vent hose can lead to explosive accumulations inside the generator set compartment. Route the LPG vent hose so that it vents to the outside or provide required openings.

⚠ WARNING

The flameout of an unvented LPG appliance can lead to explosive accumulations of gas inside the vehicle and the danger of severe personal injury or death. Do not connect the generator set fuel supply line to any vehicle appliance supply line.

⚠ WARNING

Testing for gas leaks with a flame can cause a fire or explosion that could lead to severe personal injury or death. Use approved methods only.

NFPA 58, the Liquefied Petroleum Gas Code, should be used as a guide for the installation of the LPG fuel system.

NFPA 1192, the Standard on Recreation Vehicles, should be used as a guide for the installation of the LPG fuel system in regard to the following sections:

- · Propane Container
- · Propane Supply Connection/Connector
- · Regulated High Pressure Piping
- Propane Systems
- · Propane Piping Systems
- · Propane Piping Design
- Propane Pipe Sizing

NOTICE

Generator is included in pipe sizing calculations and testing.

- · Special Requirement for High Pressure Testing
- Testing Low-Pressure Piping Systems for Propane Leakage After Appliances Are Connected

NOTICE

Generator is considered connected as an appliance for testing.

Testing Regulated High-Pressure Piping System for Gas Leakage

Connect LPG fuel system:

- 1. Adjust the gas supply pressure (at the gas inlet of the pressure regulator) to at least 229 mm (9 in) Water Column (WC). The pressure must not exceed 330 mm (13 in) WC.
- Route LPG fuel lines away from electrical wiring and hot engine exhaust components. Fuel lines should be accessible for inspection and replacement, protected from damage, and secured to prevent kinking, contact with sharp edges, and chafing due to vibration.
- 3. Route the LPG vent hose so that it vents to the outside or provide required openings.

5. Fuel Connections 3-2017

4. For a long fuel line run, use seamless steel tubing with flared ends. Make flexible hose connections at the fuel tank and at the generator set. Use 3/8 inch I.D. fuel line for runs up to 0.9 m (3 ft) and 1/2 inch I.D. up to 4.6 m (15 ft).

Do not connect the generator set fuel supply line to any appliance fuel supply line. The generator set can draw fuel away from other appliances and cause a flame out. To prevent the possibility of flameout, the fuel supply system must be designed to deliver sufficient fuel for normal operation of the generator set and other appliances at the expected temperature conditions. It may be necessary to use a separate fuel tank for the generator set if sufficient fuel cannot be supplied with a single tank system.

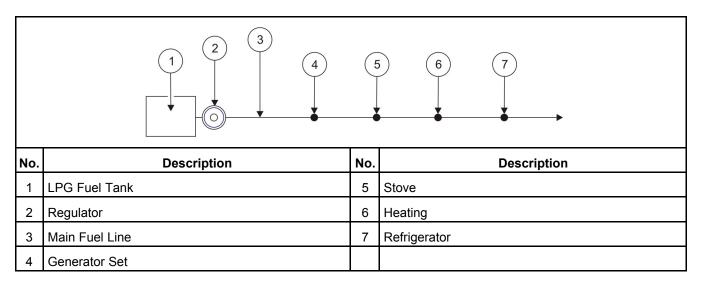


FIGURE 20. LPG FUEL LINE APPLIANCE CONNECTIONS (2.5 THROUGH 6.5 KW LPG SYSTEMS)

Generators with LPG systems must have dedicated:

- Regulator
- · Piping/Connections

Upon completion of the installation, fill the LPG tank and test every joint and fitting in the LPG supply system using an approved method, such as soap bubbles.

Because variations in fuel, altitude, and ambient temperature affect performance, it might be necessary to make governor and fuel mixture adjustments once the generator set has been installed. See the Service Manual.

3-2017 5. Fuel Connections

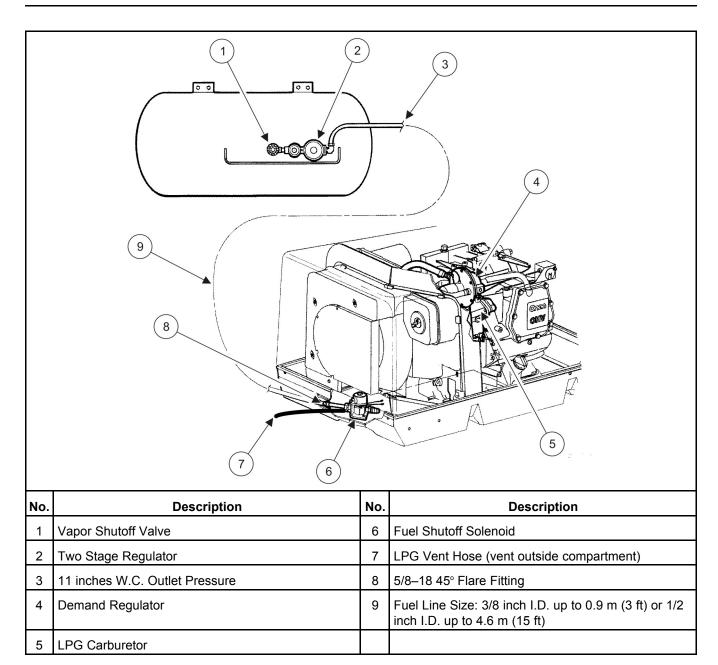


FIGURE 21. TYPICAL LPG VAPOR WITHDRAWAL FUEL SYSTEM

5. Fuel Connections 3-2017

This page is intentionally blank.

6 Electrical Connections

WARNING

HAZARDOUS VOLTAGE! Touching uninsulated live parts inside the generator set and connected equipment can result in severe personal injury or death. For your protection, stand on a dry wooden platform or rubber insulating mat, make sure your clothing and shoes are dry, remove jewelry from your hands, and use tools with insulated handles. Secure protective covers when completing installation.

⚠ WARNING

IMPROPER WIRING can cause fire or electric shock resulting in severe personal injury or death.

↑ WARNING

Accidental starting of the generator set can cause severe personal injury or death. Do not connect the starting battery until instructed in Chapter 7 on page 51.

6.1 AC Power Output Connections

The generator set is equipped with a circuit breaker and 3.2 m (126 in) long (12 AWG) leads for AC power output which exit through a rain-tight 1/2 inch trade size conduit connector.

The leads can be terminated at the main AC distribution panel where individual breakers can be provided for vehicle/trailer AC loads.

If longer AC cable is required or code stipulates, a 4 x 4 inch junction box should be mounted near the generator set. Use a weather type junction box if it is exposed to the elements. When extending this cable, use the proper size wire for amperage and insulation temperature rated wire (typically 12 AWG) to the main AC distribution panel.

The generator set is equipped with 126 inch (3.2 m) long AC power output leads which exit through a 1/2 inch trade size conduit connector (Figure 22). See Figure 23 for typical connections. If these leads must be replaced by longer leads, make sure their ampacity, as determined by the appropriate chart in the National Electrical Code (NEC), is at least 115 percent of the amps marked on the genset circuit breaker. (Unless 125 °C rated wiring is available, heavier gauge wiring may be required to obtain the required ampacity.)

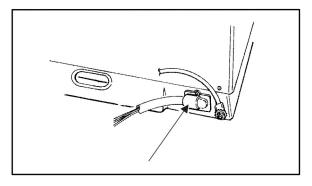


FIGURE 22. AC OUTPUT CONDUIT

6. Electrical Connections 3-2017

6.1.1 Wiring Methods

Follow the National Electrical Code, especially noting the following:

- 1. Have a qualified electrician supervise and inspect the installation of all AC wiring.
- 2. Install vibration-proof switches and controls that won't open and close circuits when the vehicle is in motion.
- 3. Provide ground fault circuit interrupters (GFCIs) for all convenience power receptacles.
- 4. Route AC wiring, remote control wiring, and fuel lines separately.
- 5. Seal all conduit openings into the vehicle interior to keep out exhaust gas. Apply silicone rubber or an equivalent type of sealant inside and outside each conduit connector. (Flexible conduit is not vapor tight and will allow exhaust gas to enter along the wires if not sealed.)

MARNING

Faulty grounding can lead to fire and electrocution, resulting in severe personal injury or death. Grounding must be in accordance with applicable codes.

6. Bond the generator set and all connected AC and DC equipment and controls to a common grounding point in accordance with applicable codes.

6.1.2 Connecting to Shore Power

WARNING

Interconnecting the generator set and shore power can lead to electrocution of utility line workers, equipment damage, and fire. Use an approved switching device to prevent interconnections.

A vehicle with provisions for connecting to utility power must have an approved device to keep the generator set and utility from being interconnected.

3-2017 6. Electrical Connections

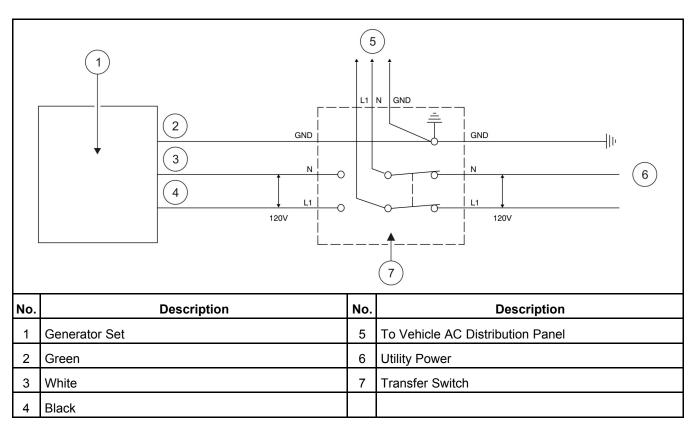


FIGURE 23. TYPICAL CONNECTIONS WITH TRANSFER SWITCH AND UTILITY

6.2 Remote Control Connections

The generator set has an 8-pin connector for remote control connections. Wiring harnesses in several lengths are available separately for connections between the generator set and remove control panel.

To make connections to a remote control panel:

- 1. Push the generator set remote control connector through the entrance hole in the side of the generator set housing and snap it together with the remote wiring harness connector male.
- 2. Refer to the following table to fabricate the remote control panel and/or wiring harness when not using the accessories available from Cummins Onan. Mark the remote control end of each lead to identify the connector pin number at the generator set.
 - Use insulated 18 AWG copper conductors for distances up to 9 m (30 ft) and heavier gauge conductors for greater distances. Protect the wiring with full-length flexible sheathing.
- Route control leads separately from AC power leads to reduce the possibility of erratic operation due to false induced signals.
- 4. Seal the opening where the leads enter the vehicle interior with silicone rubber or equivalent sealant to keep out exhaust gas.

6. Electrical Connections 3-2017

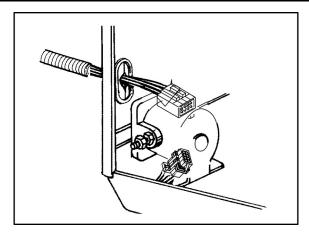


FIGURE 24. REMOTE CONTROL CONNECTOR

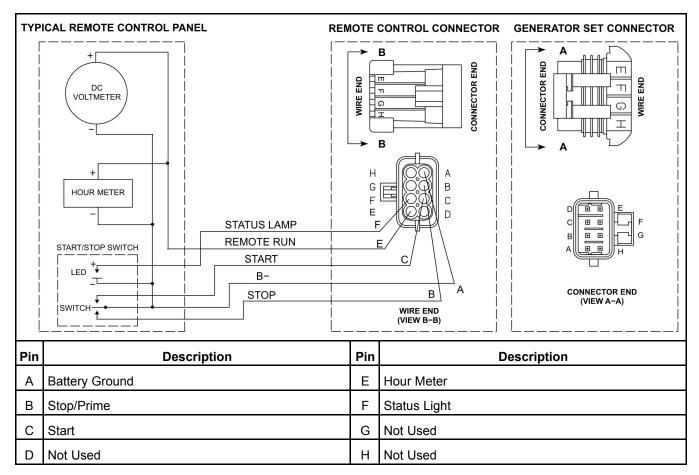


FIGURE 25. REMOTE CONTROL CONNECTOR PLUG AND TYPICAL CONNECTIONS

6.3 Starting Battery Connections

MARNING

Accidental starting of the generator set can cause severe personal injury or death. Do not connect the starting battery until instructed in Chapter 7 on page 51.

3-2017 6. Electrical Connections

The generator set has a 12 VDC, negative-ground engine control and cranking system. See **Section 2.5** on page 9 for the requirements for cranking batteries.

6.3.1 Battery Compartment

⚠ WARNING

Arcing can ignite the explosive hydrogen gas given off by the battery, causing severe personal injury. The battery compartment must be ventilated and must isolate the battery from spark-producing equipment.

Batteries must be mounted in a separate compartment from that of the generator set and away from spark-producing equipment. A compartment must have openings of at least 11 cm² (1.7 in²) at the top and bottom for ventilation of battery gasses. It should be mounted such that spills and leaks will not drip acid on fuel lines, wiring, and other equipment that could be damaged.

- Stand-alone applications will require a starting battery and a battery charger.
- RVs often connect "house" batteries to the generator set. All RVs should be equipped with a battery charger to charge the batteries.

6.3.2 Battery Cable Sizes

TABLE 7. BATTERY CABLE SIZES FOR TEMPERATURES DOWN TO -29 °C (-20 °F)

Total Cable Length ¹	Cable Size
0 to 3 m (0 to 10 ft)	2 AWG ²
3 to 4.5 m (11 to 15 ft)	0 AWG
4.5 to 6 m (16 to 20 ft)	00 AWG

^{1.} Battery cable lengths are total lengths from battery to the generator back to the battery and when using a total of 1000 CCA (Cold Cranking Amps).

6.3.3 Battery Cables

Size battery cables according to the Battery Cable Sizes table. The current path between the generator set and the negative (–) battery terminal must also be able to carry full cranking current without causing excessive voltage drop. It is highly recommended that a full-length cable be used to connect the generator set to the negative (–) battery terminal. Note also that codes may require bonding conductors from the generator set and the battery to the vehicle frame.

If a vehicle frame is used as the path between the negative (–) battery terminal and the generator set, all frame members in the path of battery cranking currents must have substantial cross sections. The electrical resistance of riveted or bolted frame joints must also be carefully considered, especially if the joints will be exposed to corrosive conditions. A cable must be used to connect the frame to the designated negative (–) terminal on the generator set.

NOTICE

The generator set mounting bolts are not considered an adequate means of bonding the generator set to the vehicle frame, either for the purpose of carrying cranking currents or for complying with requirements for generator set/system grounding.

^{2.} A total length of up to 6 m (20 ft) may be used in warmer climates or when battery capacity totals at least 1000 CCA.

6. Electrical Connections 3-2017

Coat all battery cable connections with a battery terminal oxidation inhibitor.

⚠ WARNING

Routing battery cables with fuel lines can lead to fire and severe personal injury or death. Keep battery cables away from fuel lines.

Route battery cables away from fuel lines and hot engine exhaust components. Battery cables should be accessible for inspection and replacement, protected from damage and secured to prevent chafing due to vibration.

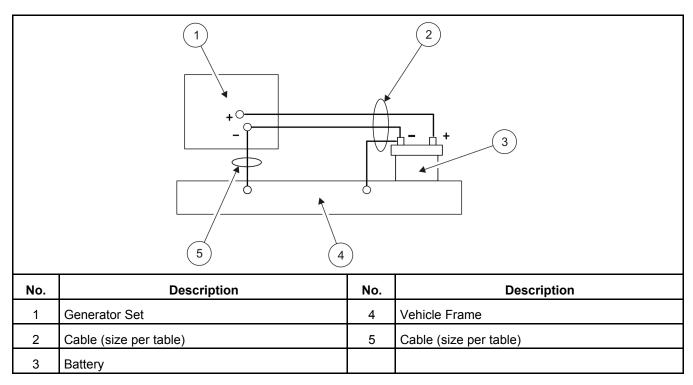


FIGURE 26. FULL-LENGTH CABLE FROM BATTERY NEGATIVE (-) TERMINAL

3-2017 6. Electrical Connections

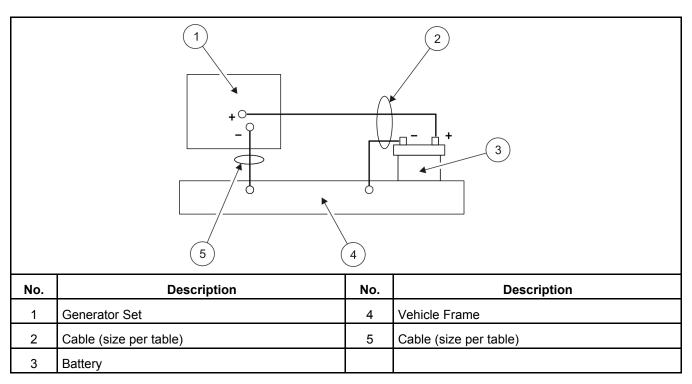


FIGURE 27. VEHICLE FRAME AS PATH FROM BATTERY NEGATIVE (-) TERMINAL

6.3.4 Battery Cable Connections at the Generator Set

Terminate the battery cables with ring terminals sized for 5/16 inch screws and connect them to the generator set. Secure the insulating boot on the positive (+) terminal and tie it to the battery cable with the tie-wrap in the bag with the manuals.

Torque the positive (+) cable terminal to 8 Nm (6 ft-lbs).

Torque the negative (-) cable terminal to 8 Nm (6 ft-lbs).

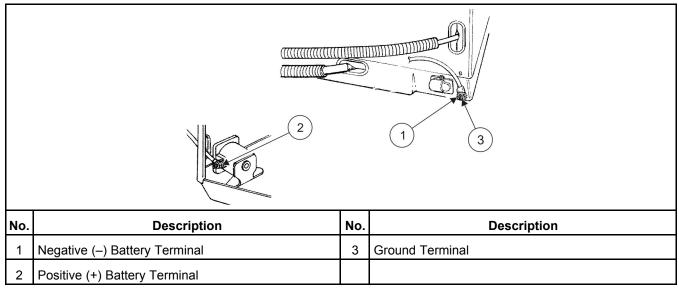


FIGURE 28. BATTERY CABLE CONNECTIONS

6. Electrical Connections 3-2017

6.3.5 Generator Set (Equipment) Grounding Screw

When required, connect the generator set grounding screw to the vehicle frame with a No. 8 AWG or larger stranded cable having a ring terminal sized for a 3/8 inch screw.

Torque the grounding screw to 26 Nm (20 ft-lbs).

7 Installation Review and Startup

7.1 Installation Review

Before starting the generator set, inspect the installation and check (\checkmark) each of the following questions if it can be answered "YES." If an item cannot be checked, provision must be made to satisfy the requirement.

- □ Is the control panel on the generator set easily accessible for starting and stopping the generator set and resetting the circuit breaker?
- \Box Is there easy access for checking and adding engine oil, replacing the spark plugs, and changing the air filter?
- □ Is the generator set securely bolted in place?
- □ Are all specified clearances provided?
- □ Are the air inlet and outlet openings free of obstructions?
- □ Is there access for draining engine oil?
- □ Are all tail pipe connections tight and all hangers and support straps secure?
- \Box Does the tailpipe terminate at least 25 mm (1 in) beyond the perimeter of the vehicle and at least 153 mm (6 in) away from any opening into the vehicle?
- □ Is the generator set located outside the vehicle interior or separated by approved vapor- and fire-resistive materials?
- □ Are all openings into the vehicle, such as for AC wiring, sealed to keep out engine exhaust? Are AC conduit connectors sealed inside and outside?
- □ Have all AC connections been inspected and approved?
- □ Has a properly sized battery been installed in a ventilated compartment isolated from the generator set?
- □ Have properly sized battery cables been installed and secured at sufficient intervals to prevent chaffing and contact with sharp edges, fuel lines, and hot exhaust parts?
- □ Are all fuel connections tight?
- □ Has the fuel line(s) been secured at sufficiently close intervals to prevent chaffing and contact with sharp edges, electrical wiring, and hot exhaust parts?

7.2 Startup

⚠ WARNING

Batteries give off explosive gases that can cause severe personal injury. Do not smoke near batteries. Keep flames, sparks, pilot lights, switches, arc-producing equipment, and all other ignition sources away.

When all the items on the Installation Review check list have been checked, connect the battery cables to the battery, positive (+) cable first.

Read the Operator Manual and perform the maintenance and pre-start checks as instructed. The generator set is shipped from the factory with the proper level of engine oil, but the oil level should be checked before starting the generator set.

⚠ WARNING

This product incorporates a catalyst exhaust system which leads to subsequent higher exhaust gas temperatures and higher cooling air outlet temperatures. Due to these higher exhaust gas temperatures and higher cooling air outlet temperatures, the installer must review and follow all guidelines for the installation. Care must be taken to ensure that all installation requirements in this entire manual are met.

⚠ WARNING

EXHAUST GAS IS DEADLY! Do not operate the generator set when the vehicle is indoors or where exhaust can accumulate.

Start and operate the generator set, following all the instructions and safety precautions in the Operator Manual.

Check for fuel and exhaust leaks and unusual noises while the generator set is running under full and intermediate loads. Do not place the generator set in service until all fuel and exhaust leaks have been fixed and operation is satisfactory.

7.3 Hot Air Recirculation Test

WARNING

This product incorporates a catalyst exhaust system which leads to higher exhaust gas temperatures and higher cooling air outlet temperatures. The installer must review and follow all guidelines for the installation. Care must be taken to make sure that all installation requirements in this entire manual are met.

A representative installation of the generator set must be tested to determine that the generator set will not overheat due to recirculation of hot air back into the generator set.

7.3.1 Test Method

⚠ WARNING

EXHAUST GAS IS DEADLY! Do not operate the generator set when the vehicle is parked indoors or where exhaust can accumulate.

- 1. Complete a representative installation.
- 2. Set up a load bank to run the generator set at rated full load.
- 3. Conduct the test at a location where the ambient air temperature will remain between 16 $^{\circ}$ C and 38 $^{\circ}$ C (60 $^{\circ}$ F and 100 $^{\circ}$ F).
- 4. Measure temperatures with thermocouples not heavier than 0.21 mm² (24 AWG).
 - a. Measure generator set inlet air temperature with one thermocouple tied in the middle of the inlet air grille.
 - b. Measure ambient air temperature with a shielded thermocouple within 1.2 m (4 ft) of the generator set and approximately the same height. Make sure the thermocouple will not be affected by warm air discharged from the generator set or by sunlight. Use 50.8 mm (2 in) diameter white PVC piping at least 152.4 mm (6 in) long as a thermocouple shield.

5. Close all compartment doors and run the generator set at full load for at least an hour. Record temperatures at 15 minute intervals until they stabilize. Temperature is considered stable when there is no change in 3 consecutive readings. The following table illustrates how the data can be arranged for recording and analysis.

TABLE 8. TEMPERATURE DATA

	TEMPERATURE °C (°F)					
THERMOCOUPLE LOCATION	Time of Reading					
AMBIENT AIR						
INLET AIR						

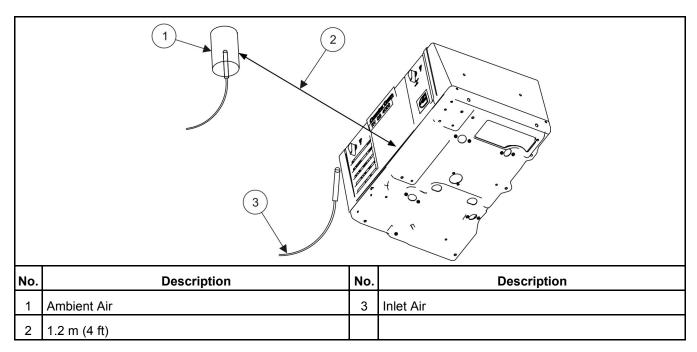


FIGURE 29. THERMOCOUPLE LOCATIONS FOR HOT AIR RECIRCULATION TEST

7.3.2 Test Results

Ideally the air intake temperature should be as close to ambient as possible in all modes of operation: driving, parked, propulsion engine running and propulsion engine off.

- An installation with temperature rise over ambient exceeding 15C (27F) must be repaired/modified. These conditions will cause the generator to have poor performance and accelerated wear.
- An installation with 10C 15C (18F 27F) rise over ambient will likely experience heat related issues including accelerated wear and possible fueling issues.
- An installation with 5C 10C (9F 18F) rise over ambient may not operate as intended in extremely warm conditions or at high loads.
- An installation with 0C 5C (0F 9F) rise over ambient should perform well in most conditions.

Other environmental effects (wind, parking location, location of obstructions near the genset) can create undesirable performance due to temperature. This should be taken into consideration when installing the generator with intent for common usage patterns.

Appendix A. Wiring Diagrams

Ta	hl	$\mathbf{\cap}$	Λf	C_{Δ}	nte	nte
ıa	NI	C	UI	しし	III	บเป

Figure 30. 0611-1267 57

This page is intentionally blank.

3-2017 Appendix A. Wiring Diagrams

A.0 Wiring Diagram

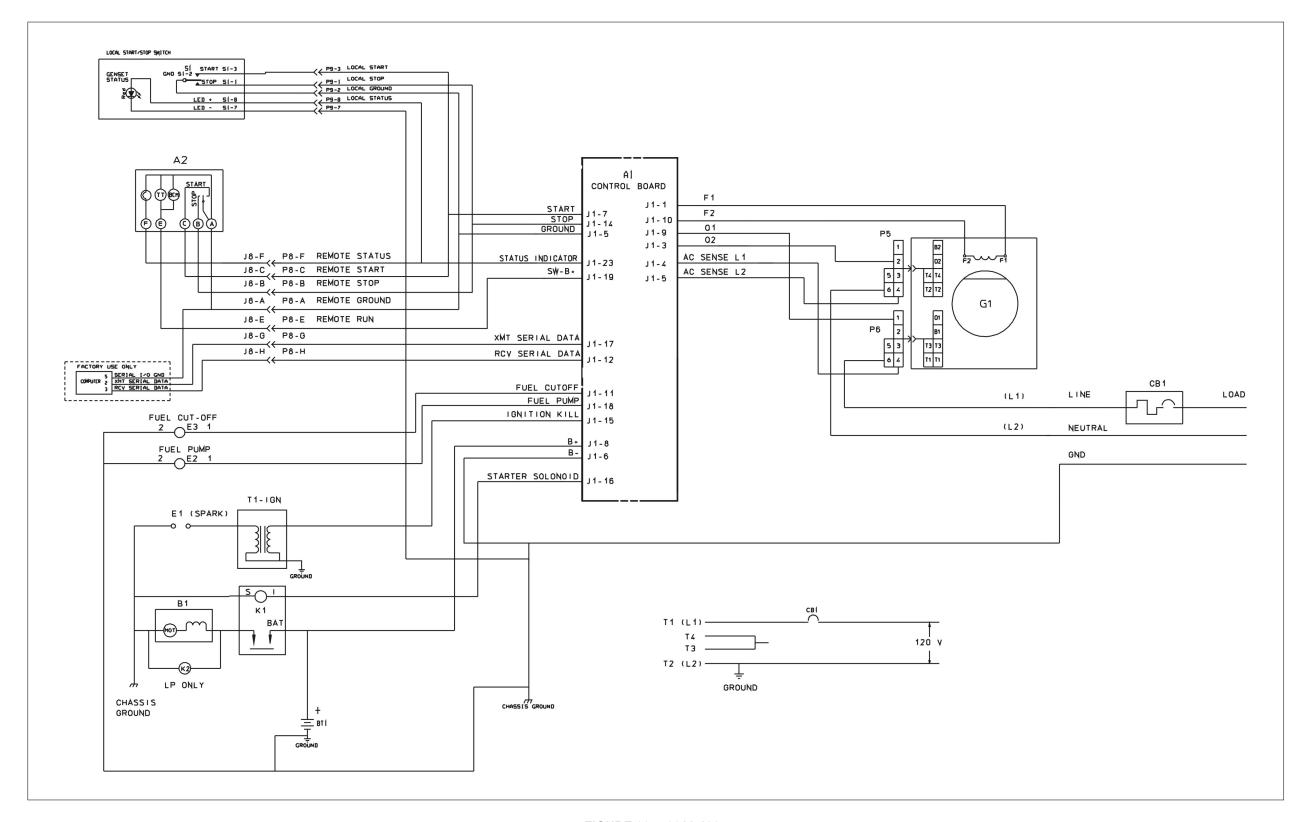


FIGURE 30. 0611-1267

Appendix A. Wiring Diagrams 3-2017

This page is intentionally blank.

Appendix B. Outline Drawings

Table of Contents

Figure 31. 0500-3297 Sheet 1	61
Figure 32. 0500-3297 Sheet 2	62
Figure 33. 0539-1546	63

This page is intentionally blank.

3-2017 Appendix B. Outline Drawings

B.0 Outline Drawing

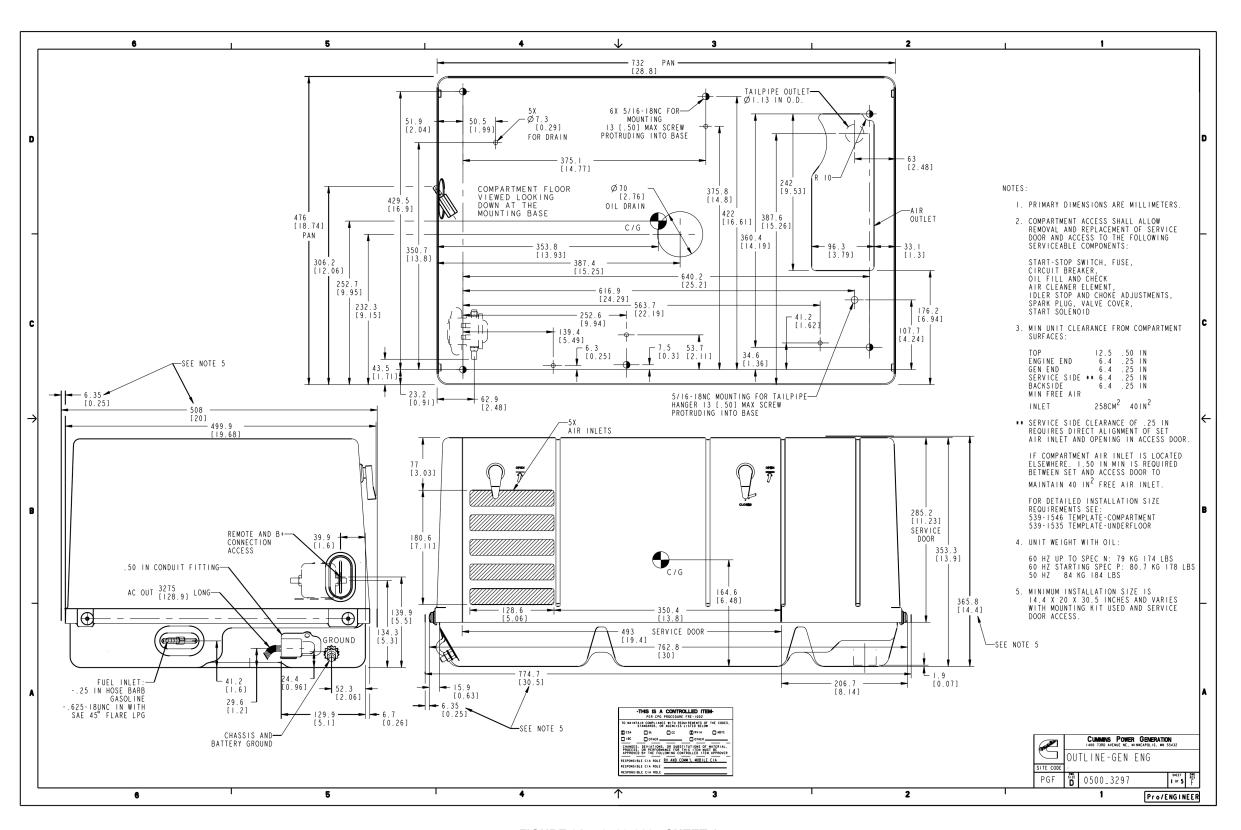


FIGURE 31. 0500-3297 SHEET 1

Appendix B. Outline Drawings 3-2017

B.1 Outline Drawing - EVAP

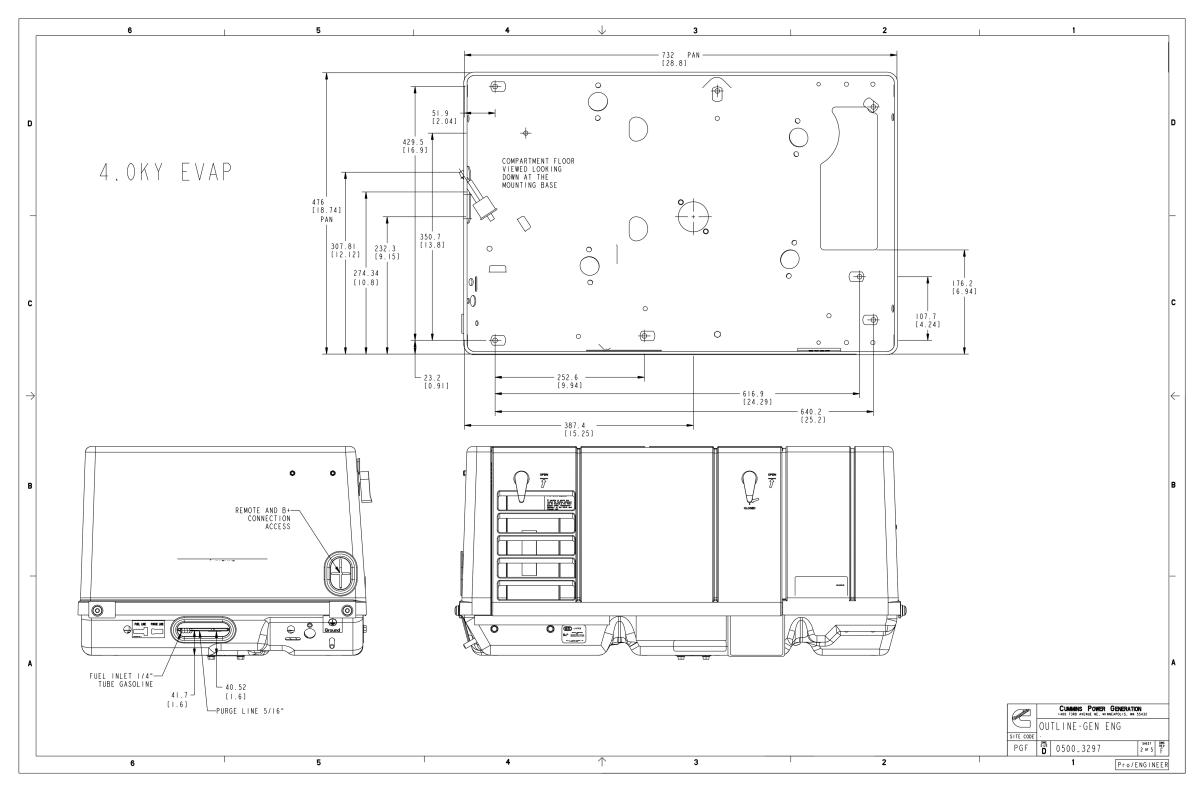


FIGURE 32. 0500-3297 SHEET 2

3-2017 Appendix B. Outline Drawings

B.2 Outline Drawing - Floor Cutout

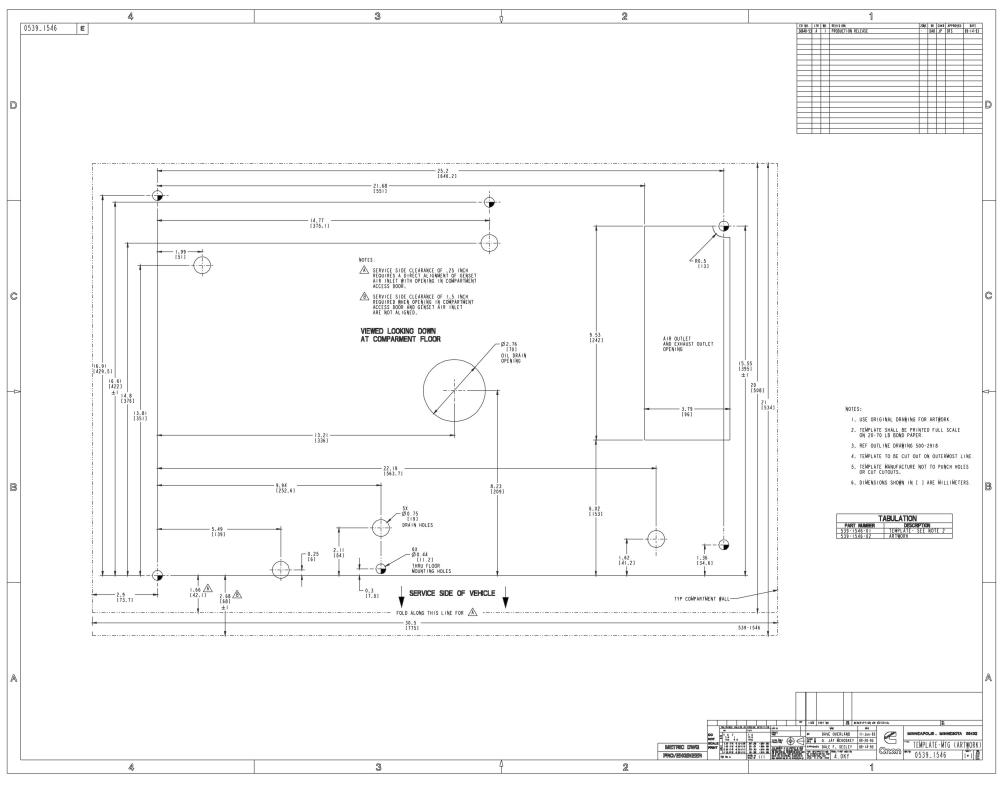


FIGURE 33. 0539-1546

Appendix B. Outline Drawings 3-2017

This page is intentionally blank.

