Operation

Engine

Models:

KG6208 Naturally Aspirated Propane, Liquefied Petroleum Gas (LPG)
Natural Gas (NG) Fueled

California Proposition 65

A WARNING

Engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects, or other reproductive harm.

California Proposition 65

A WARNING

This product contains and/or emits chemicals known to the State of California to cause cancer, birth defects, or other reproductive harm.

Product Identification Information

Record the product identification information from the engine nameplate.

Product identification numbers determine service parts. Record the product identification numbers in the spaces below immediately after unpacking the products so that the numbers are readily available for future reference.

Engine Identification

'	J	•		
Model Designation:				
Serial Number:				
Purchase Date				

Upon purchase of your Kohler equipment, record the purchase date for reference when communicating with your authorized Kohler distributor/dealer.

Table of Contents

Safety Pre	cautions	s and Instructions	5
Introduction	on		11
Service As	ssistanc	e	12
Section 1.		Components and Maintenance Locations	13
1.1	Model	KG6208 Engine Side Views	13
1.2	Model	KG6208 Top and Rear Views	14
Section 2.		Operation	15
2.1	Introdu	ction	15
2.2	Fuel S	ystem	15
	2.2.1	Components	15
	2.2.2	Fuel Specifications	19
	2.2.3	Before Starting	20
	2.2.4	Starting	21
	2.2.5	Cold Weather Starting	22
	2.2.6	Monitoring Engine Operation	23
	2.2.7	Stopping	23
Section 3.		Maintenance	25
3.1	Introdu	ction	25
3.2	Safety	Precautions and Instructions	25
3.3	Fluid S	pecifications	27
	3.3.1	Oil Recommendations	27
	3.3.2	Coolant Recommendations	27
3.4	Periodi	ic Maintenance Schedule	28
3.5	Engine	1	29
	3.5.1	Check Engine Oil	29
	3.5.2	Change Engine Oil and Oil Filter	30
	3.5.3	Check and Clean the Air Filter	33
	3.5.4	Replace the Air Filter	33
	3.5.5	Check, Adjust and Replace the Spark Plugs	33
	3.5.6	Ignition Timing	35
3.6	Electric	cal System	36
	3.6.1	Check Battery and Connections	36
	3.6.2	Check and Adjust the Drive Belt	37
	3.6.3	Replace the Drive Belt	39
	3.6.4	Check Wiring and Electrical Connections	40
3.7	Cooling	g System	41
	3.7.1	Check Coolant Level and Condition	41
	3.7.2	Check Hoses and Clamps	41
	3.7.3	Draining and Replacing the Coolant	41
3.8	Fuel S	ystem	42
	3.8.1	Check Fuel Supply Pipe and Connections	42
	3.8.2	Check Fuel Level (LPG only)	42
Section 4.		Troubleshooting	43
4.1	Introdu	ction	43
4.2	Trouble	eshooting	43

Section 5.	Storage	45
5.1	Preparation	45
5.2	Short-Term Storage (Less than 30 Days)	
5.3	Long-Term Storage (More than 30 Days)	46
5.4	Maintenance while in Storage	46
5.5	Removal from Storage	46
Section 6.	Specifications	47
6.1	Engine Specifications	47
6.2	Main Components Specifications	48
6.3	Adjustment Specifications	48
6.4	Torque Specifications	48
6.5	Standard Torque Specifications	49

Read and follow all safety precautions and instructions. SAVE THESE INSTRUCTIONS.

This manual has several types of safety precautions and instructions: Danger, Warning, Caution, and Notice.



Danger indicates the presence of a hazard that will cause severe personal injury, death, or substantial property damage.



Warning indicates the presence of a hazard that *can cause severe personal injury, death,* or *substantial property damage.*



Caution indicates the presence of a hazard that will or can cause minor personal injury or property damage.

NOTICE

Notice communicates installation, operation, or maintenance information that is safety related but not hazard related.

Note:

A Note is used to inform you of important installation, operation, or maintenance information.

Accidental Starting



Accidental starting.

Can cause severe injury or death.

Disconnect the battery cables before working on the engine. Remove the negative (–) lead first when disconnecting the battery. Reconnect the negative (–) lead last when reconnecting the battery.

Disabling the engine. Accidental starting can cause severe injury or death. Before working on the engine or connected equipment, disable the engine as follows: 1) Disconnect the ignition coil. 2) Remove the battery cables, negative (–) lead first. Reconnect the negative (–) lead last when reconnecting the battery. Follow these precautions to prevent the accidental starting of the engine.

Battery



Sulfuric acid in batteries.
Can cause severe injury or death.

Wear protective goggles and clothing. Battery acid may cause blindness and burn skin.

Battery electrolyte is a diluted sulfuric acid. Battery acid can cause severe injury or death. Battery acid can cause blindness and burn skin. Always wear splashproof safety goggles, rubber gloves, and boots when servicing the battery. Do not open a sealed battery or mutilate the battery case. If battery acid splashes in the eyes or on the skin, immediately flush the affected area for 15 minutes with large quantities of clean water. Seek immediate medical aid in the case of eye contact. Never add acid to a battery after placing the battery in service, as this may result in hazardous spattering of battery acid.

Battery acid cleanup. Battery acid can cause severe injury or death. Battery acid is electrically conductive and corrosive. Add 500 g (1 lb.) of bicarbonate of soda (baking soda) to a container with 4 L (1 gal.) of water and mix the neutralizing solution. Pour the neutralizing solution on the spilled battery acid and continue to add the neutralizing solution to the spilled battery acid until all evidence of a chemical reaction (foaming) has ceased. Flush the resulting liquid with water and dry the area.

Battery gases. Explosion can cause severe injury or death. Battery gases can cause an explosion. Do not smoke or permit flames or sparks to occur near a battery at any time, particularly when it is charging. Do not dispose of a battery in a fire. To prevent burns and sparks that could cause an explosion, avoid touching the battery terminals with tools or other metal objects. Remove all jewelry before servicing the equipment. Discharge static electricity from your body before touching batteries by first touching a grounded metal surface away from the battery. To avoid sparks, do not disturb the battery charger connections while the battery is charging. Always turn the battery charger off before disconnecting the battery connections. Ventilate the compartments containing batteries to prevent accumulation of explosive gases.

Battery short circuits. Explosion can cause severe injury or death. Short circuits can cause bodily injury and/or equipment damage. Disconnect the battery before maintenance. Remove all jewelry before servicing the equipment. Use tools with insulated handles. Remove the negative (–) lead first when disconnecting the battery. Reconnect the negative (–) lead last when reconnecting the battery. Never connect the negative (–) battery cable to the positive (+) connection terminal of the starter solenoid. Do not test the battery condition by shorting the terminals together.

Engine Backfire/Flash Fire



Risk of fire.

Can cause severe injury or death.

Do not smoke or permit flames or sparks near fuels or the fuel system.

Servicing the fuel system. A flash fire can cause severe injury or death. Do not smoke or permit flames or sparks near the fuel mixer, fuel line, fuel filter, or other potential sources of fuel vapors. When removing the fuel line or fuel system be aware that liquid propane can cause frostbite on contact.

Servicing the air cleaner. A sudden backfire can cause severe injury or death. Do not operate the engine with the air cleaner/silencer removed.

Combustible materials. A fire can cause severe injury or death. Engine fuels and fuel vapors are flammable and explosive. Handle these materials carefully to minimize the risk of fire or explosion. Equip the compartment or nearby area with a fully charged fire extinguisher. Select a fire extinguisher rated ABC or BC for electrical fires or as recommended by the local fire code or an authorized agency. Train all personnel on fire extinguisher operation and fire prevention procedures.

Engine Fluids and Chemical Products



Handling caustic engine fluids and chemical products can cause severe chemical burns, nausea, fainting, or death.

Most chemicals such as used engine oil, antifreeze/coolant, rustproofing agent, inhibiting oil, degreasing agent, spray paint, and adhesives are hazardous to health. Read and follow the user information found on the packaging. Avoid inhalation and skin contact. Use only in well-ventilated areas and use a protective mask when spraying. Store engine fluids and chemical products in a locked cabinet. Contact your local recycling center for disposal information and locations.

Fire-damaged or burned O-rings may cause the formation of hydrofluoric acid. Contact with hydrofluoric acid may cause severe skin irritation and chemical burns. O-rings and other fluoroelastomer seals exposed to fire or temperatures above 316°C (600°F) (i.e., during welding) may decompose forming hydrofluoric acid. Avoid inhalation or skin contact. Do not incinerate O-rings. Dispose of O-ring waste material in a responsible manner.

Used engine oil. Contact with used engine oil may cause severe skin irritation. Repeated and prolonged skin exposure may have other health risks. Used engine oil is a suspected carcinogen. Avoid contact with skin. Thoroughly wash your hands and nails with soap and water shortly after handling used engine oil. Wash or dispose of clothing or rags containing used engine oil. Dispose of used engine oil in a responsible manner. Contact your local recycling center for disposal information and locations.

Exhaust System



Carbon monoxide.

Can cause severe nausea, fainting, or death.

The exhaust system must be leakproof and routinely inspected.

Carbon monoxide symptoms. Carbon monoxide can cause severe nausea, fainting, or death. Carbon monoxide is a poisonous gas present in exhaust gases. Carbon monoxide is an odorless, colorless, tasteless, nonirritating gas that can cause death if inhaled for even a short time. Carbon monoxide poisoning symptoms include but are not limited to the following:

- Light-headedness, dizziness
- Physical fatigue, weakness in joints and muscles
- Sleepiness, mental fatigue, inability to concentrate or speak clearly, blurred vision
- Stomachache, vomiting, nausea

If experiencing any of these symptoms and carbon monoxide poisoning is possible, seek fresh air immediately and remain active. Do not sit, lie down, or fall asleep. Alert others to the possibility of carbon monoxide poisoning. Seek medical attention if the condition of affected persons does not improve within minutes of breathing fresh air.

Engine Operation. Carbon monoxide can cause severe nausea, fainting, or death. Engine exhaust gases contain poisonous carbon monoxide. Carbon monoxide is an odorless, colorless, tasteless, nonirritating gas that can cause death if inhaled for even a short time. Avoid breathing exhaust fumes when working on or near the engine. Never operate the engine inside a building. Never operate the engine where exhaust gas could seep inside or be drawn into a potentially occupied building through windows, air intake vents, or other openings.

Fuel System



Explosive fuel vapors.

Can cause severe injury or death.

Use extreme care when handling, storing, and using fuels.

The fuel system. Explosive fuel vapors can cause severe injury or death. Vaporized fuels are highly explosive. Use extreme care when handling and storing fuels. Store fuels in a well-ventilated area away from spark-producing equipment and out of the reach of children. Never add fuel to the tank while the engine is running because spilled fuel may ignite on contact with hot parts or from sparks. Do not smoke or permit flames or sparks to occur near sources of spilled fuel or fuel vapors. Keep the fuel lines and connections tight and in good condition. Do not replace flexible fuel lines with rigid lines. Use flexible sections to avoid fuel line breakage caused by vibration. Do not operate the engine in the presence of fuel leaks, fuel accumulation, or sparks. Repair fuel systems before resuming engine operation.

Gas fuel leaks. Explosive fuel vapors can cause severe injury or death. Fuel leakage can cause an explosion. Check the LPG vapor or natural gas fuel system for leakage by using a soap and water solution with the fuel system test pressurized to 6–8 ounces per square inch (10–14 inches water column). Do not use a soap solution containing either ammonia or chlorine because both prevent bubble formation. A successful test depends on the ability of the solution to bubble.


Explosive fuel vapors can cause severe injury or death. Take additional precautions when using the following fuels:

Propane (LPG)—Adequate ventilation is mandatory. Because propane is heavier than air, install propane gas detectors low in a room. Inspect the detectors per the manufacturer's instructions.

Natural Gas—Adequate ventilation is mandatory. Because natural gas rises, install natural gas detectors high in a room. Inspect the detectors per the manufacturer's instructions.

LPG liquid withdrawal fuel leaks. Explosive fuel vapors can cause severe injury or death. Fuel leakage can cause an explosion. Check the LPG liquid withdrawal fuel system for leakage by using a soap and water solution with the fuel system test pressurized to at least 90 psi (621 kPa). Do not use a soap solution containing either ammonia or chlorine because both prevent bubble formation. A successful test depends on the ability of the solution to bubble.

Hazardous Noise

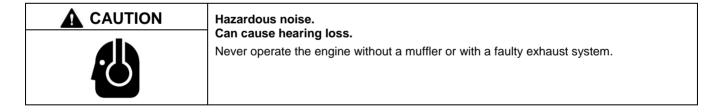

Hazardous Voltage/Moving Parts




Moving parts.


Can cause severe injury or death.

Operate the engine only when all guards and electrical enclosures are in place. Stay away from moving parts while the engine is in operation.


Servicing the engine when it is operating. Exposed moving parts will cause severe injury or death. Keep hands, feet, hair, clothing, and test leads away from the belts and pulleys when the engine is running. Replace guards, screens, and covers before operating the engine.

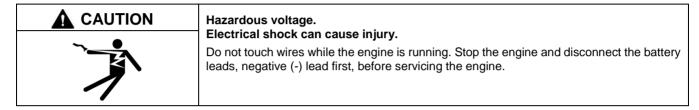

Heavy Equipment

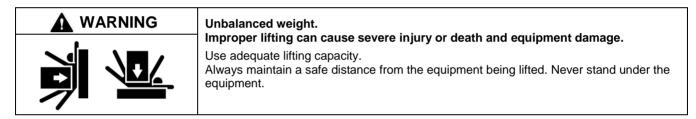

Hot Parts

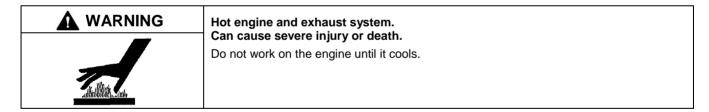

Servicing the exhaust system. Hot parts can cause severe injury or death. Do not touch hot engine parts. The engine and exhaust system components become extremely hot during operation.

▲ WARNING	Hot coolant and steam.
	Can cause severe injury or death. Before removing the pressure cap, stop the engine and allow it to cool. Then loosen the pressure cap to relieve pressure.

This manual provides operating and maintenance instructions for Kohler engines. Keep this manual with the equipment for future reference. Refer to the service manual for detailed information on adjusting and servicing the engine.

Read this manual and carefully follow all procedures and safety precautions to ensure proper equipment operation and to avoid bodily injury. Read and follow the Safety Precautions and Instructions section at the beginning of this manual. Keep this manual with the equipment for future reference.

Information in this publication represents data available at the time of print. Kohler Co. reserves the right to change this publication and the products represented without notice and without any obligation or liability whatsoever.

This engine operates on either propane, liquefied petroleum gas (LPG), or natural gas (NG), which are extremely flammable and explosive. Installation and repair of LPG/NG systems must be performed only by qualified technicians. Read this manual and carefully follow all procedures and safety precautions to ensure proper equipment operation and to avoid bodily injury.

Regular maintenance is necessary for safe and efficient operation. Inspect the engine often and perform required maintenance at prescribed intervals. Service work must be performed by appropriately skilled and suitably trained maintenance personnel who are familiar with engine diagnostics and repair.

Unless otherwise specified, all units of measurement are metric, followed by the United States customary unit equivalent.

Related Literature

The following chart identifies related literature available for the KG6208 engines. Only trained and qualified personnel should install or service this engine.

Literature Type	Part Number
Engine Service Manual	TP-7096
Engine Service Manual / Troubleshooting / Diagnostics	TP-7097

Contact a Kohler authorized distributor/dealer for all maintenance, service, and engine parts. To find a Kohler authorized distributor/dealer, visit KOHLERPower.com or call 1-800-544-2444 (U.S. and Canada).

Service Assistance

For professional advice and conscientious service, please contact your nearest Kohler distributor or dealer.

- Consult the Yellow Pages under the heading Generators–Electric.
- Visit the Kohler Co. website at KOHLERPower.com.
- Look at the labels and decals on your Kohler product or review the appropriate literature or documents included with the product.
- Call toll free in the US and Canada 1-800-544-2444.
- Outside the US and Canada, call the nearest regional office.

Headquarters Europe, Middle East, Africa (EMEA)

Kohler EMEA Headquarters Netherlands B.V. Kristallaan 1

4761 ZC Zevenbergen The Netherlands

Phone: (31) 168 331630 Fax: (31) 168 331631

Asia Pacific

Kohler Asia Pacific Headquarters Singapore, Republic of Singapore

Phone: (65) 6264-6422 Fax: (65) 6264-6455

China

North China Regional Office, Beijing

Phone: (86) 10 6518 7950

(86) 10 6518 7951

(86) 10 6518 7952

Fax: (86) 10 6518 7955

East China Regional Office, Shanghai

Phone: (86) 21 6288 0500 Fax: (86) 21 6288 0550

India, Bangladesh, Sri Lanka

India Regional Office

Bangalore, India

Phone: (91) 80 3366208

(91) 80 3366231

Fax: (91) 80 3315972


Japan, Korea

North Asia Regional Office

Tokyo, Japan

Phone: (813) 3440-4515 Fax: (813) 3440-2727

Model KG6208 Engine Side Views

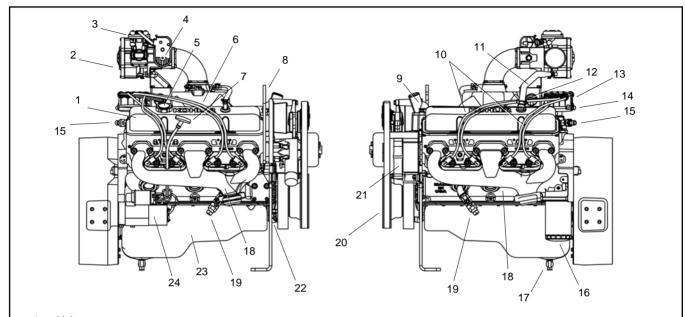


- Valve cover
- 2. Air-fuel mixer
- 3. Direct acting electronic pressure regulator (DEPR)
- 4. Throttle body
- 5. Oil filler cap
- Intake manifold
- 6. 7. Oil dipstick
- Engine lifting bracket
- Thermostat
- 10. Spark plug wires
- 11. Crankcase breather hose
- Ignition coil
- 13. Distributor cap
- 14. Camshaft position sensor
- 15. Oil pressure sender
- Oil filter 16.
- 17. Oil pan drain plug18. Exhaust manifold
- 19. Engine coolant shutoff valve (for optional block heater connection)
- 20. Crank pulley
- 21. Battery Charging Alternator22. Crankshaft position sensor
- 23. Oil pan
- 24. Starter

Figure 1 KG6208 Engine Side Views

Note:

Positioning of the exhaust manifolds varies depending upon the engine application.

1.2 Model KG6208 Top and Rear Views

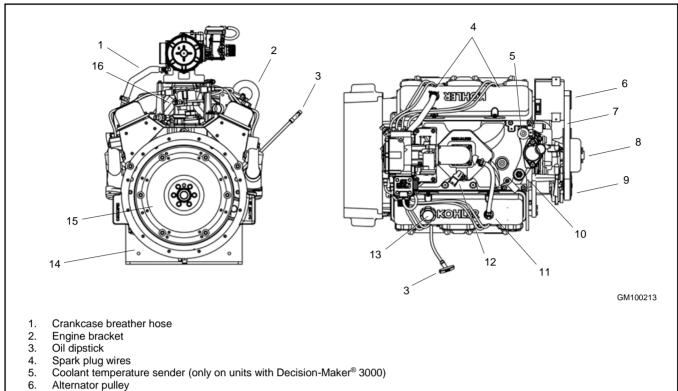

- 7. Drive belt
- 8.
- Water pump pulley Drive belt tensioner
- 10. Coolant temperature sender
- 11. Positive crankcase ventilation (PCV) valve
- 12. TMAP sensor¹
 13. Oil filler cap
- 14. Engine mounting bracket
- 15. Flywheel
- 16. Camshaft position sensor
 Air temperature/Manifold Absolute Pressure (TMAP)

Figure 2 KG6208 Engine Top and Rear Views

2.1 Introduction

These four-stroke internal combustion engines are certified to operate on either Propane, Liquid Petroleum Gas (LPG) or Natural Gas (NG). System configuration is factory preset for NG. Instructions for switching to LPG are provided within this section.

The fuel system on this engine is a closed loop design. As the engine runs, sensors located at various points within the system provide continuous operating feedback to the Engine Control Module (ECM). The ECM adjusts the engine speed, ignition timing, and fuel supply in response to changes in the applied load, surrounding air temperature, operating temperature of the engine, and amount of oxygen present in the exhaust.

Refer to the Operation Manual for the equipment using this engine for specific information on how fault codes are displayed.

2.2 Fuel System

2.2.1 Components

Ignition

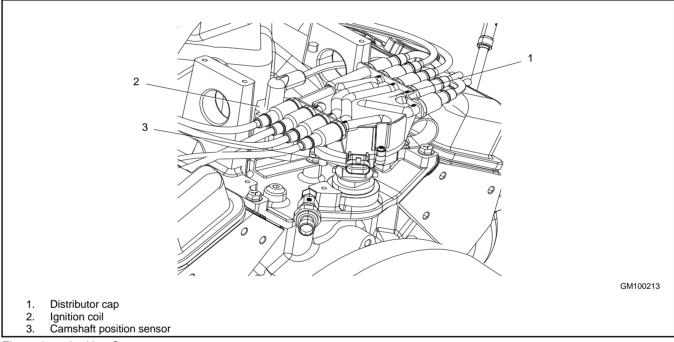


Figure 3 Ignition System

The ignition system consists of the ignition coil, distributor, and spark plugs. The ECM receives signals from the crankshaft position sensor and camshaft position sensor to control ignition timing. The ECM then sends a signal to the ignition coil, which in turn supplies voltage to the distributor. As the rotor in the distributor spins, voltage is supplied to the spark plugs and ignition is supplied to the cylinders.

Direct Acting Electronic Pressure Regulator

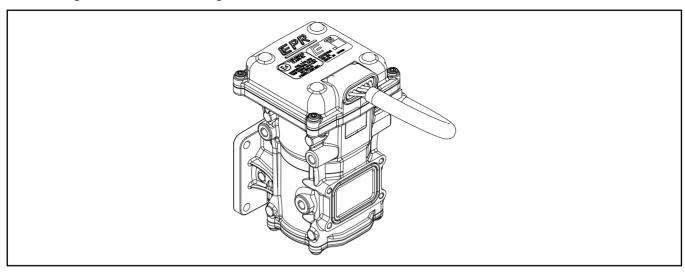


Figure 4 Fuel Pressure Regulator

The direct acting electronic pressure regulator (DEPR) controls the gaseous fuel pressure and fuel delivery. The DEPR receives fuel pressure commands from the ECM and modulates fuel pressure to the air-fuel mixer. The DEPR allows for fast and accurate gaseous fuel control to provide a combustible mixture to the engine.

Air-Fuel Mixer

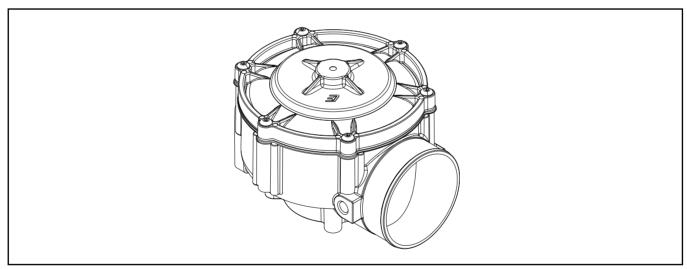


Figure 5 Air-Fuel Mixer

The air-fuel mixer is mounted in the air stream ahead of the throttle. It is a nonadjustable metering device that combines LPG/NG vapor with intake air for combustion.

NOTICE

Avoid the possibility of component damage. The air-fuel mixer is an emission control device. Components inside the mixer are specifically calibrated to meet the engine's emission requirements and should never be disassembled or rebuilt. If the mixer fails to function correctly, contact your KOHLER authorized distributor or dealer.

Throttle Body

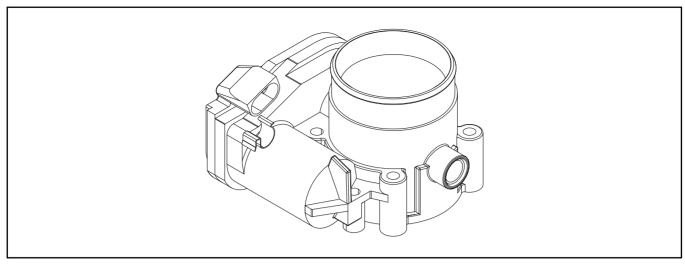


Figure 6 Throttle Body

The throttle body controls the operating speed of the engine according to input from the ECM. Defaults programmed into the ECM software, along with throttle position sensors, allow the ECM to control the overall operation of the engine in response to changing speeds and loads.

Engine Control Module (ECM)

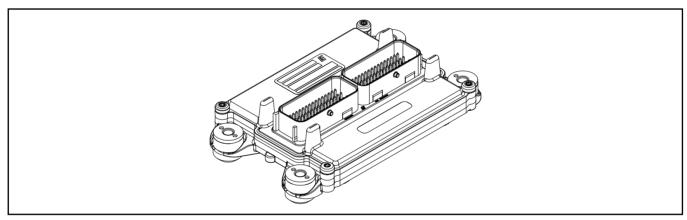


Figure 7 Engine Control Module

The ECM is a digital controller that oversees the various operating parameters of the engine. The ECM receives input data from sensors mounted to the engine and fuel system, and then outputs various signals to adjust engine operation.

The ECM also performs diagnostic functions on the fuel system. If a malfunction occurs, the ECM sends a fault signal to alert the operator to the problem. A corresponding Diagnostic Trouble Code (DTC) is generated and stored in memory within the ECM. A technician can then use a computerized diagnostic scan tool to retrieve the stored DTC number(s) and identify the problem.

Sensors

Air Temperature / Manifold Absolute Pressure (TMAP) Sensor

The Air Temperature / Manifold Absolute Pressure (TMAP) sensor monitors the absolute pressure in the intake manifold. This sensor also measures the temperature of the incoming air. Data returned by the TMAP sensor prompts the ECM to adjust the air-fuel mixture as needed.

Camshaft Position Sensor

The camshaft position sensor measures the rotary speed and camshaft turning angle. Through the camshaft position, the ECM determines the stroke, or cycle, of the engine and optimizes ignition. The sensor, which consists of a permanent magnet and coil, is integrated into the distributor. When the camshaft is turning, the position wheel (or 1 tooth wheel) passes the sensor at different speeds and causes a change of magnet resistance at the sensor to produce a changeable signal.

Coolant Temperature Sensor

The engine coolant temperature sensor provides engine coolant temperature data to the ECM. The ECM uses this data to adjust for cold starting conditions, and regulates various fuel and emission control functions.

Crankshaft Position Sensor

Crankshaft Position Sensor (CPS) measures the rotary speed and crankshaft turning angle. The ECM ensures the ignition timing for each cylinder depending on the turning signal. The sensor, which consists of a permanent magnet and coil, is installed on the timing case cover next to the crankshaft pulley. When the crankshaft is turning, the position wheel passes the sensor at different speeds and causes a change of magnet resistance at the sensor to produce a changeable signal.

Heated Exhaust Gas Oxygen (HEGO) Sensor

The Heated Exhaust Gas Oxygen (HEGO) sensor measures the amount of oxygen present in the exhaust stream to determine whether the air-fuel ratio is too rich or too lean.

Oil Pressure Sender

The engine oil pressure sender ensures sufficient lubrication throughout the engine. The sender is a pressure valve that is monitored by the ECM. A drop in pressure will trigger a fault code.

Throttle Position Sensor (TPS)

The electronic throttle control device incorporates an internal Throttle Position Sensor (TPS), which provides output signals to the ECM as to the location of the throttle shaft and blade. The ECM will use the signal to monitor and adjust the engine speed.

2.2.2 Fuel Specifications

Note:

The fuel system installation must comply with applicable national, state, and local codes.

Fuel Tyme	Item	Specification	
Fuel Type	itein	KG6208	
	Туре	HD-5 or HD-10	
Liquid Propane Gas (LPG)	Maximum fuel pressure (engine OFF, no load)	11.0" W.C.	
(2. 3)	Minimum fuel pressure (engine ON, full load)	5.0" W.C	
	Supply	Standard pipeline	
	Approximate supply volume	37.257 kJ/m ³ (1000 BTU/ft. ³)	
	Minimum flow	42.6 m ³ /hr. (1504 ft ³ /hr) @ 6.0" W.C.	
Natural Gas (NG)	Allowable water vapor	Less than 112.3 kg per 1 million m ³ (Less than 7 lb. per 1 million ft. ³)	
	Maximum fuel pressure (engine OFF, no load)	11.0" W.C.	
	Minimum fuel pressure (engine ON, full load)	7.0" W.C.	
LPG and NG (both)	Fuel handling and supply component constraints	UL 2200: Standard for Stationary Engine Equipment Assemblies	
	Operating temperature range	0°C (32°F) to 45°C (113°F) Unaided	

Figure 8 Fuel Specifications

2.2.3 Before Starting



Accidental starting. Can cause severe injury or death.

Disconnect the battery cables before working on the engine. Remove the negative (–) lead first when disconnecting the battery. Reconnect the negative (–) lead last when reconnecting the battery.

Disabling the engine. Accidental starting can cause severe injury or death. Before working on the engine or connected equipment, disable the engine as follows: 1) Disconnect the ignition coil. 2) Remove the battery cables, negative (–) lead first. Reconnect the negative (–) lead last when reconnecting the battery. Follow these precautions to prevent the accidental starting of the engine.

To prevent possible injury or damage to equipment, carefully read and understand all information in this Operation Manual before starting the engine. Follow the checklist below prior to each start up:

- Perform a walk-around inspection, checking for damage, fluid leaks, loose or missing fasteners, or debris.
- Check pipe and hose connections to make sure that they are tight.
- Check engine oil level; add oil as needed. Inspect engine oil for signs of deterioration or contamination. See the maintenance procedure for checking the engine oil.
- Check engine coolant level; add coolant as needed. Inspect coolant for contamination. See the maintenance procedure for checking the coolant level and condition.
- Check battery connections to ensure that they are tight with no visible corrosion. Check level of battery electrolyte and add fluid if necessary. See the maintenance procedure for checking the electrical system.
- Check and clean cooling areas, air intake areas, and external surfaces of the engine, particularly if the engine has been stored for a long period of time.
- Check to make sure that air cleaner components, shrouds, equipment covers, and guards are in place and securely fastened.
- Check all electrical connections to make sure that they are tight, including those at the alternator, starter, spark plug, and ignition coil. Repair damaged or loose wires or connectors before starting the engine.
- Check the fuel system. Make sure that all connections are secure at the fuel supply line and at all fuel system components. **Do not start the engine if you can smell leaking gas.**
- LPG only: check the fuel level in the fuel tank, and refill if necessary.

2.2.4 Starting

The specific engine starting sequence varies depending on the equipment that this engine powers. For more information, refer to the Operation Manual for the equipment using this engine.



Carbon monoxide.

Can cause severe nausea, fainting, or death.

The exhaust system must be leakproof and routinely inspected.

Engine Operation. Carbon monoxide can cause severe nausea, fainting, or death. Engine exhaust gases contain poisonous carbon monoxide. Carbon monoxide is an odorless, colorless, tasteless, nonirritating gas that can cause death if inhaled for even a short time. Avoid breathing exhaust fumes when working on or near the engine. Never operate the engine inside a building. Never operate the engine where exhaust gas could seep inside or be drawn into a potentially occupied building through windows, air intake vents, or other openings.



Moving parts.

Can cause severe injury or death.

Operate the engine only when all guards and electrical enclosures are in place. Stay away from moving parts while the engine is in operation.

Servicing the engine when it is operating. Exposed moving parts will cause severe injury or death. Keep hands, feet, hair, clothing, and test leads away from the belts and pulleys when the engine is running. Replace guards, screens, and covers before operating the engine.



Explosive fuel can cause fires and severe burns.

If a gaseous odor is detected, ventilate the area and contact an authorized service technician.

The fuel system. Explosive fuel vapors can cause severe injury or death. Vaporized fuels are highly explosive. Use extreme care when handling and storing fuels. Store fuels in a well-ventilated area away from spark-producing equipment and out of the reach of children. Never add fuel to the tank while the engine is running because spilled fuel may ignite on contact with hot parts or from sparks. Do not smoke or permit flames or sparks to occur near sources of spilled fuel or fuel vapors. Keep the fuel lines and connections tight and in good condition. Do not replace flexible fuel lines with rigid lines. Use flexible sections to avoid fuel line breakage caused by vibration. Do not operate the engine in the presence of fuel leaks, fuel accumulation, or sparks. Repair fuel systems before resuming engine operation.

If the engine does not start after 15 seconds of cranking, wait at least 15 seconds before trying again. Do not crank the starter longer than three crank cycles. After three crank cycles, the controller will display faults. Longer crank times can overheat the starter and drain the battery.

If the engine does not start after three attempts, discontinue the starting procedure. Perform troubleshooting to locate the problem(s) and correct them before trying again.

2.2.5 Cold Weather Starting






Handling caustic engine fluids and chemical products can cause severe chemical burns, nausea, fainting, or death.

Most chemicals such as used engine oil, antifreeze/coolant, rustproofing agent, inhibiting oil, degreasing agent, spray paint, and adhesives are hazardous to health. Read and follow the user information found on the packaging. Avoid inhalation and skin contact. Use only in well-ventilated areas and use a protective mask when spraying. Store engine fluids and chemical products in a locked cabinet. Contact your local recycling center for disposal information and locations.



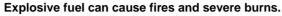



If a gaseous odor is detected, ventilate the area and contact an authorized service technician.

The fuel system. Explosive fuel vapors can cause severe injury or death. Vaporized fuels are highly explosive. Use extreme care when handling and storing fuels. Store fuels in a well-ventilated area away from spark-producing equipment and out of the reach of children. Never add fuel to the tank while the engine is running because spilled fuel may ignite on contact with hot parts or from sparks. Do not smoke or permit flames or sparks to occur near sources of spilled fuel or fuel vapors. Keep the fuel lines and connections tight and in good condition. Do not replace flexible fuel lines with rigid lines. Use flexible sections to avoid fuel line breakage caused by vibration. Do not operate the engine in the presence of fuel leaks, fuel accumulation, or sparks. Repair fuel systems before resuming engine operation.

Cold weather puts added stress on the engine during start up. To start the engine in cold weather:

- Make sure that the engine oil is appropriate for the ambient operating temperature. See the maintenance section for fluid specifications. Drain and replace the engine oil if necessary.
- Disconnect all applied loads and/or equipment before cranking the starter.
- Allow the engine to run, unloaded, for about 5 minutes after cold weather start up.

2.2.6 Monitoring Engine Operation



Carbon monoxide.

Can cause severe nausea, fainting, or death.

The exhaust system must be leakproof and routinely inspected.

Engine Operation. Carbon monoxide can cause severe nausea, fainting, or death. Engine exhaust gases contain poisonous carbon monoxide. Carbon monoxide is an odorless, colorless, tasteless, nonirritating gas that can cause death if inhaled for even a short time. Avoid breathing exhaust fumes when working on or near the engine. Never operate the engine inside a building. Never operate the engine where exhaust gas could seep inside or be drawn into a potentially occupied building through windows, air intake vents, or other openings.



Hazardous voltage. Electrical shock can cause injury.

Do not touch wires while the engine is running. Stop the engine and disconnect the battery leads, negative (-) lead first, before servicing the engine.

Check for the following items as the engine runs.

- Gas/air leaks: check for leakage from fuel pipes, cooling pipes, or air pipes.
- Exhaust: check for detonation, backfire, or knocking. Watch for excessive smoke or abnormal color.
- Noise: listen for rattles or other abnormal noise.
- **Electrical**: check for burnt smell from hot electrical equipment.
- Fluid leaks: check for leaking oil or coolant.
- Gauges: check oil pressure, coolant temperature, and other operating parameters.

If any abnormal or unusual conditions are detected, stop the engine immediately and perform troubleshooting diagnostics before resuming operation.

2.2.7 Stopping

- 1. Disconnect all applied loads if possible, along with power take-off (PTO) attachments, before stopping the engine.
- 2. If the engine has been running under a heavy load, reduce engine speed and allow it to run for an additional 2-3 minutes before stopping. This action will help to cool the engine slightly before shutdown.

The specific engine-stopping sequence varies depending on the equipment that this engine powers. For more information, refer to the Operation Manual for the equipment using this engine.

3.1 Introduction

Preventive maintenance is critical to prolonging the life of the engine and keeping it in optimum working condition. As the engine runs, fasteners may loosen, parts may become worn, clearances change, and oil picks up dirt and contaminants. The engine may eventually become hard to start, or may exhibit other symptoms such as decreased power output or increased fuel consumption.

Regularly scheduled maintenance will help to prevent or reduce the impact of these performance issues. To keep the engine working reliably, perform all preventive maintenance tasks described in this section.


3.2 Safety Precautions and Instructions



Accidental starting.
Can cause severe injury or death.

Disconnect the battery cables before working on the engine. Remove the negative (–) lead first when disconnecting the battery. Reconnect the negative (–) lead last when reconnecting the battery.


Disabling the engine. Accidental starting can cause severe injury or death. Before working on the engine or connected equipment, disable the engine as follows: 1) Disconnect the ignition coil. 2) Remove the battery cables, negative (–) lead first. Reconnect the negative (–) lead last when reconnecting the battery. Follow these precautions to prevent the accidental starting of the engine.

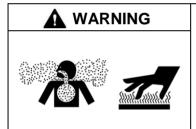


Handling caustic engine fluids and chemical products can cause severe chemical burns, nausea, fainting, or death.

Most chemicals such as used engine oil, antifreeze/coolant, rustproofing agent, inhibiting oil, degreasing agent, spray paint, and adhesives are hazardous to health. Read and follow the user information found on the packaging. Avoid inhalation and skin contact. Use only in well-ventilated areas and use a protective mask when spraying. Store engine fluids and chemical products in a locked cabinet. Contact your local recycling center for disposal information and locations.

Used engine oil. Contact with used engine oil may cause severe skin irritation. Repeated and prolonged skin exposure may have other health risks. Used engine oil is a suspected carcinogen. Avoid contact with skin. Thoroughly wash your hands and nails with soap and water shortly after handling used engine oil. Wash or dispose of clothing or rags containing used engine oil. Dispose of used engine oil in a responsible manner. Contact your local recycling center for disposal information and locations.

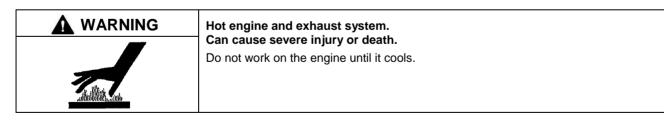

Servicing the exhaust system. Hot parts can cause severe injury or death. Do not touch hot engine parts. The engine and exhaust system components become extremely hot during operation.

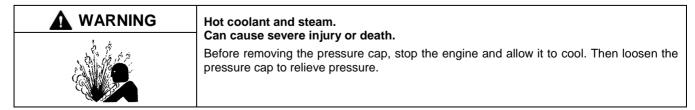

▲ CAUTION

Hazardous voltage. Electrical shock can cause injury.

Do not touch wires while the engine is running. Stop the engine and disconnect the battery leads, negative (-) lead first, before servicing the engine.

Servicing the engine when it is operating. Exposed moving parts will cause severe injury or death. Keep hands, feet, hair, clothing, and test leads away from the belts and pulleys when the engine is running. Replace guards, screens, and covers before operating the engine.



Moving parts.

Can cause severe injury or death.

Operate the engine only when all guards and electrical enclosures are in place. Stay away from moving parts while the engine is in operation.



Explosive fuel vapors.

Can cause severe injury or death.

Use extreme care when handling, storing, and using fuels.

The fuel system. Explosive fuel vapors can cause severe injury or death. Vaporized fuels are highly explosive. Use extreme care when handling and storing fuels. Store fuels in a well-ventilated area away from spark-producing equipment and out of the reach of children. Never add fuel to the tank while the engine is running because spilled fuel may ignite on contact with hot parts or from sparks. Do not smoke or permit flames or sparks to occur near sources of spilled fuel or fuel vapors. Keep the fuel lines and connections tight and in good condition. Do not replace flexible fuel lines with rigid lines. Use flexible sections to avoid fuel line breakage caused by vibration. Do not operate the engine in the presence of fuel leaks, fuel accumulation, or sparks. Repair fuel systems before resuming engine operation.

Gas fuel leaks. Explosive fuel vapors can cause severe injury or death. Fuel leakage can cause an explosion. Check the LPG vapor or natural gas fuel system for leakage by using a soap and water solution with the fuel system test pressurized to 6–8 ounces per square inch (10–14 inches water column). Do not use a soap solution containing either ammonia or chlorine because both prevent bubble formation. A successful test depends on the ability of the solution to bubble.

LPG liquid withdrawal fuel leaks. Explosive fuel vapors can cause severe injury or death. Fuel leakage can cause an explosion. Check the LPG liquid withdrawal fuel system for leakage by using a soap and water solution with the fuel system test pressurized to at least 90 psi (621 kPa). Do not use a soap solution containing either ammonia or chlorine because both prevent bubble formation. A successful test depends on the ability of the solution to bubble.

3.3 Fluid Specifications

3.3.1 Oil Recommendations

Kohler recommends Rotella T4 SAE 15W40 or equivalent.

Important:

Only use oil which meets the requirements for zinc, phosphorous, and sulfate ash content listed in Figure 9.

Oil Specifications		
Oil Type	Rotella® T4 15W40	
Zinc	1000-1200 ppm	
Phosphorous	1000-1200 ppm	
Sulfate Ash Content	1.0% or lower	

Figure 9 Engine oil Requirements

Note:

- Do not mix different brands or types of oil.
- Do not overfill or underfill the engine's lubrication system. See "Engine Specifications."

3.3.2 Coolant Recommendations

Use only a mixture of 50% long life coolant and 50% clean, softened water to inhibit rust/corrosion and prevent freezing.

A solution of 50% long life coolant provides freezing protection to -37° C (-34° F) and overheating protections to 149° C (300° F). A coolant solution with less than 50% long life coolant may not provide adequate freezing and overheating protection. Do not mix long life coolants and conventional coolants. **Do not mix different types and/or colors of long life coolants.**

3.4 Periodic Maintenance Schedule

♦ Service more frequently under extremely dusty/dirty conditions.

types.

Engine parts experience wear at different rates. Technical maintenance tasks, therefore, are required at different intervals throughout the life of the engine. Tasks performed after the first 10 hours of operation, for example, must be repeated after 20 hours, 30 hours, and so forth. Perform and repeat these tasks according to the periodic schedule below.

28 TP-7095 2/18

§ Long-life coolant is recommended. When long-life coolant is used, the change interval is 5000 hours or 5 years. Do not mix coolant

3.5 Engine

3.5.1 Check Engine Oil

Check the engine oil level daily before starting the engine. Inspect the oil for signs of deterioration, discoloration, thinning, or water contamination. If any of these conditions exist, the oil quality has been compromised and should be replaced.

Required materials:

- · Clean, dry cloth.
- Fresh engine oil. (See the section "Oil Recommendations")

Procedure:

- 1. Stop the engine and allow it to cool.
- 2. Pull out the oil dipstick. See Figure 10.

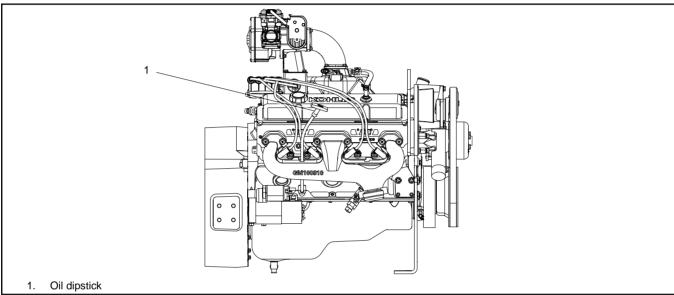


Figure 10 Oil Dipstick Location

- 3. Wipe the end of the dipstick with a clean, dry cloth.
- 4. Insert the dipstick into the engine.
- 5. Pull out the dipstick again to check the oil level. The oil level should be maintained between the Full and Add marks. See Figure 11.

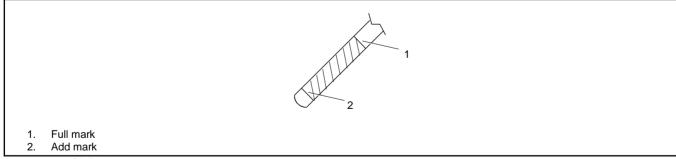


Figure 11 Oil Dipstick

- 6. If the oil level is below L, check for leaks. If no leaks are found, open the oil fill cap. Wipe the oil fill cap clean, and add oil up to the Full mark. See Figure 12.
- 7. If oil leaks are found, repair them before operating the engine.

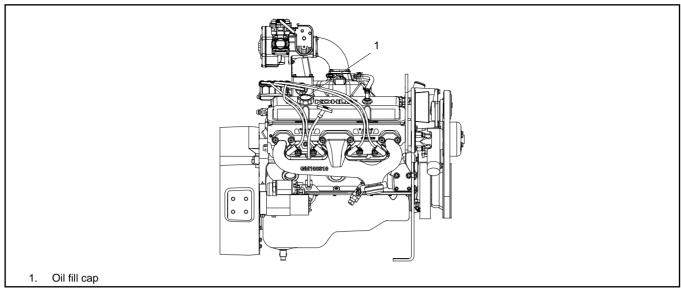


Figure 12 Oil Fill Cap

3.5.2 Change Engine Oil and Oil Filter

Change the engine oil and filter every 150 hours of operation. Replace the engine oil and filter more often if the machine is being run in excessively dirty or dusty conditions.



Accidental starting. Can cause severe injury or death.

Disconnect the battery cables before working on the engine. Remove the negative (–) lead first when disconnecting the battery. Reconnect the negative (–) lead last when reconnecting the battery.

Disabling the engine. Accidental starting can cause severe injury or death. Before working on the engine or connected equipment, disable the engine as follows: 1) Disconnect the ignition coil. 2) Remove the battery cables, negative (–) lead first. Reconnect the negative (–) lead last when reconnecting the battery. Follow these precautions to prevent the accidental starting of the engine.



Handling caustic engine fluids and chemical products can cause severe chemical burns, nausea, fainting, or death.

Most chemicals such as used engine oil, antifreeze/coolant, rustproofing agent, inhibiting oil, degreasing agent, spray paint, and adhesives are hazardous to health. Read and follow the user information found on the packaging. Avoid inhalation and skin contact. Use only in well-ventilated areas and use a protective mask when spraying. Store engine fluids and chemical products in a locked cabinet. Contact your local recycling center for disposal information and locations.


Used engine oil. Contact with used engine oil may cause severe skin irritation. Repeated and prolonged skin exposure may have other health risks. Used engine oil is a suspected carcinogen. Avoid contact with skin. Thoroughly wash your hands and nails with soap and water shortly after handling used engine oil. Wash or dispose of clothing or rags containing used engine oil. Dispose of used engine oil in a responsible manner. Contact your local recycling center for disposal information and locations.



Explosive fuel can cause fires and severe burns.

If a gaseous odor is detected, ventilate the area and contact an authorized service technician.

The fuel system. Explosive fuel vapors can cause severe injury or death. Vaporized fuels are highly explosive. Use extreme care when handling and storing fuels. Store fuels in a well-ventilated area away from spark-producing equipment and out of the reach of children. Never add fuel to the tank while the engine is running because spilled fuel may ignite on contact with hot parts or from sparks. Do not smoke or permit flames or sparks to occur near sources of spilled fuel or fuel vapors. Keep the fuel lines and connections tight and in good condition. Do not replace flexible fuel lines with rigid lines. Use flexible sections to avoid fuel line breakage caused by vibration. Do not operate the engine in the presence of fuel leaks, fuel accumulation, or sparks. Repair fuel systems before resuming engine operation.

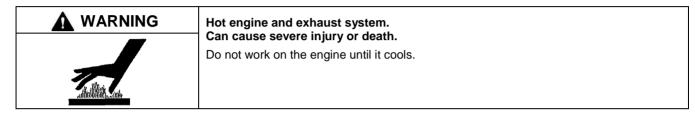

Servicing the exhaust system. Hot parts can cause severe injury or death. Do not touch hot engine parts. The engine and exhaust system components become extremely hot during operation.

Required materials:

- Fresh engine oil (refer to the oil recommendations in the maintenance section)
- · Collection container for drained oil
- Replacement oil filter
- Oil filter wrench
- Clean, dry cloth
- · Drop cloth to protect work surface

Change the engine oil and oil filter:

- 1. Stop the engine and allow it to cool.
- 2. Place a drop cloth and collection container beneath the oil drain valve. See Figure 13.

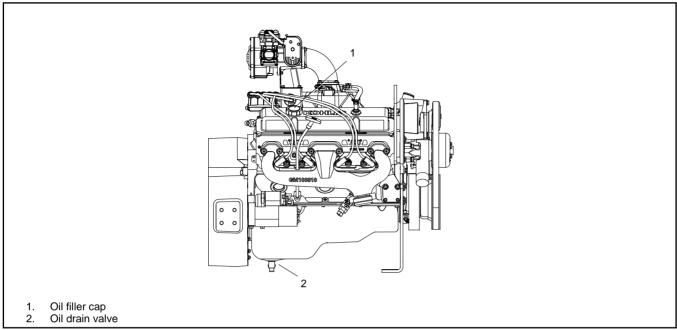


Figure 13 Oil Fill and Drain Valve Location

- 3. Open the oil drain valve and allow the oil to drain into the container.
- 4. Using an oil filter wrench, remove the old oil filter.
- 5. Wipe the oil filter installation surface clean with a dry cloth. Inspect the installation surface for damage. See Figure 14.

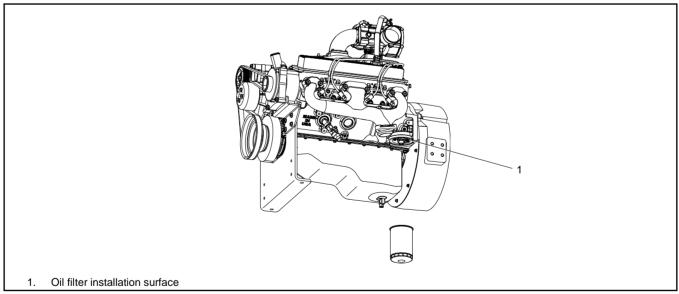


Figure 14 Oil Filter Installation Location

- 6. Apply a thin film of fresh oil to the gasket of the new oil filter.
- 7. Lightly screw in the new oil filter by hand until you feel resistance and then tighten the filter an additional 3/4 turn.
- 8. Close the oil drain valve.
- Add fresh oil through the oil filler cap.
- 10. Check engine oil level, making sure that the level lies between the Full and Add marks on the dipstick. See Figure 15.

- 11. Install and tighten the oil filler cap.
- 12. Start and run the engine without load for approximately 5 minutes. This will ensure that the fresh engine oil is distributed to each friction surface.

Note:

Dispose of used engine oil and oil filters in accordance with local environmental regulations.

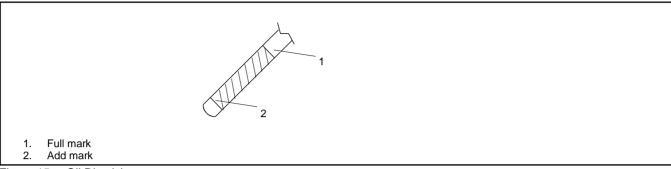


Figure 15 Oil Dipstick

3.5.3 Check and Clean the Air Filter


Refer to the Operation Manual for the equipment using this engine.


3.5.4 Replace the Air Filter

Refer to the Operation Manual for the equipment using this engine.

3.5.5 Check, Adjust and Replace the Spark Plugs

Damaged, loose, or improperly adjusted spark plugs can overheat or cause engine problems such as misfiring, hesitation, or knocking. Check the spark plugs after every 500 hours of operation

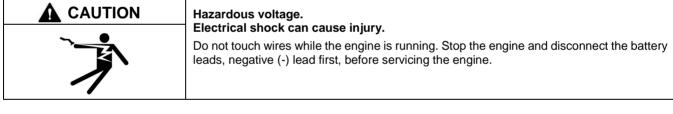

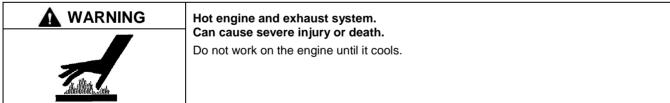

Servicing the exhaust system. Hot parts can cause severe injury or death. Do not touch hot engine parts. The engine and exhaust system components become extremely hot during operation.

Required materials:

- Spark plug wrench
- Torque wrench
- Spark plug gap tool
- · Clean, dry cloth
- Replacement spark plugs. See spark plug specifications in the Specifications section.

Procedure:

1. Stop the engine and allow it to cool.

Note:

Label or mark spark plug wires before disconnecting. Spark plug wires must be reconnected in the same order as removed.

2. Use a cloth to wipe dirt and oil away from the area around each of the four spark plug wires. See Figure 16.

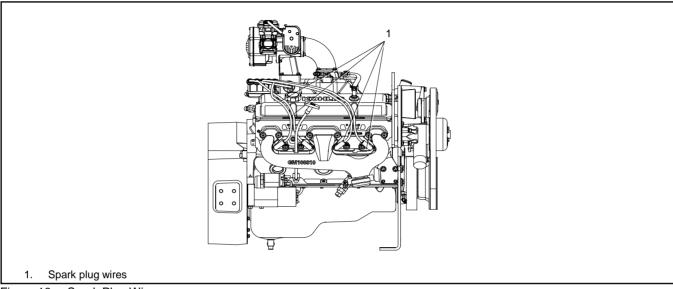


Figure 16 Spark Plug Wires

- 3. Disconnect the spark plug wires.
- 4. Use a spark plug wrench to remove the spark plugs.
- 5. Inspect the body of each spark plug for cracks, damage, or discoloration and check that the spark plug washer is in good condition.
- 6. Inspect the electrodes on each spark plug. See Figure 17. The electrodes should be light brown. If the electrode appears to be burned, covered with soot, or fouled with oil, replace the spark plug.

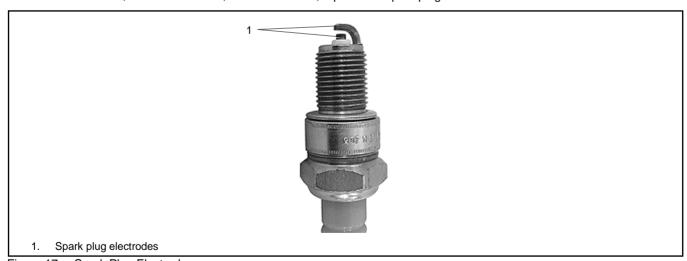


Figure 17 Spark Plug Electrodes

7. Use a spark plug gap tool to measure the gap on each spark plug. Adjust the gap to specification. See Figure 18.

Spark Plug Gap	
KG6208	0.76 mm (0.03 in.)

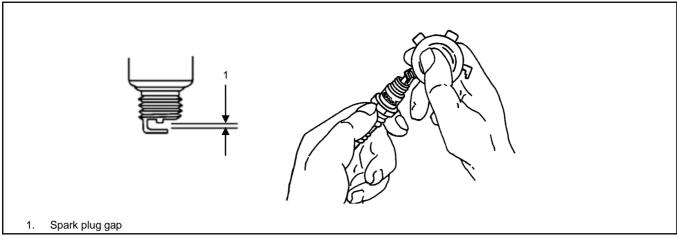


Figure 18 Spark Plug Gap

- 8. Thread the spark plugs into the cylinder head.
- 9. Tighten the spark plugs to specification.

Spark Plug Torque		
KG6208	27 Nm (20 ft. lb.)	

10. Reconnect the spark plug wires to the spark plugs.

3.5.6 Ignition Timing

The ignition system consists of a distributor and an ignition coil which provide voltage to the spark plugs. The ECM uses information from the camshaft and crankshaft position sensors to optimize ignition timing. Contact your Kohler authorized distributor/dealer for assistance with ignition-related performance issues.

3.6 Electrical System

3.6.1 Check Battery and Connections

WARNING

Sulfuric acid in batteries. Can cause severe injury or death.

Wear protective goggles and clothing. Battery acid may cause blindness and burn skin.



Explosion.

Can cause severe injury or death.

Relays in the battery charger cause arcs or sparks.

Locate the battery in a well-ventilated area. Isolate the battery charger from explosive fumes.

Battery electrolyte is a diluted sulfuric acid. Battery acid can cause severe injury or death. Battery acid can cause blindness and burn skin. Always wear splashproof safety goggles, rubber gloves, and boots when servicing the battery. Do not open a sealed battery or mutilate the battery case. If battery acid splashes in the eyes or on the skin, immediately flush the affected area for 15 minutes with large quantities of clean water. Seek immediate medical aid in the case of eye contact. Never add acid to a battery after placing the battery in service, as this may result in hazardous spattering of battery acid.

Battery acid cleanup. Battery acid can cause severe injury or death. Battery acid is electrically conductive and corrosive. Add 500 g (1 lb.) of bicarbonate of soda (baking soda) to a container with 4 L (1 gal.) of water and mix the neutralizing solution. Pour the neutralizing solution on the spilled battery acid and continue to add the neutralizing solution to the spilled battery acid until all evidence of a chemical reaction (foaming) has ceased. Flush the resulting liquid with water and dry the area.

Battery gases. Explosion can cause severe injury or death. Battery gases can cause an explosion. Do not smoke or permit flames or sparks to occur near a battery at any time, particularly when it is charging. Do not dispose of a battery in a fire. To prevent burns and sparks that could cause an explosion, avoid touching the battery terminals with tools or other metal objects. Remove all jewelry before servicing the equipment. Discharge static electricity from your body before touching batteries by first touching a grounded metal surface away from the battery. To avoid sparks, do not disturb the battery charger connections while the battery is charging. Always turn the battery charger off before disconnecting the battery connections. Ventilate the compartments containing batteries to prevent accumulation of explosive gases.

Battery short circuits. Explosion can cause severe injury or death. Short circuits can cause bodily injury and/or equipment damage. Disconnect the battery before maintenance. Remove all jewelry before servicing the equipment. Use tools with insulated handles. Remove the negative (–) lead first when disconnecting the battery. Reconnect the negative (–) lead last when reconnecting the battery. Never connect the negative (–) battery cable to the positive (+) connection terminal of the starter solenoid. Do not test the battery condition by shorting the terminals together.

Check the condition of the battery and connections according to the intervals specified in "Periodic Maintenance Schedule." Specific items to look for are:

- Loose or missing fasteners on the battery hold-down.
- Loose cable connections.
- Frayed, cut, or broken cables.
- Cracks in battery cell cover or case.
- Dirt, oil, or water contamination.
- Corrosion at battery terminals.
- Reduction in voltage or ability to hold a charge.

Repair or replace the battery and/or components as needed. Use only replacement parts that are equivalent to the original equipment. Contact your Kohler authorized distributor/dealer for assistance.

3.6.2 **Check and Adjust the Drive Belt**

A worn, stretched, or damaged drive belt may fail, especially under heavy loads. Check the condition of the drive belt regularly and adjust belt tension as needed.



Accidental starting. Can cause severe injury or death.

Disconnect the battery cables before working on the engine. Remove the negative (-) lead first when disconnecting the battery. Reconnect the negative (-) lead last when reconnecting the battery.

Disabling the engine. Accidental starting can cause severe injury or death. Before working on the engine or connected equipment, disable the engine as follows: 1) Disconnect the ignition coil. 2) Remove the battery cables, negative (-) lead first. Reconnect the negative (-) lead last when reconnecting the battery. Follow these precautions to prevent the accidental starting of the engine.



Moving parts.

Can cause severe injury or death.

Operate the engine only when all guards and electrical enclosures are in place. Stay away from moving parts while the engine is in operation.

Servicing the engine when it is operating. Exposed moving parts will cause severe injury or death. Keep hands, feet, hair, clothing, and test leads away from the belts and pulleys when the engine is running. Replace guards, screens, and covers before operating the engine.

Check drive belt condition:

- 1. Stop the engine and allow it to cool.
- 2. Locate the drive belt. See Figure 19.

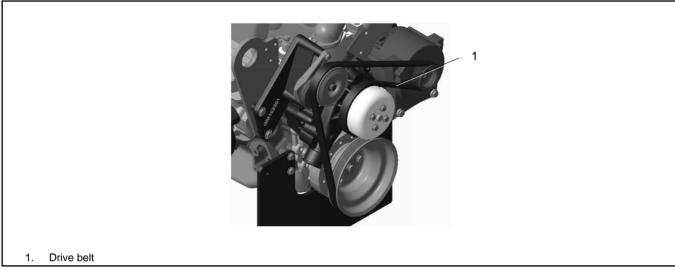


Figure 19 Drive Belt Location

- 3. Inspect the drive belt. Look for signs of cracking, separation, cuts, or other damage. See Figure 20.
- 4. If any abnormality is found, replace the drive belt.

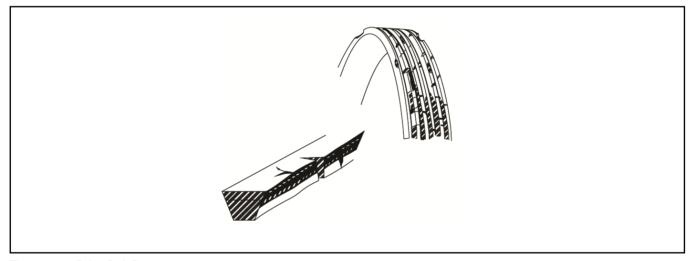


Figure 20 Drive Belt Damage

3.6.3 Replace the Drive Belt




Accidental starting.

Can cause severe injury or death.

Disconnect the battery cables before working on the engine. Remove the negative (–) lead first when disconnecting the battery. Reconnect the negative (–) lead last when reconnecting the battery.

Disabling the engine. Accidental starting can cause severe injury or death. Before working on the engine or connected equipment, disable the engine as follows: 1) Disconnect the ignition coil. 2) Remove the battery cables, negative (–) lead first. Reconnect the negative (–) lead last when reconnecting the battery. Follow these precautions to prevent the accidental starting of the engine.

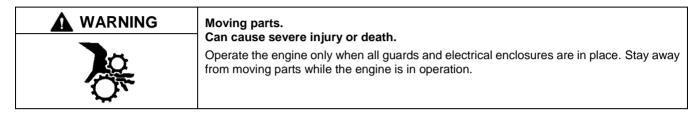

Servicing the engine when it is operating. Exposed moving parts will cause severe injury or death. Keep hands, feet, hair, clothing, and test leads away from the belts and pulleys when the engine is running. Replace guards, screens, and covers before operating the engine.

Required materials:

- Replacement drive belt.
- 14 mm socket and wrench

NOTICE

Do not replace a drive belt with one that is old or worn. An old or worn replacement may not last as long as a new drive belt and may not hold consistent tension, especially under load.

Procedure

1. Use a socket wrench to turn the tensioner pulley clockwise against the spring force. See Figure 21.

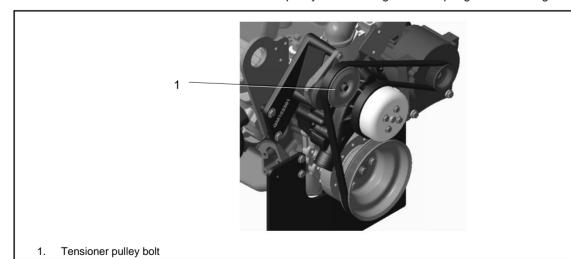


Figure 21 Tensioner Location

- 2. With the tensioner pulley disengaged, remove and discard the drive belt and then release the tensioner.
- 3. Route a new drive belt following the diagram shown in Figure 22.

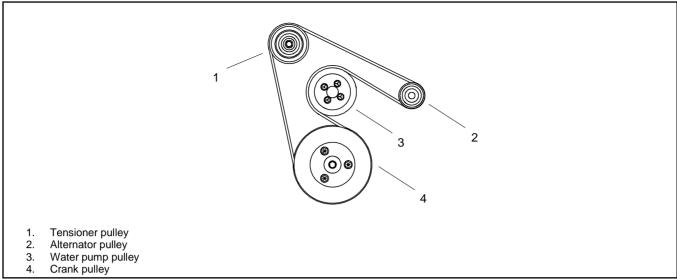


Figure 22 Drive Belt Diagram

- 4. While using the socket wrench to turn the tensioner pulley clockwise, slip the belt around the tensioner pulley. Release the tensioner.
- 5. Make sure that the belt is properly aligned with the grooves on each pulley. See Figure 23.


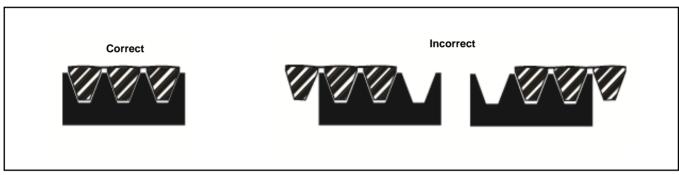


Figure 23 Belt Alignment

3.6.4 Check Wiring and Electrical Connections

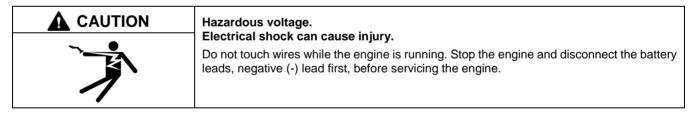


Check the condition of the wiring and electrical connections after every 10 hours of operation. Specific items to look for are:

- Exposed (bare) wires.
- Cuts or abrasions in wire insulation.
- Loose connections at screw terminals.
- Loose, dirty, or cracked electrical connectors.
- Melted or scorched wiring, insulation, or connectors.

Repair or replace faulty electrical components before operating the machine.

3.7 Cooling System

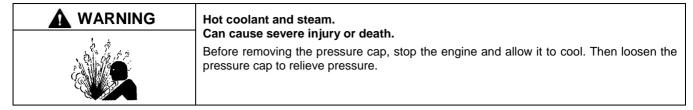

3.7.1 Check Coolant Level and Condition

The engine coolant level should be checked daily before starting the engine. Insufficient coolant will cause the engine to overheat.

- 1. Open the radiator cap slowly in order to release the pressure in the system.
- 2. Maintain the coolant level in the coolant overflow bottle between the High and Low markings. See "Coolant Recommendations."

Note:

Periodically check the coolant level by removing the radiator's pressure cap. Do not rely solely on the level in the coolant overflow bottle.

Install and tighten the radiator cap.

Check coolant condition:

Engine coolant should be uniformly colored and transparent. Replace the coolant if it is dirty, discolored, or fouled with oil or rust particles.

Rusty coolant may indicate corrosion inside the radiator. Oil in the coolant indicates a leak somewhere in the lubrication system. Contact a Kohler authorized distributor/dealer if either of these conditions exist.

3.7.2 Check Hoses and Clamps

Check the condition of the coolant system hoses and clamps every 10 hours of operation.

Hoses:

- Inspect the hoses for cracks, abrasions, cuts, bulges, swollen ends, or leaks.
- Squeeze the hoses. They should yield slightly to moderate pressure and not feel too hard, too soft, or spongy.
- Replace faulty hoses before operating the engine.

Clamps:

- · Verify that all clamps are in place.
- Adjust and tighten clamps as needed.

3.7.3 Draining and Replacing the Coolant

There are no coolant plugs or drainage valves on the engine. To drain and replace the coolant, refer to the radiator procedures in the Operation Manual for the equipment using this engine.

3.8 Fuel System



Explosive fuel vapors.
Can cause severe injury or death.

Use extreme care when handling, storing, and using fuels.

The fuel system. Explosive fuel vapors can cause severe injury or death. Vaporized fuels are highly explosive. Use extreme care when handling and storing fuels. Store fuels in a well-ventilated area away from spark-producing equipment and out of the reach of children. Never add fuel to the tank while the engine is running because spilled fuel may ignite on contact with hot parts or from sparks. Do not smoke or permit flames or sparks to occur near sources of spilled fuel or fuel vapors. Keep the fuel lines and connections tight and in good condition. Do not replace flexible fuel lines with rigid lines. Use flexible sections to avoid fuel line breakage caused by vibration. Do not operate the engine in the presence of fuel leaks, fuel accumulation, or sparks. Repair fuel systems before resuming engine operation.

Gas fuel leaks. Explosive fuel vapors can cause severe injury or death. Fuel leakage can cause an explosion. Check the LPG vapor or natural gas fuel system for leakage by using a soap and water solution with the fuel system test pressurized to 6–8 ounces per square inch (10–14 inches water column). Do not use a soap solution containing either ammonia or chlorine because both prevent bubble formation. A successful test depends on the ability of the solution to bubble.

LPG liquid withdrawal fuel leaks. Explosive fuel vapors can cause severe injury or death. Fuel leakage can cause an explosion. Check the LPG liquid withdrawal fuel system for leakage by using a soap and water solution with the fuel system test pressurized to at least 90 psi (621 kPa). Do not use a soap solution containing either ammonia or chlorine because both prevent bubble formation. A successful test depends on the ability of the solution to bubble.

Note:

Fuel system components are not adjustable and cannot be serviced. Contact your authorized KOHLER authorized distributor/dealer for replacements.

3.8.1 Check Fuel Supply Pipe and Connections

With the fuel valve fully opened and the engine stopped, check all fuel system connections and lines for leaks using a soapy water solution. Correct any leaks before restarting the engine. **Do not start the engine if you can smell leaking gas.** Have any necessary service performed by a Kohler authorized distributor/dealer.

3.8.2 Check Fuel Level (LPG only)

With the fuel valve on the LPG tank fully closed and the engine stopped, check the fuel gauge on the LPG tank. Make sure that the tank contains enough fuel for sustained operation. If not, refill the tank before restarting the engine.

Fully open the fuel valve on the LPG tank. Check all fuel supply connections and lines for leaks using a soapy water solution. Correct any leaks before restarting the engine. Have any necessary service performed by a Kohler authorized distributor/dealer or qualified LPG/NG technician only.

4.1 Introduction

The following chart will help you to identify and solve some of the basic operating problems that may occur while operating this engine.

Do not attempt to service or replace major engine components, or any items that require special timing or adjustment procedures. This work should be performed only by a Kohler authorized distributor/dealer.

4.2 Troubleshooting

Problem	Possible Cause	Solution	
	No fuel	Check fuel supply.	
Will Not Start	Incorrect fuel	Make sure fuel system is configured properly for LPG or NG supply.	
	Dirty/restricted fuel system	Check fuel system and clean components as needed.	
	Incorrect oil level	Check engine oil level; add as needed.	
	Engine overloaded	Disconnect or reduce loads.	
	Faulty spark plug or wire	Inspect, adjust, or replace as needed.	
	No fuel	Check fuel supply.	
	Incorrect fuel	Make sure fuel system is configured properly for LPG or NG supply.	
Lloyd Starting	Restricted fuel flow	Make sure fuel supply valves are open; check for air intake system leakage.	
Hard Starting	Dirty/restricted fuel system	Check fuel system and clean components as needed.	
	Incorrect oil level	Check engine oil level; add as needed.	
	Engine overloaded	Disconnect or reduce loads.	
	Faulty spark plug or wire	Inspect, adjust, or replace as needed.	
	No fuel	Check fuel supply.	
Stops Suddenly	Dirty/restricted fuel system	Check fuel system and clean components as needed.	
	Incorrect oil level	Check engine oil level; add as needed.	
	Engine overloaded	Disconnect or reduce loads.	
	Incorrect fuel	Make sure fuel system is configured properly for LPG or NG supply.	
	Low fuel pressure	Check and adjust fuel pressure.	
	Incorrect oil level	Check engine oil level; add as needed.	
	Engine overloaded	Disconnect or reduce loads.	
Lacks Power	Faulty spark plug or wire	Inspect, adjust, or replace as needed.	
	Dirty/restricted fuel system	Check fuel system and clean components as needed.	
	Air induction system leak	Inspect air induction system.	
	Damaged turbocharger (If applicable)	Inspect turbocharger compressor and turbine blades for damage and/or contact against housing.	
	Incorrect fuel	Make sure fuel system is configured properly for LPG or NG supply.	
	Dirty/restricted fuel system	Check fuel system and clean components as needed.	
Operates Erratically or Unevenly	Low fuel supply pressure Check and adjust.		
•	Engine overloaded Disconnect or reduce loads.		
	Loose wiring at shut-off valve(s)	Check wiring and repair connections.	
	Faulty spark plug or wire Inspect, adjust, or replace as needed		
	Dirty air filter	Inspect and replace as needed.	

Problem	Possible Cause	Solution	
	Incorrect fuel	Make sure fuel system is configured properly for LPG or NG supply.	
Knocks or Pings	Engine overloaded	Disconnect or reduce loads.	
	Faulty spark plug or wire	Inspect, adjust, or replace as needed.	
	Dirty/restricted fuel system	Check fuel system and clean components as needed.	
	Dirty air filter	Inspect and replace as needed.	
	Boost pressure too high (if applicable)	Check for stuck wastegate, check for leak in wastegate boost line (if applicable).	
	Excessive intake manifold temperature	Check charge air cooler for debris and clean as needed (if applicable).	
	Incorrect fuel	Make sure fuel system is configured properly for LPG or NG supply.	
Skine or Miefires	Faulty spark plug or wire	Inspect, adjust, or replace as needed.	
Skips or Misfires	Dirty/restricted fuel system	Check fuel system and clean components as needed.	
	Dirty air filter	Inspect and replace as needed.	
	Incorrect fuel	Make sure fuel system is configured properly for LPG or NG supply.	
Packfires	Faulty spark plug or wire	Inspect, adjust, or replace as needed.	
Backfires	Dirty/restricted fuel system	Check fuel system and clean components as needed.	
	Dirty air filter	Inspect and replace as needed.	
	Incorrect fuel	Make sure fuel system is configured properly for LPG or NG supply.	
	Dirty/restricted fuel system	Check fuel system and clean components as needed.	
Overheats	Incorrect oil level	Check engine oil level; add as needed.	
Overneats	Engine overloaded	Disconnect or reduce loads.	
	Faulty spark plug or wire	Inspect, adjust, or replace as needed.	
	Faulty engine coolant temperature sender	Inspect the engine coolant temperature sender and wires and replace or repair as needed.	
	Faulty spark plug or wire	Inspect, adjust, or replace as needed.	
Consumes Excess Fuel	Dirty/restricted air cleaner element	Clean or replace.	
	Incorrect fuel pressure	Check and adjust fuel pressure.	
ECM Does Not Store DTC	Faulty electrical connections, components, or wiring	Contact an authorized Kohler distributor/dealer.	
Erratic operation	Air induction system leak	Inspect air induction system.	





Hot engine and exhaust system. Can cause severe injury or death.

Do not work on the engine until it cools.

▲ WARNING



Moving parts.

Can cause severe injury or death.

Operate the engine only when all guards and electrical enclosures are in place. Stay away from moving parts while the engine is in operation.

CAUTION



Hazardous voltage.

Electrical shock can cause injury.

Do not touch wires while the engine is running. Stop the engine and disconnect the battery leads, negative (-) lead first, before servicing the engine.

MARNING



Handling caustic engine fluids and chemical products can cause severe chemical burns, nausea, fainting, or death.

Most chemicals such as used engine oil, antifreeze/coolant, rustproofing agent, inhibiting oil, degreasing agent, spray paint, and adhesives are hazardous to health. Read and follow the user information found on the packaging. Avoid inhalation and skin contact. Use only in well-ventilated areas and use a protective mask when spraying. Store engine fluids and chemical products in a locked cabinet. Contact your local recycling center for disposal information and locations.

5.1 Preparation

If you plan to take the engine out of service for an extended period of time, prepare the engine according to the procedures described in this section. These preventive measures will help to protect your engine from the cumulative effects of rust and deterioration while it is not being used.

- Perform scheduled periodic maintenance tasks.
- Make all necessary repairs and adjustments.
- Close the fuel valves and disconnect the fuel supply.
- Clean the outside of the engine. Wipe away all visible dirt, dust, and oil.
- · Remove the starting key.

5.2 Short-Term Storage (Less than 30 Days)

- Disconnect and remove the battery.
- Cover or cap all intake and exhaust ports, including fuel lines, air filter, and engine exhaust.
- Cover the engine with a clean, dry cloth.
- Store the engine in a secure, dry location away from trespassers, children, and animals.

5.3 Long-Term Storage (More than 30 Days)

In addition to the short-term tasks, perform the following tasks before placing the engine in storage:

- · Change the engine oil and filter.
- Remove the drive belt.
- Protect the cylinders from rust:
 - Disconnect the spark plug wires and remove the spark plugs.
 - Squirt approximately 30 ml (1 ounce) of fresh engine oil into each cylinder.
 - Manually rotate the crankshaft 10–15 times to distribute the oil evenly in the cylinders.
 - o Install the spark plugs and reconnect the spark plug wires.
- Cover all exposed metal parts with a suitable protectant.
- Coat all electrical connectors with a suitable protectant.

5.4 Maintenance while in Storage

- Inspect the engine regularly (at least once a month). Check for signs of rust or leaks.
- Periodically test the battery voltage and recharge as needed. The battery may lose charge even when disconnected.

5.5 Removal from Storage

- Remove protective cloths, covers, and caps from the engine.
- Clean protectant from exposed metal parts and electrical components.
- · Reinstall the drive belt.
- Check fluid levels and fill as needed.
- Connect the battery.
- Connect the fuel supply and open fuel valves.
- Start the engine and allow it to run for several minutes without load. Check for leaks and watch for signs of abnormal operation.

NOTE:

The engine may smoke when started for the first time after being taken out of storage. This is normal and occurs as the engine burns away the protective oil coating inside the cylinders.

Check oil pressure and fuel pressure gauges to make sure that the engine is operating normally.

6.1 Engine Specifications

Item	Specifications
Engine Model	KG6208
Block Type	V-8
Number of Cylinders	8
Cylinder Bore	101.6 mm (4 in.)
Piston Stroke	95.25 mm (3.75 in.)
Displacement	6.2 L (377 in. ³)
Rated Output @ 1800 rpm	75.0 kW (100.6 hp), NG 77.0 kW (103.3 hp), LPG
Fuel Type	Propane, Liquid Petroleum Gas (LPG) or Natural Gas (NG). See "Fuel Specifications."
Oil Type / Weight	Kohler recommends Rotella® T4 15W40 or equivalent. Only use oil which meets the requirements for zinc, phosphorous, and sulfate ash content. See "Oil Recommendations."
Oil Dry Fill Capacity	6.2 L (6 qt.)
Rotating Direction of Crankshaft	Counterclockwise (face to flywheel)
Compression Ratio	10.5:1
Cylinder Fire Order	1-8-4-3-6-5-7-2
Lubricating Style	Pressurized
Starting Style	Electric
Net Weight (Dry)	606.5 kg (589.5 lb.)
Overall Dimensions	728 mm x 665 mm x 680 mm (28.7 in. x 26.2 in. x 26.8 in.)
Aspiration	Natural

6.2 Main Components Specifications

Itam	Specifications		
Item	KG6208		
Oil Filter/ Breather	Paper, Rocker arm covers, Top oil filter		
Oil Pump	Gear type		
Water Pump	Centrifugal type; no fan		
Flywheel	Flywheel with attachment provisions for flywheel adapter		
Thermostat Settings, Fully Open at	71°C (160°F)		
Alternator	Rated voltage 14 V, rated current 130 A		
Electric Starter	1.2 kW, speed reduction type		
Ignition System	Distributor		
Spark Plug	GM101273 (use only genuine Kohler service parts)		
Crankcase Ventilation	Closed crankcase ventilation		

6.3 Adjustment Specifications

Item	Specifications		
rem	KG6208		
Spark Plug Gap, mm (in.)	0.76 (0.030)		
Direct Acting Electronic Pressure Regulator (DEPR)	Nonadjustable		
Throttle	Nonadjustable, ECM controlled		
Air–Fuel Mixer	Tamper-proof; nonadjustable		

6.4 Torque Specifications

Item	Torque	
Spark Plugs - KG6208, Nm (ft. lb.)	27 (20)	

6.5 Standard Torque Specifications

American Standard Fasteners Torque Specifications - Assembled into Cast Iron or Steel				Assembled into	
Size	Torque Measurement	Grade 2	Grade 5	Grade 8	Aluminum Grade 2 or 5
8-32	Nm (in. lb.)	1.8 (16)	2.3 (20)	-	
10-24	Nm (in. lb.)	2.9 (26)	3.6 (32)	-	
10-32	Nm (in. lb.)	2.9 (26)	3.6 (32)	-	
1/4-20	Nm (in. lb.)	6.8 (60)	10.8 (96)	14.9 (132)	
1/4-28	Nm (in. lb.)	8.1 (72)	12.2 (108)	16.3 (144)	
5/16-18	Nm (in. lb.)	13.6 (120)	21.7 (192)	29.8 (264)	
5/16-24	Nm (in. lb.)	14.9 (132)	23.1 (204)	32.5 (288)	
3/8-16	Nm (ft. lb.)	24.0 (18)	38.0 (28)	53.0 (39)	
3/8-24	Nm (ft. lb.)	27.0 (20)	42.0 (31)	60.0 (44)	
7/16-14	Nm (ft. lb.)	39.0 (29)	60.0 (44)	85.0 (63)	
7/16-20	Nm (ft. lb.)	43.0 (32)	68.0 (50)	95.0 (70)	See Note 3
1/2-13	Nm (ft. lb.)	60.0 (44)	92.0 (68)	130.0 (96)	
1/2-20	Nm (ft. lb.)	66.0 (49)	103.0 (76)	146.0 (108)	
9/16-12	Nm (ft. lb.)	81.0 (60)	133.0 (98)	187.0 (138)	
9/16-18	Nm (ft. lb.)	91.0 (67)	148.0 (109)	209.0 (154)	
5/8-11	Nm (ft. lb.)	113.0 (83)	183.0 (135)	259.0 (191)	
5/8-18	Nm (ft. lb.)	128.0 (94)	208.0 (153)	293.0 (216)	
3/4-10	Nm (ft. lb.)	199.0 (147)	325.0 (240)	458.0 (338)	
3/4-16	Nm (ft. lb.)	222.0 (164)	363.0 (268)	513.0 (378)	
1-8	Nm (ft. lb.)	259.0 (191)	721.0 (532)	1109.0 (818)	
1-12	Nm (ft. lb.)	283.0 (209)	789.0 (582)	1214.0 (895)	1
	,	Metric Fasteners To	orque Specifications	, ,	
	Torque	Asse	mbled into Cast Iron or	Steel	Assembled into
Size	Measurement	Grade 5.8	Grade 8.8	Grade 10.9	Aluminum Grade 5 or 8.8
M6 x 1.00	Nm (ft. lb.)	6.2 (4.6)	12 (9)	13.6 (10)	
M8 x 1.25	Nm (ft. lb.)	15.0 (11)	29.6 (22)	33.0 (24)	
M8 x 1.00	Nm (ft. lb.)	16.0 (11)	24.0 (18)	34.0 (25)	
M10 x 1.50	Nm (ft. lb.)	30.0 (22)	52.5 (39)	65.0 (48)	
M10 x 1.25	Nm (ft. lb.)	31.0 (23)	47.0 (35)	68.0 (50)	
M12 x 1.75	Nm (ft. lb.)	53.0 (39)	80.0 (59)	115.0 (85)	
M12 x 1.50	Nm (ft. lb.)	56.0 (41)	85.0 (63)	122.0 (90)	See Note 3
M14 x 2.00	Nm (ft. lb.)	83.0 (61)	135.0 (100)	180.0 (133)	
M14 x 1.50	Nm (ft. lb.)	87.0 (64)	133.0 (98)	190.0 (140)	
M16 x 2.00	Nm (ft. lb.)	127.0 (94)	194.0 (143)	278.0 (205)	
M16 x 1.50	Nm (ft. lb.)	132.0 (97)	201.0 (148)	287.0 (212)	
M18 x 2.50	Nm (ft. lb.)	179.0 (132)	273.0 (201)	390.0 (288)	
M18 x 1.50	Nm (ft. lb.)	189.0 (140)	289.0 (213)	413.0 (305)	

Note:

- 1. The torque values above are general guidelines. Always use the torque values specified in the service manuals and/or assembly drawings when they differ from above torque values.
- 2. The torque values above are based on new plated threads. Increase torque values by 15% if non-plated threads are used.
- 3. Hardware threaded into aluminum must have either two diameters of thread engagement or a 30% or more reduction in the torque to prevent stripped threads.
- 4. Torque values are calculated as equivalent stress loading on American hardware with an approximate preload of 90% of the yield strength and a friction coefficient of 0.125.