
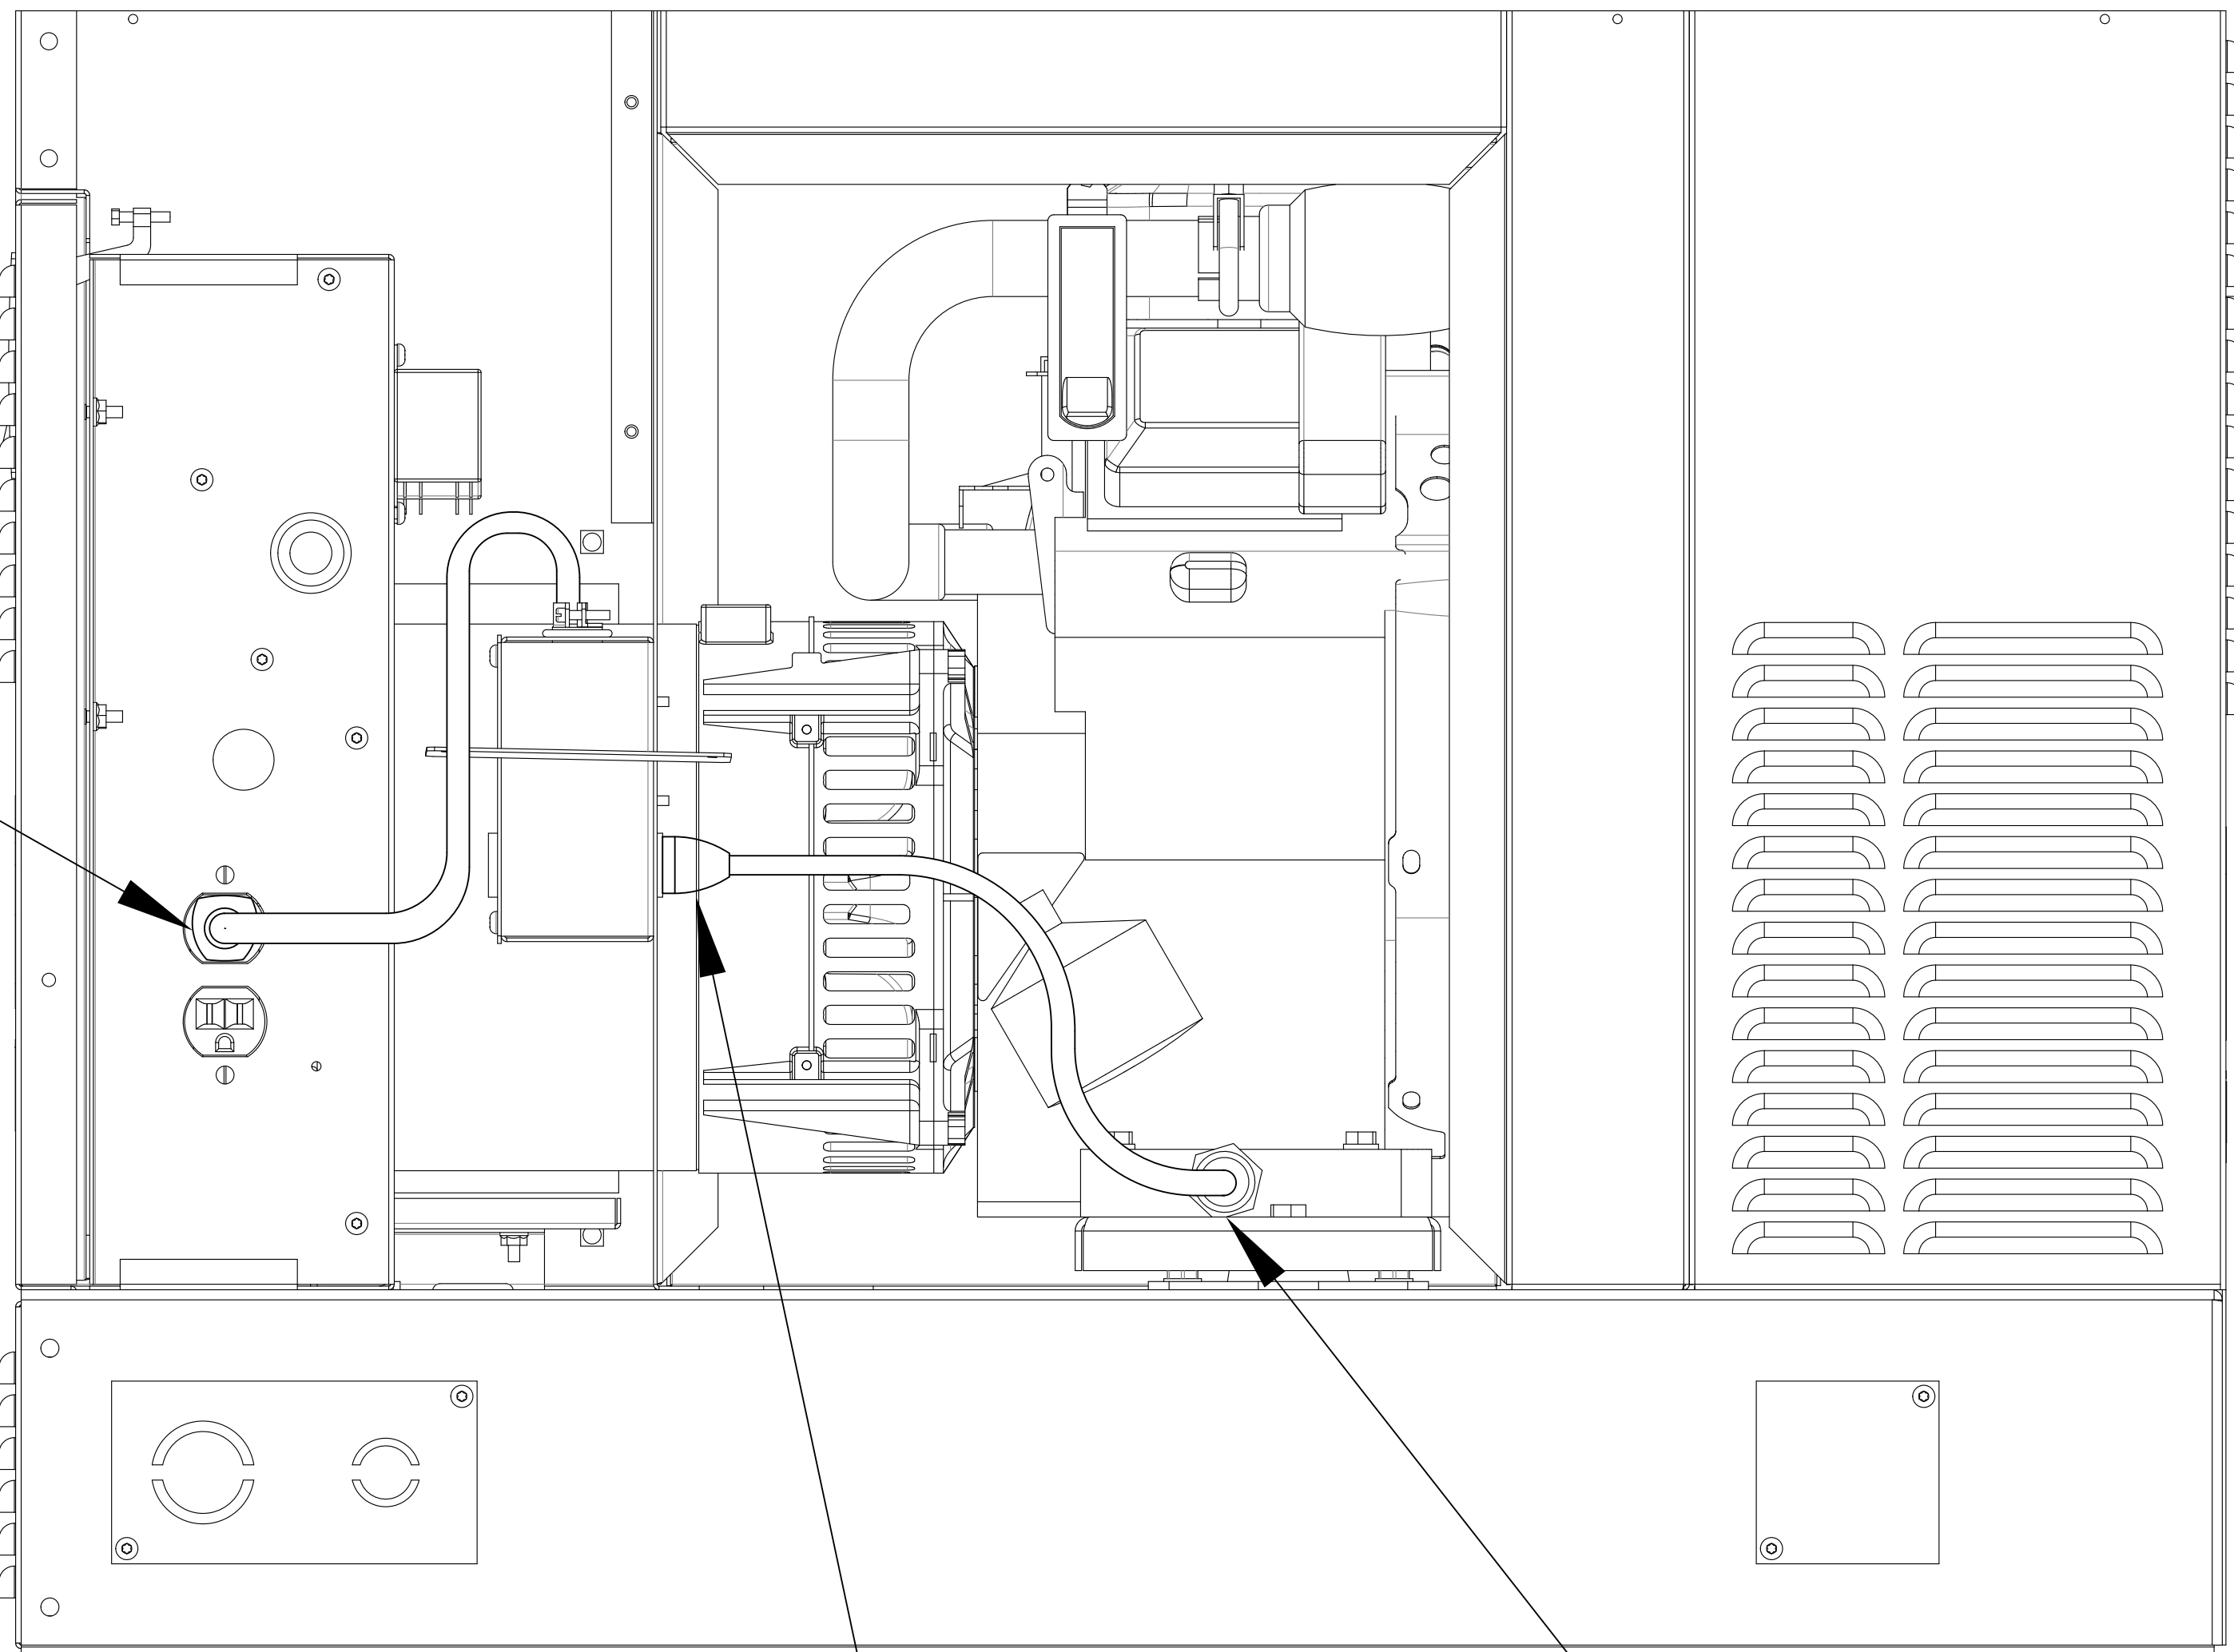
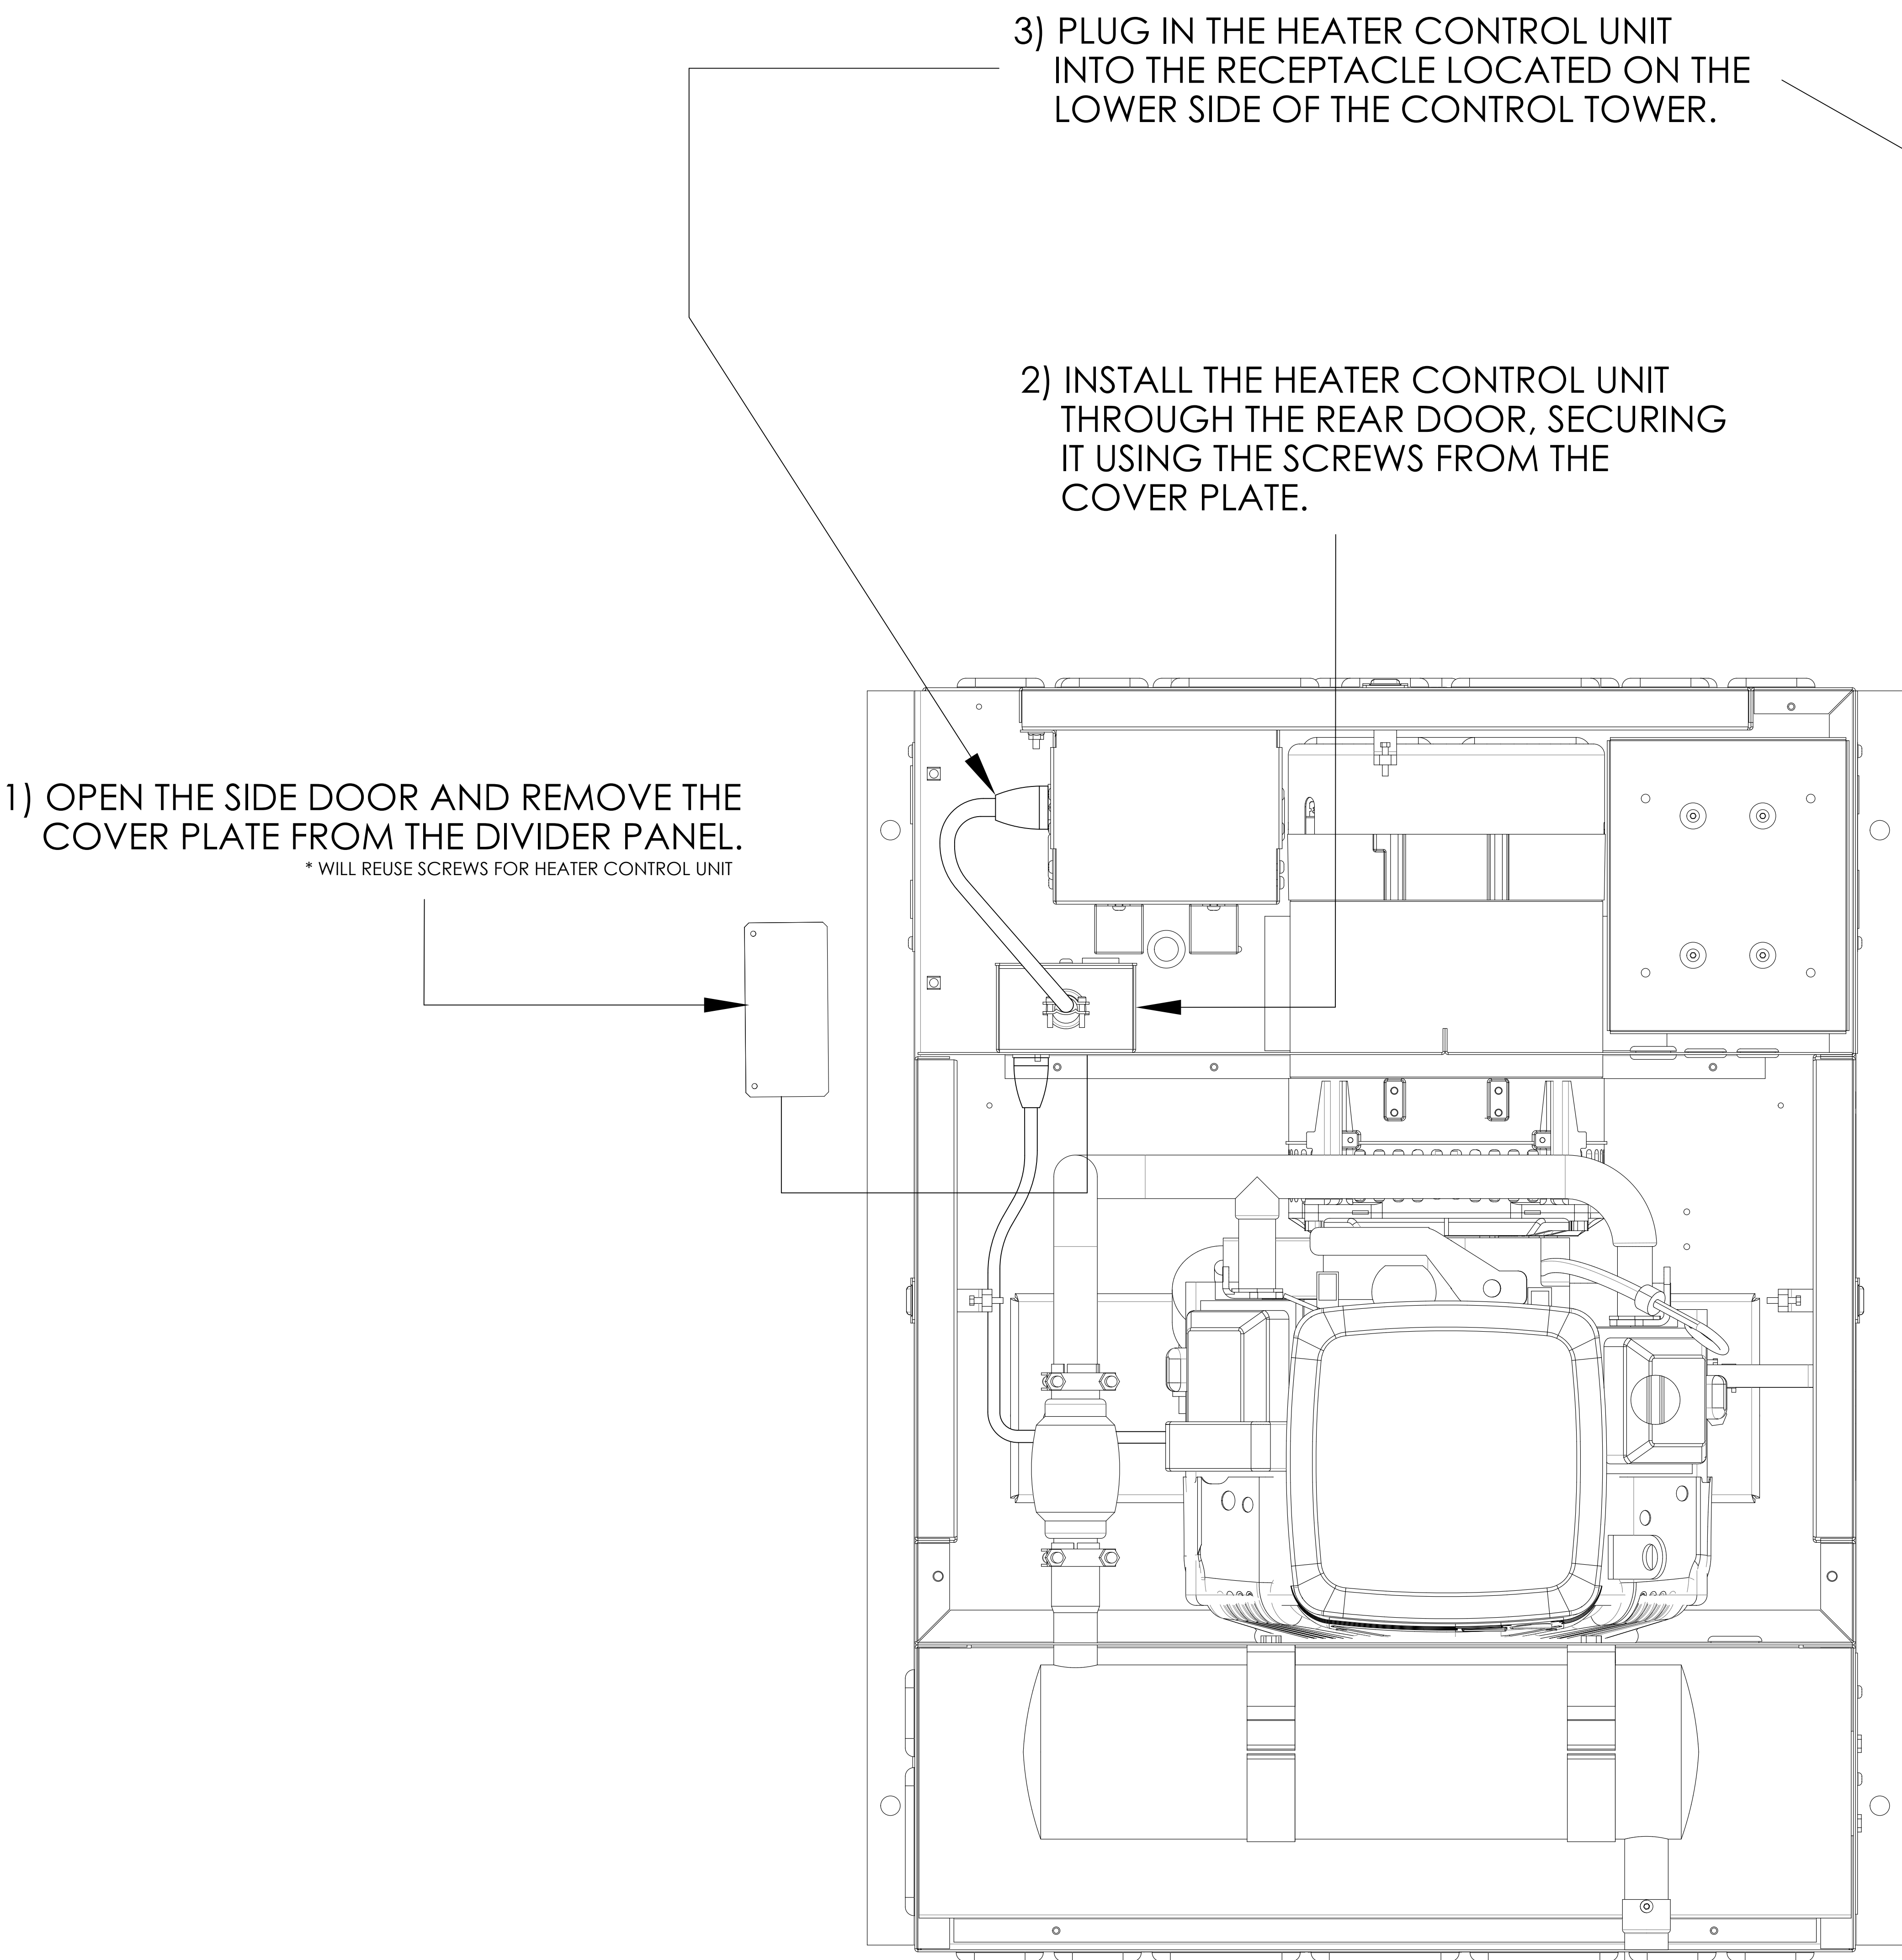



WARNING: REFILL OIL AND CHECK OIL LEVEL BEFORE STARTING GENERATOR AFTER INSTALL.

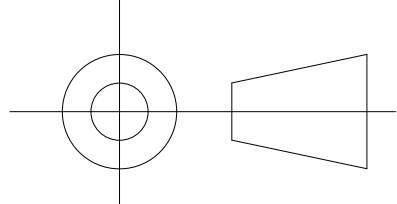

UNLESS OTHERWISE SPECIFIED			MACHINED SURFACE TEXTURE		ALL DIMENSIONS GIVEN IN INCHES WORK TO DIMENSIONS FLAT OUTSIDE VIEW SHOWN UNLESS NOTED -DO NOT SCALE-			
FRACTIONS 1 PLACE DEC. 2 PLACE DEC. 3 PLACE DEC.	.1 .015 .005	ANGULAR  1.5						
	DRAWN BY MVW	DATE 11/22/11	CHK'D BY	DATE	ENG APPR. CLR	DATE 11/30/11	SCALE	
THIS DRAWING CONTAINS PROPRIETARY INFORMATION BELONGING TO WINCO. UNAUTHORIZED USE IS PROHIBITED	MATERIAL:							
	FINISH:				TITLE: PSS8 OIL HEATER INSTRUCTION SHEET			
	ASSY:							
	MODEL:	ULPSS8B4W						
				PART NO.			300484-204	REV. A