

The LSC-04, 08 & 12 are standalone load shedding controller designed to work with any single or three phase generator and a broad range of connected load types controlled by DRY CONTACTS. The controller can be set for 2 different configurations as follows. **Normally open Mode** is selected when **SET UP=N.C.=OFF**. This mode is designed to work with loads that use a normally open state for control purposes like normally open contactors and control circuits like low voltage HVAC control wires. The **Normally Closed Mode** is selected when **SET UP N.C.=ON**. This mode is designed to work with normally closed devices like open frame normally closed relays. All LSC Controller outputs can now be set independently for NO or NC configuration.

Theory of operation

Operation: The internal program runs at power up. After startup all LSC Controller DRY-Contacts will revert to the Load Shedding state turning connected loads OFF, **Normally Open Configuration** will open Controller Dry Contacts and **Normally Closed Configuration** will close Controller Dry Contacts. All relays will remain in their active state (load disconnected) for the duration of the **Delay Shed** period set by DR01.


After DR01 times out the program will look at the value of **Gen Full Load** (DR02) to determine the maximum amps available. A comparator circuit will look at the anticipated load of **Relay1** (DR03) and the **Gen Actual Cur** reading, (this will always be determined by the higher of the 1-3 CT inputs).

When capacity is available **Relay1** will revert to the NORMAL STATE and turn the load on. After the load is restored the program will pause for the number of seconds set by input setting **Stabilize Time** (DR0A). After the delay period the program will compare the **GenActual Cur** reading, with **Gen Full Load** (DR02) and the anticipated load of **RELAY2** (DR04), if the comparator program determined capacity is available, **RELAY2** will revert to its normal state turning on load 2. This sequence is repeated for relays 3-4, 3-8 or 3-12 depending on the controller model installed. When the anticipated load would exceed the generator capacity the load will not turn on and the program will stop at that load until capacity is available.

Any time the load exceeds **90% of Gen Full Load** (DR02) the relays will begin to shed the loads from highest number relay (lowest Priority) to lowest number relay (relay 1 highest priority). The LSC-04 will shed relays 4,3,2,1 individually until the overload is removed. The LSC-08 will shed in groups of two loads 8 & 7, 6 & 5, 4 & 3 and 2&1 until the overload is removed and the LSC-12 will shed in groups of three 12,11,10 then 9,8,7 then 6,5,4 then 3,2,1, until the overload is no longer present.

The program will then repeat the process restoring and removing loads based on the load priority and the available capacity of the generator.

Typical Wiring Diagram

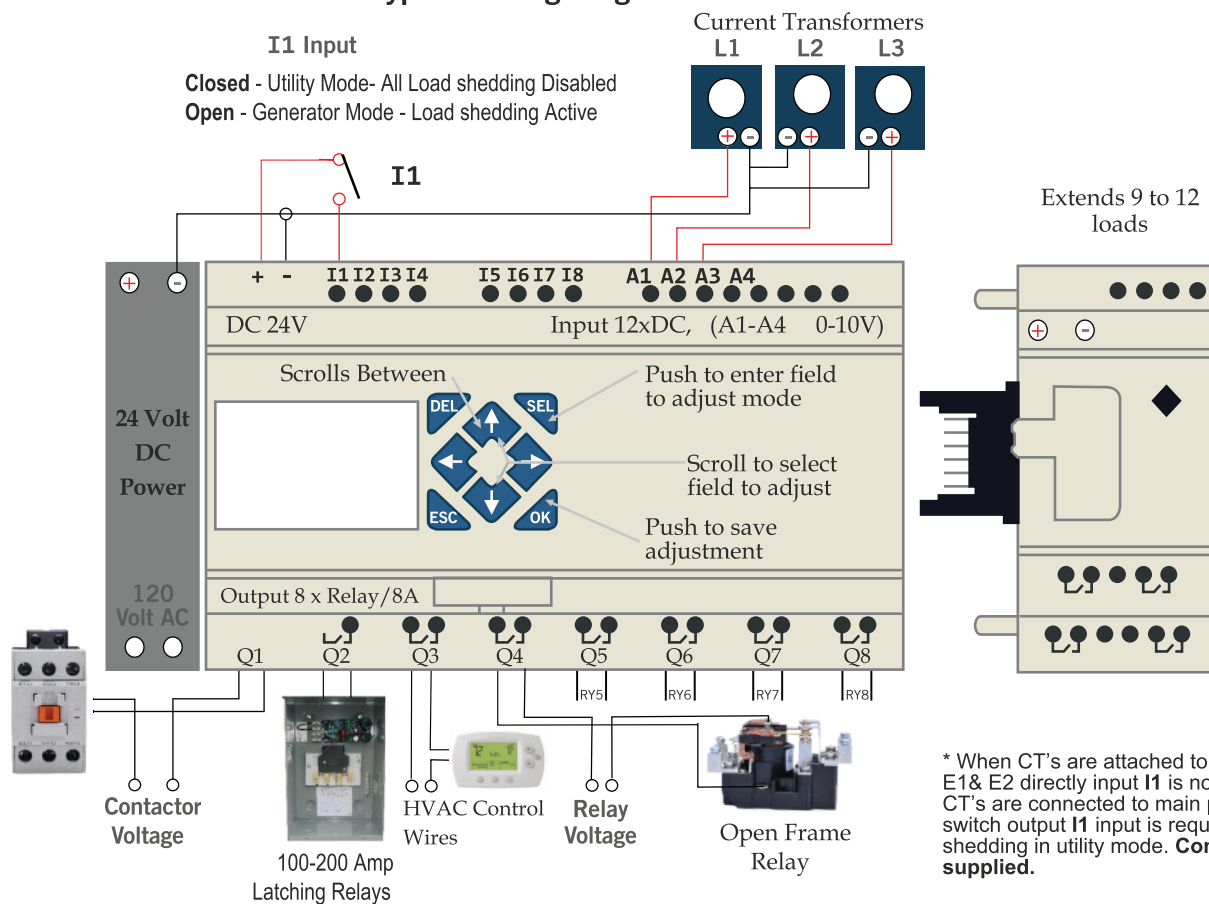

Technical Assistance Call: 800-648-6802 • After Hours Tech Support 443-600-3403


Important: Risk of electrical shock.

This device should only be installed by qualified personnel


PSP Products Inc | www.pspproducts.com | 800-648-6802
sales@pspproducts.com | Phoenix Drive | Manassas, VA 20110

Rev: 05-24-19


Adjusting the Controller Variable Inputs Using the Front Panel Buttons (All Versions)

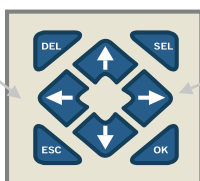


Left and Right Arrow Key: The left arrow key is used to scroll thru all screens. Scroll to the screen you want to adjust and use the following key sequences to make the required adjustments. Note: hold button for 1-2 seconds to advance to the next screen.

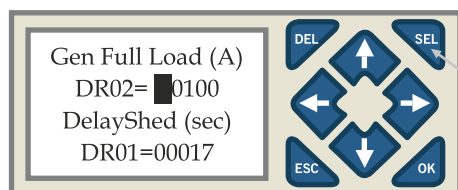


Entering The Programming Mode: The select key is used to enter the programming mode on any screen. After pressing the SEL key a flashing block cursor will appear.

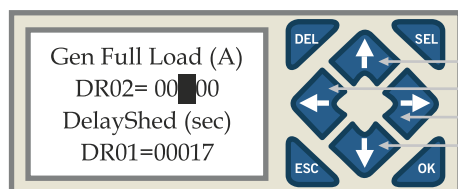


Move Cursor to the desired adjustment: Use the up, down, left and right keys to position the cursor on the digit to be adjusted.

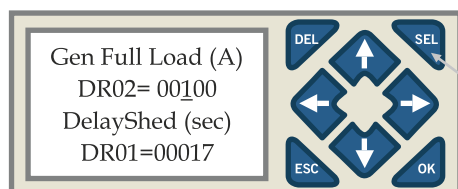


Push The Select Key Again: Press the select key again to enter the adjustment mode. The flashing block cursor will change to a flashing under-score.

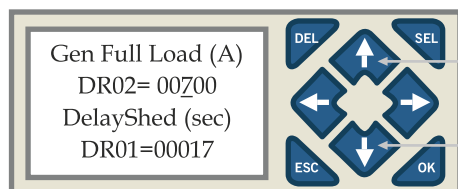

Adjust Value with UP-Down Keys: Use the up, down keys to adjust the value of the setting. You can scroll left and right to adjust multiple digits in the same adjustment field.

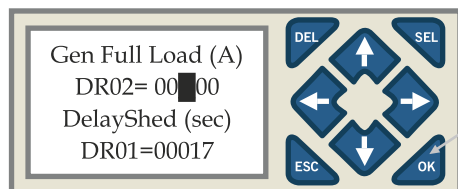


Press The OK Key To Save: Use the OK Key to save the adjustments made.

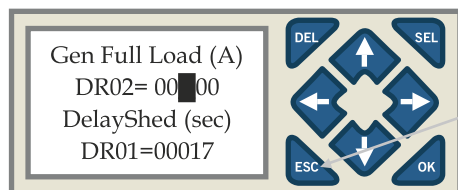

Press The ESC Key To Exit Programming Mode: Use ESC Key to exit the programming mode to enable scrolling between adjustment windows.

Programming Screens - LSC-04 Four Channel Load Shedding Controller

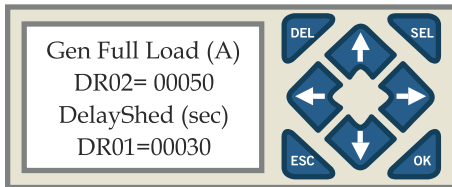


Gen Full Load (A)
DR02= 00050
DelayShed (sec)
DR01=00030

Screen 01

Generator Full Load DR02: Adjust to generators maximum amperage output in whole Amps. Adjust for standard running amps not In-Rush current.

DelayShed DR01: Delay period in seconds from the generator start up until the 1st load will be considered for restoration.

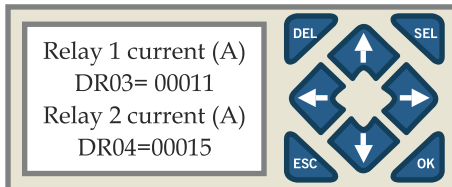


Relay 1 current (A)
DR03= 00011
Relay 2 current (A)
DR04=00015

Screen 02

Relay #1 Current DR03: Adjust to the estimated maximum amperage in whole amps for load #1

Relay #2 Current DR04: Adjust to the estimated maximum amperage draw in whole amps for load #2

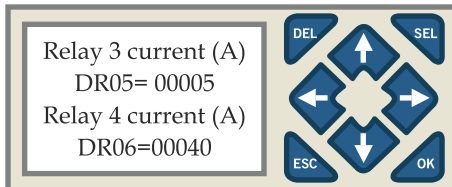


Relay 3 current (A)
DR05= 00005
Relay 4 current (A)
DR06=00040

Screen 03

Relay #3 Current DR05: Adjust to the estimated maximum amperage draw in whole amps for load #3

Relay #4 Current DR06: Adjust to the estimated maximum amperage draw in whole amps for load #4

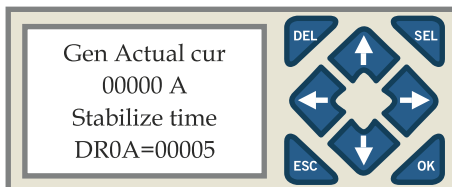


Gen Actual cur
00000 A
Stabilize time
DR0A=00005

Screen 04

Actual Real-Time Amps: Generator amp load as measured by the controllers highest reading on either CT

Stabilize time: Adjust the time delay time in seconds between the individual turn on of Relays 2-4

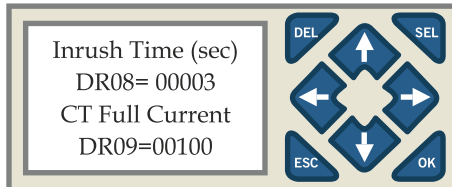

Inrush Time (sec)
DR08= 00003
CT Full Current
DR09=00100

Screen 05

Generator Inrush Delay DR08: Adjust allowable InRush delay time before load shedding will occur. Start at 3 seconds and adjust if needed.


CT Full Current DR09: For CT's with a 0-10 Vdc output set DR09 to maximum current rating of CT. For CT's with 0-5 Vdc output set DR09 to two times the value of the maximum current rating of the CT selected. Confirm calibration by placing a AMP Probe on the generator feeds and comparing the reading to "Gen Actual Cur" reading.



R1: OFF
R2: OFF
R3: OFF
R4: OFF

Screen 06


Real Time State of relays 1-4 (Fixed reading, not adjustable)

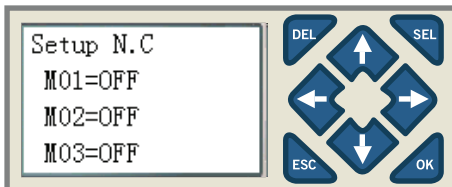

Setup N.C
M01=OFF
M02=OFF
M03=OFF

Screen 07

Normally Open/Normally Closed Setup Relay 1 & 2 - See NO/NC setup procedures on page 8

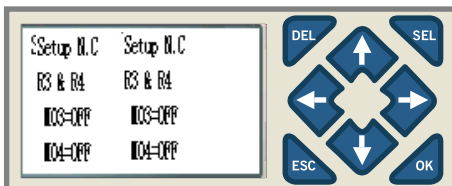


Setup N.C
M03=OFF
M04=OFF

Screen 08

Normally Open/Normally Closed Setup Relay 3 & 4 - See NO/NC setup procedures on page 8


Programming Screens - LSC-08 Eight Channel Load Shedding Controller

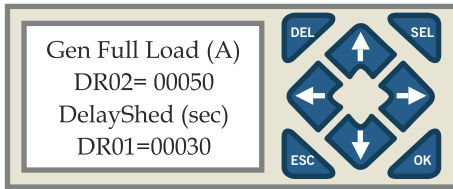

Screen 01

Generator Full Load DR02: Adjust to generators maximum amperage output in whole Amps. Adjust for standard running amps not In-Rush current.


DelayShed DR01: Delay period in seconds from the generator start up until the 1st load will be considered for restoration.

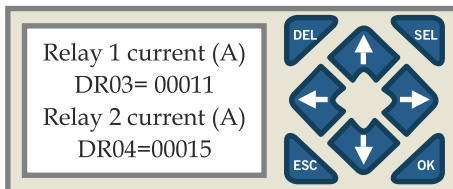

Screen 02

Relay #1 Current DR03: Adjust to the estimated maximum amperage in whole amps for load #1


Relay #2 Current DR04: Adjust to the estimated maximum amperage draw in whole amps for load #2

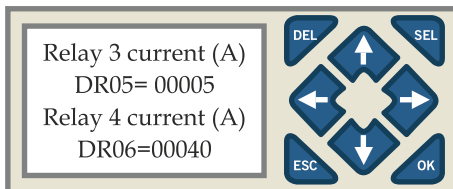

Screen 03

Relay #3 Current DR05: Adjust to the estimated maximum amperage draw in whole amps for load #3


Relay #4 Current DR06: Adjust to the estimated maximum amperage draw in whole amps for load #4

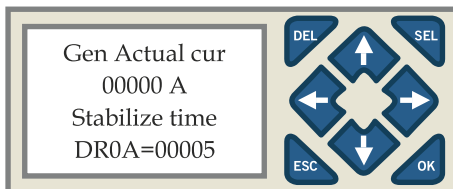

Screen 04

Actual Real-Time Amps: Generator amp load as measured by the controllers highest reading on either CT


Stabilize time: Adjust the time delay time in seconds between the individual turn on of Relays 2-4

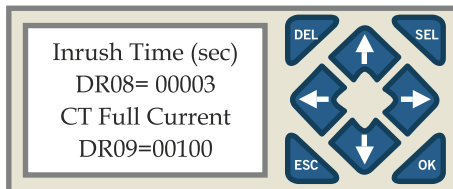

Screen 05


Generator Inrush Delay DR08: Adjust allowable InRush delay time before load shedding will occur. Start at 3 seconds and adjust if needed.

CT Full Current DR09: For CT's with a 0-10 Vdc output set DR09 to maximum current rating of CT. For CT's with 0-5 Vdc output set DR09 to two times the value of the maximum current rating of the CT selected. Confirm calibration by placing a AMP Probe on the generator feeds and comparing the reading to "Gen Actual Cur" reading.

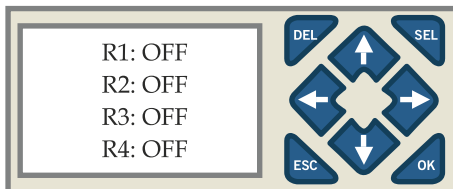

Screen 06


Real Time State of relays 1-4 (Fixed reading, not adjustable)

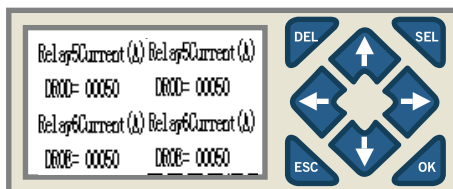

Screen 07

Relay #3 Current DR05: Adjust to the estimated maximum amperage draw in whole amps for load #5

Relay #4 Current DR06: Adjust to the estimated maximum amperage draw in whole amps for load #6

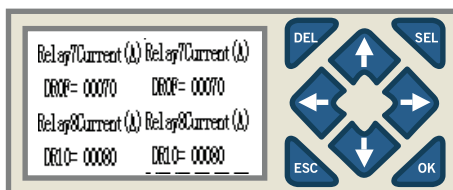

Screen 08

Relay #3 Current DR05: Adjust to the estimated maximum amperage draw in whole amps for load #7


Relay #4 Current DR06: Adjust to the estimated maximum amperage draw in whole amps for load #8

Programming Screens - LSC-08 Eight Channel Load Shedding Controller - Continued




Screen 07

Real Time State of relays 5-8 (Fixed reading, not adjustable)

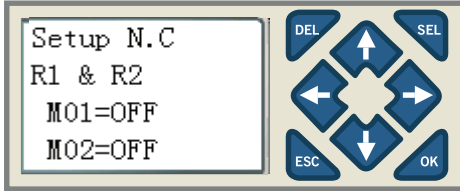


Screen 08

Normally Open/Normally Closed Setup Relay 1 & 2 - See NO/NC setup procedures on page 8

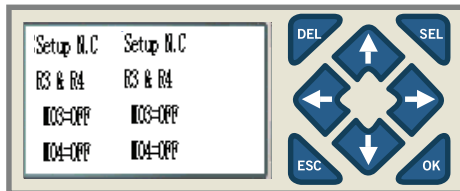


Screen 09

Normally Open/Normally Closed Setup Relay 3 & 4 - See NO/NC setup procedures on page 8

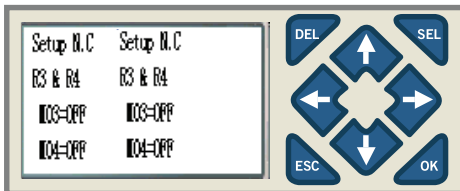

Screen 10


Normally Open/Normally Closed Setup Relay 5 & 26- See NO/NC setup procedures on page 8

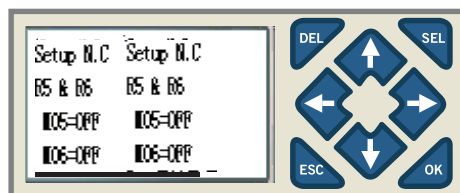

Screen 11

Normally Open/Normally Closed Setup Relay 7 & 8 - See NO/NC setup procedures on page 8


Programming Screens - LSC-12 Twelve Channel Load Shedding Controller

Gen Full Load (A) DR02= 00050 DelayShed (sec) DR01=00030	
---	---

Screen 01

Generator Full Load DR02: Adjust to generators maximum amperage output in whole Amps. Adjust for standard running amps not In-Rush current.


DelayShed DR01: Delay period in seconds from the generator start up until the 1st load will be considered for restoration.

Relay 1 current (A) DR03= 00011 Relay 2 current (A) DR04=00015	
---	---

Screen 02

Relay #1 Current DR03: Adjust to the estimated maximum amperage in whole amps for load #1


Relay #2 Current DR04: Adjust to the estimated maximum amperage draw in whole amps for load #2

Relay 3 current (A) DR05= 00005 Relay 4 current (A) DR06=00040	
---	---

Screen 03

Relay #3 Current DR05: Adjust to the estimated maximum amperage draw in whole amps for load #3


Relay #4 Current DR06: Adjust to the estimated maximum amperage draw in whole amps for load #4

Gen Actual cur 00000 A Stabilize time DR0A=00005	
---	--

Screen 04

Actual Real-Time Amps: Generator amp load as measured by the controllers highest reading on either CT


Stabilize time: Adjust the time delay time in seconds between the individual turn on of Relays 2-4

Inrush Time (sec) DR08= 00003 CT Full Current DR09=00100	
---	---

Screen 05

Generator Inrush Delay DR08: Adjust allowable InRush delay time before load shedding will occur. Start at 3 seconds and adjust if needed.


CT Full Current DR09: For CT's with a 0-10 Vdc output set DR09 to maximum current rating of CT. For CT's with 0-5 Vdc output set DR09 to two times the value of the maximum current rating of the CT selected. Confirm calibration by placing a AMP Probe on the generator feeds and comparing the reading to "Gen Actual Cur" reading.

Relay5Current (A) Relay5Current (A) DR0D= 00050 DR0D= 00050 Relay6Current (A) Relay6Current (A) DR0E= 00050 DR0E= 00050	
--	---

Screen 06

Relay #5 Current DR0D: Adjust to the estimated maximum amperage draw in whole amps for load #5


Relay #6 Current DR0E: Adjust to the estimated maximum amperage draw in whole amps for load #6

Relay7Current (A) Relay7Current (A) DR0F= 00070 DR0F= 00070 Relay8Current (A) Relay8Current (A) DR10= 00080 DR10= 00080	
--	---

Screen 07

Relay #7 Current DR0F: Adjust to the estimated maximum amperage draw in whole amps for load #7

Relay #8 Current DR010: Adjust to the estimated maximum amperage draw in whole amps for load #8


Relay9Current (A) Relay9Current (A) DR11= 00090 DR11= 00090 Relay10Current (A) Relay10Current (A) DR12= 00100 DR12= 00100	
--	---

Screen 08

Relay #9 Current DR05: Adjust to the estimated maximum amperage draw in whole amps for load #7

Relay #10 Current DR06: Adjust to the estimated maximum amperage draw in whole amps for load #8


Programming Screens For the LSC-12 Controller -Continued

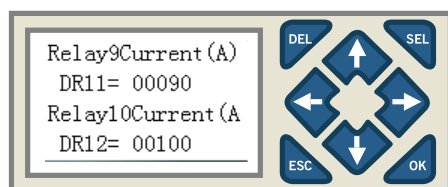

Screen 07

Relay #9 Current DR11 Adjust to the estimated maximum amperage draw in whole amps for load #9


Relay #10 Current DR12 Adjust to the estimated maximum amperage draw in whole amps for load #10

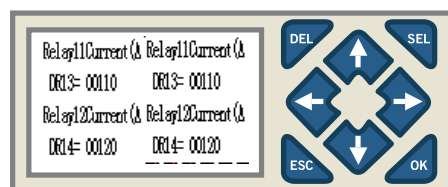

Screen 08


Relay #11 Current DR13 Adjust to the estimated maximum amperage draw in whole amps for load #11

Relay #12 Current DR14 Adjust to the estimated maximum amperage draw in whole amps for load #12

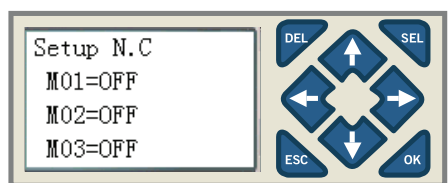


Screen 08

Normally Open/Normally Closed Setup Relay 1, 2 & 3 - See NO/NC setup procedures on page 8 or additional information.

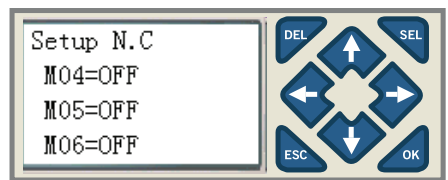


Screen 08

Normally Open/Normally Closed Setup Relay 4,5 & 6 - See NO/NC setup procedures on page 8 or additional information.

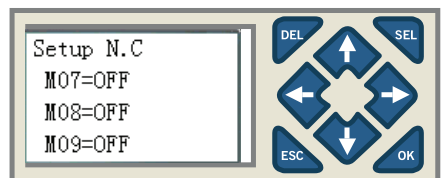

Screen 08

Normally Open/Normally Closed Setup Relay 7,8 & 9 - See NO/NC setup procedures on page 8 or additional information.

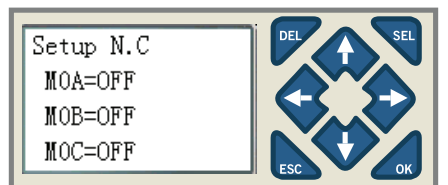

Screen 08

Normally Open/Normally Closed Setup Relay 10, 11 & 12 - See NO/NC setup. Note MOA = 10, MOB = Load 11 and MOC = Load 12 see procedures on page 8 for additional information.

Normally - Open & Normally-Closed Function Description

The LSC 4, 8 & 12 relay controllers now provide an option to individually select NO or NC dry-contact outputs for each relay. There are three or four additional screens (depending on model) for setting the required output.

Control signal explanations.

Normally Closed Mode: When the normally **CLOSED** mode is used the assumption is a **normally closed relay** will be used. This will require the relay contacts on the LSC controller to remain **OPEN** under normal (Non-Load Shedding State) and **CLOSED** when load shedding. All LSC relays that are set for “**Set Up N.C = ON**”, Will close the contacts at power-up to disconnect the load attached and open the LSC Controller contacts to connect the load.

Normally OPEN Mode: When the normally OPEN mode is used the assumption is a **normally OPEN contactor** or HVAC circuit will be controlled. This will require the relay contacts on the LSC controller to remain **CLOSED** under normal (Non-Load Shedding State) and **OPEN** when load shedding. All LSC relays that are set for **N.C OFF**, Will **OPEN** the dry contacts on the LSC controller at power-up to disconnect the loads and will close the contacts on the LSC controller to restore the load.